

P/N 5004-EAS911+ REV. B

January 2013

EQUIPMENT SERIAL NO. _____

SHIPMENT DATE _____

**MODEL EAS911+
EAS-CAP
USER'S GUIDE**

TFT, INC.

**1953 Concourse Drive
San Jose, CA 95131-1708**

TEL: (408) 943-9323

FAX: (408)432-9218

EMAIL: techsupport@TFTInc.com

CONTENTS

SECTION I - GENERAL INFORMATION

Paragraph	Title	Page
1.1	EQUIPMENT DESCRIPTION	1-1
1.2	SPECIFICATIONS	1-1
1.3	FCC COMPLIANCE STATEMENTS.....	1-4
1.4	WARRANTY INFORMATION	1-4
1.5	CLAIMS FOR DAMAGE IN SHIPMENT	1-4
1.6	TECHNICAL SUPPORT	1-4

SECTION II – PRE-INSTALLATION CHECKOUT

2.1	UNPACKING AND INSPECTION	2-1
2.2	FRONT PANEL INDICATORS	2-1
2.3	REAR PANEL CONNECTORS	2-2
2.4	INTERNAL JUMPERS	2-3

SECTION III - INSTALLATION

Paragraph	Title	Page
3.1	INTRODUCTION	3-1
3.2	MOUNTING AND CONNECTION (ANALOG INSERT)	3-1
3.3	MOUNTING AND CONNECTION (DIGITAL INSERT)	3-21

SECTION IV – THEORY OF OPERATION

4.1	INTRODUCTION	4-1
4.2	SYSTEM BLOCK DIAGRAM	4-1
4.3	DETECTION FRAMING CONTROL AND DETECTION VERIFICATION.....	4-1
4.4	DELAY AND SWITCH.....	4-2
4.5	DETECTION AND CONTROL	4-3
4.6	POWER SUPPLY	4-3

SECTION V – INSTALLATION

5.1	INTRODUCTION.....	5-1
5.2	ENCODER AUDIO OUTPUT LEVEL ADJUSTMENT.....	5-1

CONTENTS (Continued)

5.3	DECODER AUDIO INPUT LEVEL ADJUSTMENT.....	5-2
5.5	DIGITAL INTERFACE (RS232).....	5-2
5.6	DIGITAL INTERFACE (RS232).....	5-2
5.7	DIGITAL INTERFACE (RS485).....	5-3
5.8	THE ON-AIR RELAY	5-3
5.9	THE ALERT RELAY	5-3
5.11	SPEAKER INHIBIT	5-3
5.15	MOVING MESSAGE SIGNS	5-3

SECTION VI – OPERATION

6.1	INTRODUCTION	6-1
6.2	NETWORK CONNECTION	6-1
6.3	OPERATING MODE DETAILS.....	6-2
6.4	CAP SET UP MODE PROGRAMMING	6-3

SECTION VII – THEORY OF OPERATION

7.1	GENERAL DESCRIPTION AND PURPOSE	7-1
-----	---------------------------------------	-----

SECTION VIII – MAINTENANCE AND REPAIRS

8.1	INTRODUCTION.....	8-1
8.2	TOOL AND TEST EQUIPMENT REQUIREMENTS	8-1
8.3	ROUTINE MAINTENANCE	8-1
8.5	DIAGNOSTICS AND REPAIRS	8-2
8.7	TROUBLE SHOOTING	8-2
8.8	TFT SERVICE DEPARTMENT	8-3

APPENDICES

APPENDIX A - ENGINEERING DRAWINGS

APPENDIX B - PARTS LISTS

APPENDIX C - FIPS CODE PART A

APPENDIX C - FIPS CODE PART B

APPENDIX D - 911+ Menu Listing

APPENDIX E_F_ ORIGINATOR and EVENT CODES TRANSLATIONS

APPENDIX G - GLOSSORY

SECTION I

GENERAL INFORMATION

1.1 INTRODUCTION

This EAS911+ User's Guide is arranged in seven sections, as follows:

Section I: General Information

A general description of the EAS911+, its purpose, its specifications, general information on the FCC designator, FCC compliance statement, warranty and damage claim procedures, and technical support information.

Section II Getting To Know Your EAS911+ and Related Equipment

Overview of the various system components of the EAS911+ and related equipment. Control and Indicator functions, basic component functions, and their interconnection.

Section III: Pre-Installation Checkout

Some basic test methodology on the EAS911+ and its related equipment. The user should find it useful to perform the tests in this section with all the EAS911+ equipment on a lab bench.

Section IV: Programming The EAS911+

Detailed description of setup procedures of various EAS911+ system parameters, e.g. system date and time, station ORG and FIPS codes, Auto Forward events and locations selection, as well as enabling of optional features.

Section V: Installation

Instruction for installing and adjusting various system components of the EAS911+.

Section VII: Operation

Basic description of I/O control circuits.

Section VIII: Maintenance and Repair

Describes routine maintenance procedures and tools and equipment requirements.

1.2 EQUIPMENT DESCRIPTION

The EAS911+ is a combined Emergency Alert System (EAS) Encoder and Decoder and CAP (Common Alerting Protocol) receiver that enables broadcasters, cablecasters, and emergency managers to receive, store, forward, and originate Emergency Alert Messages as required by the FCC's EAS Rules. By using the EAS digital and CAP protocols prescribed by the FCC, the EAS911+ can function as a sentinel to alert operators to the receipt of emergency messages. Forwarding of only certain messages with a minimum of operator intervention can be achieved selectively, simply, and automatically.

The Encoder section of the EAS911+ is easily programmed to originate emergency alerts in the proper EAS protocol for specific geographic areas as small as one-ninth of an ordinary county. Although the EAS911+ Decoder stores all received messages, it only forwards and interrupts programming for those messages that meet users' specific instructions. These instructions, protected by two levels of security, relieve the operator of needing to make crucial decisions at critical times. Operators are guided by the EAS911+ Encoder section front panel layout to program event codes and locations. Emergency messages can then travel quickly and efficiently through the Emergency Alert System. Note: EAS messages with the Event code "EAN" cannot be generated by the normal EAS911+. If origination of an EAN message is needed, contact the factory beforehand.

The EAS911+ has two operating modes: automatic and manual. In automatic mode, only those messages which meet specific criteria are forwarded to the transmitter. With the exception of the required national level events, only messages "tagged" by management are allowed to interrupt programming. For minimal or unattended operation, the EAS911+ can perform all the critical emergency alert functions in automatic mode with the optional voice recorder option without operator assistance. For manual mode, no messages are forwarded, except for required national level messages, unless sent by an operator. All incoming messages are recorded, and their header information is stored and available for review or subsequent manual forwarding.

The digital voice message recording makes an incoming audio message, of up to two minutes, always available for the operator's immediate review. The operator can then decide whether to forward the last message received after review of the complete header and voice message. With the EAS911+ voice recorder it is not necessary for the

operator to transcribe or remember text. A touch screen display gives the operator instant access to the last ten messages either received or sent.

Six audio inputs and two RS-232 data inputs are standard on the EAS911+ to connect to receivers for the two required monitoring assignments of the EAS911+. An Internet/Ethernet connection is provided for connection to CAP servers.

A single audio output connects to external audio switching and distribution systems or to an optional TFT EAS 940A transmitter/program interrupt unit. This optional interrupt unit provides four balanced, isolated input and output channels that are switched to a combined common signal during an emergency message transmission. The common audio output provided by the EAS911+ contains all the Header, Attention Signal and EOM codes in proper EAS format for emergency alerting.

1.3 SPECIFICATIONS

The EAS911+ performance and physical specifications are listed in Table 1.3-1.

Table 1.3-1. EAS911+ Specifications

ENCODER SECTION

Protocol.....	FCC EAS codes, 520.83 bits per second. 2083.3 Hz mark and 1562.5 Hz space frequency, ASCII 8-bit characters
Attention Signal.....	853 and 960 Hz \pm 5 Hz. Default for 8 seconds, the FCC fixed duration.
PASSWORD Key.....	Enables 3-digit password entry for operator level . Additional 3-digit password required for program changes
EXIT Key.....	Interrupts operation in progress and returns system to Banner/Ready mode
PRACTICE Key.....	Allows closed-loop self-test for training and unit performance verification; inhibits on-air relay closure and transmission of data to COM ports
SEND HEADER Key.....	Activates transmit relay and sends pre-constructed header message
SEND EOM Key.....	Activates transmit relay and sends End Of Message code
EVENT Keys.....	12 keys for user-assigned events
WEEKLY TEST Key.....	Allows the EAS routine weekly test to be generated with a minimum of keystrokes
LOCATION(S) Keys.....	14-keys for user-assigned locations
SUBDIVISION Keys.....	Allows selection of 9 subdivisions within a location
DURATION Keys.....	User-entered duration of the event in prescribed interval
CONFIRM Keys.....	Confirms completion of each step in encoder programming
ON-AIR RELAY LED.....	Indicates that the On-Air relay is closed

DECODER SECTION

REVIEW Key.....	Allows review of last valid received message
LED Indicators.....	5 yellow LEDs to indicate incoming EAS channel, four analog and one digital. Two yellow LEDs to indicate AUTO or MANUAL forwarding mode of operation and one red LED to show ALERT relay status

OPERATION KEYS

- SPEAKER Key Turns speaker ON and OFF; monitors inputs
- PRINT Key Commands the printer to print the item shown on the LCD Screen
- ENTER, EXIT, UP Assist initial setup and programming of the equipment
and DOWN Keys

REAR PANEL

- Audio Inputs Six audio channels for FCC EAS or NOAA SAME protocol. Balanced or unbalanced,
10 k-Ohms, approx. 0.5 Vp-p to 2 Vp-p.
- Internet/Ethernet Inputs.....Two RJ-45 jacks
- Data Channels RS-232, 1200 baud ASCII, two for input and output
- Audio Output -10 to +10 dBm, 600-ohm balanced, XLR connector
- On-Air Relay Relay contact closure, energized when a selected message is decoded for automatic
forwarding or when the Encoder is activated
- Message Alert Relay Relay contact closure, energized when an EAS or CAP message is decoded
- RS-485 Twisted pair wiring connection for optional remote control/status module
- Speaker Inhibit Connects to external switch or relay contacts. Normal operation on contact open.
Speaker operation inhibited (muted) on contact closure
- COM1, COM2, COM3 Optional features when the COM Port Expander is installed
and COM4

MECHANICAL AND ENVIRONMENTAL

- Input Power 117 VAC \pm 10%, 60Hz, 40 watts maximum.
- Operating Temperature 0 °C to 50 °C
- Size 3.5" x 19" x 16"
- Net Weight Approximately 12 lbs.
- Shipping Weight Approximately 14 lbs.

1.4 Part 11 and Part 15 Compliance Statement

FCC Information:

FCC ID: BIOEAS911PLUS

The TFT EAS911+ is fully compliant with FCC Part 11.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

1.5 WARRANTY INFORMATION

The following warranty policy and limitations are applicable to the Model EAS911+ .

TFT, Inc. warrants each manufactured Model EAS911+ to meet published specifications and to be free from defects in material and workmanship. TFT will repair or replace, at its expense, for a period of one (1) year from the date of shipment of equipment, all parts which are defective from faulty material or workmanship. This Warranty does not cover equipment which has been misused and/or altered by the user. Units found to be defective during the warranty period shall be returned to TFT with transportation charges prepaid by the BUYER. It is expressly agreed that replacement and repair shall be the sole remedy of the SELLER with respect to any non-conforming equipment and parts thereof, and shall be in lieu of any other remedy available by applicable law. All returns to the factory must be authorized in advance by TFT. Upon examination by the factory, if any EAS911+ Equipment is found to be defective, the unit will be repaired and returned to the BUYER with transportation charges prepaid by TFT during the warranty period. Transportation charges for the Encoder and Decoder units found to be defective within the first 30 days of the warranty period will be paid both ways by TFT . Transportation charges for warranty returns wherein failure is found not to be the fault of TFT or one year after the delivery of the equipment shall be paid both ways by the BUYER. This warranty does not apply to equipment which, in the opinion of the SELLER, has been altered or misused.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. TFT IS NOT LIABLE FOR ANY CONSEQUENTIAL DAMAGES.

1.6 CLAIMS FOR DAMAGE IN SHIPMENT

Your instrument should be inspected and tested by the method given in Section II of this manual as soon as it is received. If the instrument is damaged in any way or fails to operate properly due to transportation damage, file a claim with the carrier or, if insured separately, with the insurance company.

1.7 TECHNICAL SUPPORT

OUR CUSTOMER SERVICE FOR EAS PRODUCTS IS AVAILABLE FROM 8:00AM TO 5:00PM PACIFIC TIME MONDAY THROUGH FRIDAY. PLEASE CONTACT US IF YOU NEED ASSISTANCE

TFT, Inc.
1953 Concourse Drive
San Jose, CA 95131-1731
Tel: (408) 943-9323 Fax: (408) 943-9218
Email: techsupport@TFTInc.com

SECTION II

GETTING TO KNOW YOUR EAS911+ AND RELATED EQUIPMENT

2.1 INTRODUCTION

This section provides an overview description of the EAS911+ equipment including Front Panel controls and indicators, Rear Panel connectors, options and other related peripheral equipment.

2.2 UNPACKING & INSPECTION

Upon receiving the equipment, inspect its shipping container and contents for shipping damage. Keep all packing material until equipment performance is confirmed.

If any of the equipment is damaged or fails to operate properly due to transportation damage, file a claim with the transportation company or, if insured separately, with the insurance company.

The following items should come with the equipment. Please notify TFT if any items are missing.

Description	Part No	Qty
Installation and Operation Guide	5004-EAS911+	1
Power Cord	1950-7742	1
Warranty Notice	3002-0002	1
Warranty Card	3001-0420	1
2-PIN Female Terminal Block Connector	1700-1203	2
6-PIN Female Terminal Block Connector	1700-5007	6
8-PIN Female Terminal Block Connector		1

2.3 THE FRONT PANEL

The EAS911+ Front Panel is a collection of input switches and touch screen display microphone input and USB port . Functionally they are as illustrated in Figure 2.3.1 and described in paragraphs 2.3.1.

2.3.1 Front Panel



Figure 2.3-1. 911+ EAS-CAP Front Panel

Table 2.3-1. Front Panel

ITEM	TITLE	FUNCTION
1	Touch screen display	Color, interactive display and control surface to provide information about operation and programming. Different pages offer EAS and CAP message information and control of aspects of the EAS911+
2	Microphone input	3.5mm jack. To provide an microphone audio input to record an emergency audio message for EAS message origination, substitution of an audio message from a received message, or to record the pre-message audio announcement required for cable system.
3	USB Port	USB 2.0 To provide connection to various USB devices, typically an external printer or storage device.

2.4 THE REAR PANEL

The EAS911+ Rear Panel has Input/Output connectors for EAS related or optional equipment. Figure 2.4 shows the Rear Panel Configuration.



Figure 2.4.1 Rear Panel

Table 2.4 Rear Panel Connectors

ITEM	TITLE	FUNCTION
1	CH 1, 2, 3, 4, 5, 6 AUDIO INPUT	Provides six balanced inputs for audio from EAS sources.
2	Program Audio IN/OUT LEFT	High level analog loop through

3	Program Audio IN/OUT Right	High level analog loop through
4	AES Audio	6-pin connector for AES/EBU digital audio loop through
5	Alert Relay	2-pin connector. 2-wire relay contact. Relay is normally open. Relay contacts close when a valid EAS message header is decoded.
6	ON-AIR RELAY	2-wire relay contact. Relay is normally open. Relay contacts close when an EAS message is transmitted.
7	GPOUT and GPIN	6-pin connector for control and status of external devices and switches
8	GPIO Connector	25-pin D-connector for control and status of external devices and switches
9	Accessory Port	25-pin D-connector for connection to TFT accessory devices, such as SDI/HDI video interrupt units

10	RS485, COM1 Port	9-pin D-connector. Bi-directional balanced RS-485 port for an optional TFT EAS 941A Remote Control/Status Module interface. Also serves as a tally input when external EAS 941A Remote Control/Status Modules are not used. See 4.26.1 for operation as a tally input
11	Character Generator, RS232	9-pin D-connector. Used for digital decoder input and output (RS-232, 1200 baud). Decodes, processes and forwards messages in standard ABAB...ZCZC...LLLL EAS protocol. Also used for RS-232, 1200 baud ASCII output of all decoded EAS headers in EAS ABAB...ZCZC... protocol. The protocol is preceded by an ASCII text translation of the header. The translation is prefixed with PRESELECT: or NONPRESELECT: to indicate whether the message passed the forwarding filter.
12	Sign, RS232	9-pin D-connector. Used for digital encoder output (RS-232, 1200 baud) of EAS protocol ASCII headers. Outputs all received and transmitted headers in standard ABAB...ZCZC...LLLL EAS protocol, as well as the three EOMs (ABAB...NNNN).
13	COM 5	Software defined RS-232 port
14	COM 6	Software defined RS-232 port
15	RS-232	9-pin D-connector.
16	USB	USB 2 for connection to external devices such as printer or storage devices
17	Ethernet 0	For Internet/Ethernet connection to CAP server
18	Ethernet 1	Not presently supported (future availability)
19	AC Power Switch	
12	AC Power Input Socket	Recessed IEC connector for a standard U.S. 120 VAC, 60 Hz line cord.

2.5 OPTION

2.6 RELATED EQUIPMENT

The EAS911+ can accommodate various external equipment to comprise a complete Emergency Alert System. Some of this equipment is described in the following paragraphs.

2.6.1 TFT EAS 930A Multi-Module Receiver

The TFT Model 930A Receiver System is a separate, 1-3/4" rack-mount chassis. It can accommodate six different plug-in receiver types for four available slots:

- AM
- FM
- NOAA Weather Radio
- VHF LOW Public Safety
- VHF HIGH Public Safety
- UHF Public Safety

These receivers can be used as sources for the EAS911+ audio inputs. This allows a user to plug up to four different receivers, each with automatic switchover capability, into the chassis, then connect them to the EAS911+. There is one output per receiver. A separate data sheet is available for the TFT EAS 930A receiver.

2.6.2 TFT EAS 940A Program/Transmitter Interrupt Unit

The TFT Model EAS 940A Program transmitter Interrupt unit interrupts a station's audio program to insert an EAS Header and voice message. Normal program audio is resumed at the conclusion of the message.

The EAS 940A has four program inputs, an EAS audio input and four program outputs. During an EAS alert, the EAS audio is routed to all four program outputs. It uses internal audio relays, and it connects to ON-AIR relay contacts J106 and audio output J101 on the EAS911+ rear panel. The EAS 940A can be located up to 2,000 feet from the EAS911+.

2.6.3 TFT EAS 941A Remote Control/Status Module

The EAS 941A Remote Control/Status Module allows limited operation of the EAS911+ from a remote location. It duplicates certain major functions of the EAS911+ front panel. Interfacing via RS485 single twisted pair wiring to the EAS911+, the EAS 941A may be located at distances up to 2000 feet.

2.6.4 TFT EAS 943 Telephone Access Unit

The EAS 943 Telephone Access Unit allows public officials, emergency management officials, and authorized personnel to generate, review, and forward EAS messages using a Touch-Tone telephone. It provides the capability of making direct "over the air" voice patch or recording and playback of voice messages using the EAS911+'s internal digital voice recorder. The EAS 943 translates DTMF codes into data commands that are interpreted by the EAS911+ EAS-CAP.

2.7 PRE-INSTALLATION INFORMATION

Before installing your TFT EAS911+, you should be familiar with the requirements of Part 11 of the FCC rules, as amended.

2.7.1 Obtaining A Copy of the Operational Area/State Plan

The TFT EAS911+ is very flexible and can be adapted to your Operational Area/State Plan. To obtain a copy of the plan, contact your State's Emergency Coordinator or the broadcast representative for your operational area. Names of State and local contacts are available from the FCC website, www.fcc.gov.

2.7.2 Obtaining Monitoring Assignments

The EAS Rules require monitoring two stations in your area and the FEMA IPAWS-OPEN CAP server at <https://apps.fema.gov> or other approved CAP server detailed in your State's operational Area/State Plan. These stations are listed in the operational Area/State Plan and in the FCC Mapbook, which is also available from the FCC EAS office in Washington, D.C. In most, but not all cases, the FCC assigned stations will be AM or FM broadcast stations.

2.7.3 Optional/Additional Monitoring

In addition to the FCC assigned stations it may be desirable to monitor other sources and originators of emergency information who may transmit EAS protocol messages or CAP messages, such as NOAA Weather Radio and local government authorities.

2.8 PROGRAMMING WORKSHEET FORM

Completing the information on the following work sheet before programming the EAS911+ will greatly reduce the time required to program the Encoder/Decoder. The worksheet will also provide a convenient record should future re-programming be required.

PROGRAMMING WORKSHEET

FCC Monitoring Assignment, CH 1	_____	_____
	(Station)	(Frequency)
FCC Monitoring Assignment, CH 2	_____	_____
	(Station)	(Frequency)
FCC Monitoring Assignment, CH 3	_____	_____
	(Station)	(Frequency)
FCC Monitoring Assignment, CH 4	_____	_____
	(Station)	(Frequency)
FCC Monitoring Assignment, CH 5	_____	_____
	(Station)	(Frequency)
FCC Monitoring Assignment, CH 6	_____	_____
	(Station)	(Frequency)
CAP Server	https://apps.fema.gov	or

Setup Menu																																																						
Menu #	Description	Programmed Settings																																																				
3	DAYLIGHT SAVING?	DST: ENABLE ___ DST: DISABLE ___																																																				
2	SET STATION TIME ZONE	UTC ± ____ Hours																																																				
1	SET CURRENT DATE/TIME	MON DAY YR HR:MIN																																																				
4	SET STATION ORG CODE	EAS ___ CIV ___ WXR ___																																																				
5	SET STATION FIPS CODE	0SSCCC (see Appendix C) SS=State & CCC=County																																																				
6	SET STATION IDENTIFICATION CODE	Station Call Ltrs or other Identifier "_____"																																																				
7	SET ATTENTION SIGNAL DURATION	0-25 SEC (default= 8sec)																																																				
10	SELECT EVENTS TO AUTO FORWARD	<table border="0"> <tr> <td>ADR ___</td> <td>FRW ___</td> <td>HLS ___</td> <td>SVS ___</td> </tr> <tr> <td>AVA ___</td> <td>FFA ___</td> <td>LEW ___</td> <td>SPW ___</td> </tr> <tr> <td>AVW ___</td> <td>FFW ___</td> <td>LAE ___</td> <td>SMW ___</td> </tr> <tr> <td>BZW ___</td> <td>FFS ___</td> <td>NMN ___</td> <td>SPS ___</td> </tr> <tr> <td>CAE ___</td> <td>FLA ___</td> <td>TOE ___</td> <td>TOA ___</td> </tr> <tr> <td>CDW ___</td> <td>FLW ___</td> <td>NUW ___</td> <td>TOR ___</td> </tr> <tr> <td>CEM ___</td> <td>FLS ___</td> <td>DMO ___</td> <td>TRA ___</td> </tr> <tr> <td>CFA ___</td> <td>HMW ___</td> <td>RHW ___</td> <td>TRW ___</td> </tr> <tr> <td>CFW ___</td> <td>HWA ___</td> <td>RMT ___</td> <td>TSA ___</td> </tr> <tr> <td>DSW ___</td> <td>HWW ___</td> <td>RWT ___</td> <td>TSW ___</td> </tr> <tr> <td>EQW ___</td> <td>HUA ___</td> <td>SVA ___</td> <td>VOW ___</td> </tr> <tr> <td>EVI ___</td> <td>HUW ___</td> <td>SVR ___</td> <td>WSA ___</td> </tr> <tr> <td></td> <td></td> <td></td> <td>WSW ___</td> </tr> </table>	ADR ___	FRW ___	HLS ___	SVS ___	AVA ___	FFA ___	LEW ___	SPW ___	AVW ___	FFW ___	LAE ___	SMW ___	BZW ___	FFS ___	NMN ___	SPS ___	CAE ___	FLA ___	TOE ___	TOA ___	CDW ___	FLW ___	NUW ___	TOR ___	CEM ___	FLS ___	DMO ___	TRA ___	CFA ___	HMW ___	RHW ___	TRW ___	CFW ___	HWA ___	RMT ___	TSA ___	DSW ___	HWW ___	RWT ___	TSW ___	EQW ___	HUA ___	SVA ___	VOW ___	EVI ___	HUW ___	SVR ___	WSA ___				WSW ___
ADR ___	FRW ___	HLS ___	SVS ___																																																			
AVA ___	FFA ___	LEW ___	SPW ___																																																			
AVW ___	FFW ___	LAE ___	SMW ___																																																			
BZW ___	FFS ___	NMN ___	SPS ___																																																			
CAE ___	FLA ___	TOE ___	TOA ___																																																			
CDW ___	FLW ___	NUW ___	TOR ___																																																			
CEM ___	FLS ___	DMO ___	TRA ___																																																			
CFA ___	HMW ___	RHW ___	TRW ___																																																			
CFW ___	HWA ___	RMT ___	TSA ___																																																			
DSW ___	HWW ___	RWT ___	TSW ___																																																			
EQW ___	HUA ___	SVA ___	VOW ___																																																			
EVI ___	HUW ___	SVR ___	WSA ___																																																			
			WSW ___																																																			

PROGRAMMING WORKSHEET (Continued)

Setup Menu			
Menu #	Description	Programmed Settings	
11	ADD LOCATIONS TO AUTO FORWARD (256 Locations Max)	_____ _____ _____ _____ _____ _____ _____ _____ _____ _____	_____ _____ _____ _____ _____ _____ _____ _____ _____ _____
13	ASSIGN, CHANGE OR VERIFY ENCODER EVENT KEYS Note: The card may be easily removed from the holder by using a folded piece of paper to push the card up from the bottom opening slot of the holder. Three folds approximatly .1 inch wide should be sufficient.	WEEKLY TEST _____ _____ _____ _____ _____	_____ _____ _____ STATEMENT WATCH WARNING CONFIRM
14	ASSIGN OR RE-ASSIGN ENCODER LOCATION KEYS (31 Locations Max per Key) Note: The card may be easily removed from the holder by using a folded piece of paper to push the card up from the bottom opening slot of the holder. Three folds approximatly .1 inch wide should be sufficient.	1. _____ 2. _____ 3. _____ 4. _____ 5. _____ _____ _____	6. _____ 7. _____ 8. _____ 9. _____ 0. _____ _____ SUBDIVISION CONFIRM
16	ENABLE INTERNAL VOICE RECORDER	VOICE RECORDER YES (NO)	YES ___ NO ___
17	SET REMOTE SIGN PROTOCOL (Requires 4-port COM Expander Module)	NO SIGN ___ BETA-BRITE ___ FRIEND SPRING ___ PRO-LITE V.1 ___ PRO-LITE V.2 ___	
18	ENABLE CHAR GEN INTERFACE (Requires 4-port COM Expander Module)	CHAR GEN I/F: OFF ___ STD ___ CODI ___ VDS ___ ALT1 ___ ALT2 ___	
19	REMOTE INTERFACE DEFINITION	NO INTERFACE ___ PC/DTMF INTERFACE ___	PASSWORD ___ _ _
23	ENABLE REMOTE CONTROL/STATUS MODULE INTERFACE	0 REM/TALLY OFF ___ 0 REM/TALLY ON ___ 1-16 REMOTE(S) ___	LOCAL ON AIR ___ REMOTE ON AIR ___

PROGRAMMING WORKSHEET (Continued)

Setup Menu		
Menu #	Description	Programmed Settings
24	SET ONE-BUTTON WEEKLY TEST OPTION	FAST RWT YES ____ FAST RWT NO ____ FAST RWT FIPS _____ _____ _____ _____
25	SET ALERT TIMEOUT (2-15 Minutes)	____ MINUTES
26	SET ONE-BUTTON MANUAL FORWARD	FAST FWD: YES ____ FAST FWD: NO ____
27	ENABLE C.G. TEXT FOR RWT (Requires 4-port COM Expander Module)	RWT CG: NO ____ RWT CG: YES ____
28	SET AUTO MODE TIMER	AUTO MODE: OFF ____ AUTO ON: 00:00 ____:____ AUTO MODE: ON ____ AUTO OFF: 00:00 ____:____
31	SET RANDOM REQUIRED WEEKLY TEST	RANDOM RWT: OFF ____ EARLIEST: 00:00 ____:____ RANDOM RWT: ON ____ LATEST: 00:00 ____:____
32	SET TRANSMIT DELAY TIME (0-10 Seconds)	DELAY ____ SECONDS

SECTION III

PRE-INSTALLATION CHECKOUT

3.1 INTRODUCTION

This section describes a functional bench test that should be performed before installing and programming the EAS911+ according to the procedures given in Section IV. By completing the pre-installation checkout, the user can be certain that the equipment is operating properly.


3.2 EAS 911+ QUICK START GUIDE (For user to become familiar with the display and function of the tabs)

3.2.1 Power Connection

Connect the EAS 911+ to a 120 VAC power source. Note: The unit may take as long as 30 seconds to boot up.

In case of a power failure, the unit will automatically power on after the power is restored. If it does not, push and hold the Power Switch on the rear of the unit on the rear of the unit above the power plug receptacle and hold it for one second and then release.

3.2.2 Operating Mode Overview

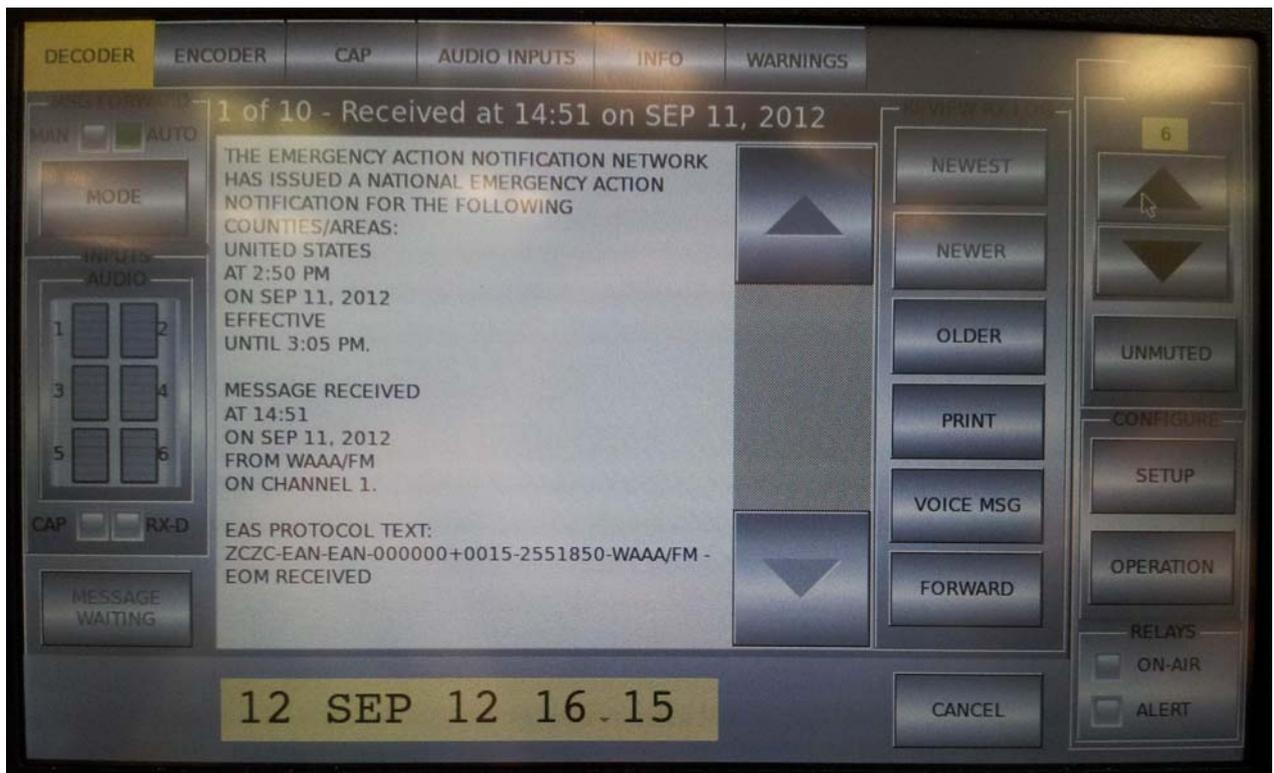

After the unit is plugged in it boots-up in approximately one minute and at that time it will display the default DECODER screen with the DECODER tab highlighted in yellow at the top left of the touch screen. The various tabs at the top of the touch screen turn yellow when touched and access different screens that are briefly explained below:

- | | |
|-------------|---|
| DECODER tab | Accesses the screen that displays all the decoder operation functions. |
| ENCODER tab | Accesses the screen for transmitting an EAS message |
| CAP tab | Accesses the screen that displays a real-time log of the last 100 CAP message received whether they match the FIPS Include list or not. |

AUDIO INPUTS tab	Displays a full-scale screen view of the 6 audio input channel levels on bar graphs. Each channel may be heard on the speaker separately.
INFO tab	Gives information about the SYSTEM as a whole, the EAS SERVER, and the CAP SERVER.
WARNINGS tab	Displays information messages should the unit not have received or transmitted a weekly or monthly test within eight days.

3.2.3 OPERATING MODE DETAILS

The touch screen has a permanent portion that essentially never changes. It includes the bottom row and the right edge column of the touch screen. The touch screen is also composed of the various tabs at the top of the screen which bring up various screens.

3.2.4 PERMANENT PORTION OF THE TOUCH SCREEN

The permanent portion of the touch screen includes the bottom row and a right edge column.

3.2.4.1 The bottom row includes a yellow window box and the CANCEL key. The yellow window box normally displays the date and time but can also display other messages about the status of the unit. The CANCEL key is used to cancel a particular function and return to the default DECODER tab.

3.2.4.2 The right column contains the SPEAKER up and down keys to adjust the speaker volume, the SPEAKER MUTE/ UNMUTED key, SETUP and OPERATION CONFIGURATION keys to gain access the the SETUP and OPERATION mode programming via password protection, and the ON-AIR and ALERT RELAYS status.

3.2.5 TOP PORTION TABS OF THE TOUCH SCREEN

3.2.6 DECODER TAB

This tab accesses the screen that displays all the decoder operation functions. It includes the following:

MODE key which toggles between the manual forward and the automatic forward modes via password protection.

AUDIO INPUTS with mini- bargraphs to display audio inputs from Audio Inputs channels 1 – 6. The CAP indicator displays incoming CAP messages, and the RX-D indicator displays input on the COM 5 1200-baud data channel.

MESSAGE WAITING key which flashes for each valid incoming EAS message. Touch the flashing MESSAGE WAITING key to acknowledge the incoming message and extinguish the key and to proceed with other DECODER functions.

RX LOG window shows the last valid or duplicate alert decoded.

REVIEW RX LOG keys include the NEWEST, NEWER, and the OLDER keys for accessing the last 10 received EAS messages be they valid, duplicate, or expired.

PRINT key to allow printing of the message displayed in the RX LOG window to an external printer via the front or rear USB port.

VOICE MSG key to permit the previewing of the voice message for the alert shown in the RX LOG.

The EAS 911+ is capable of recording and storing ten distinct voice messages, one for each of the ten alerts in the RX LOG messages.

FORWARD key to permit manual forwarding, with password protection, or one-button forwarding, without password protection, of a valid alert as long as the time duration of the incoming message has not expired.

3.2.2 ENCODER TAB

This tab accesses the screen that displays all the encoder operation functions. It includes the following:

PRACTICE key to allow the user to send a practice RWT or OTHER alert without engaging the ON-AIR RELAY or activating the character generator interface. To send a practice alert, touch the PRACTICE key first, followed by touching either the RWT key or the OTHER key.

RWT key to allow the user to send a one-button or (Fast RWT) if this feature has been programmed and enabled.

OTHER key to allow the user to manually encode and send an alert other than RWT.

TX LOG window shows the last alert transmitted.

REVIEW TX LOG keys include the NEWEST, NEWER, and the OLDER keys for accessing the last 10 transmitted EAS messages.

PRINT key to allow printing of the message displayed in the TX LOG window to an external printer via the front or rear USB port.

3.2.3 CAP TAB

This tab accesses the screen that displays a real-time log of the last 100 CAP messages received regardless whether they match the FIPS Include list or not. It also includes the following:

CAP LOG window to show the last CAP message decoded. A lengthy messages may be accessed by using the up and down scroll keys.

REVIEW CAP LOG keys include the NEWEST, NEWER, and the OLDER keys for accessing the last 100 received CAP messages received.

PRINT key to allow printing of a CAP message displayed in the CAP LOG window to an external printer via the front or rear USB port.

VOICE MSG key to permit preview of the voice message for the alert shown in the CAP LOG window. If the Enable Text-to-Speech On Forwarded Messages function is enabled, a text-to-speech conversion of approximately one minute will take place if the VOICE MSG key is touched to preview a message before sending it; otherwise, the text-to-speech conversion will take place just before the header is transmitted for manual forwarding or at the beginning of an auto forward.

FORWARD key to permit manual forwarding, with password protection, or one-button forwarding, without password protection, of a valid message so long as the time duration has not expired.

VIEW XML SOURCE key, if touched, to permit viewing of the current CAP message displayed in the CAP LOG.

3.2.7 AUDIO INPUTS TAB

Accesses the screen that displays a full scale screen view of the 6 Audio Input Channel levels on 6 individual bar graphs.

By touching the respective CH key, a channel's audio can be heard on the speaker provided the speaker mute key is not set to MUTE and the speaker volume is not set to 0.

3.2.8 WARNINGS TAB

This tab displays informational messages should the unit not have received or transmitted a test within eight days. Should a warning message be issued, a flashing WARNING WAITING key will flash next to the lower yellow window box. Touch this key to acknowledge and extinguish it.

3.3 TEST WITH ANCILLARY EQUIPMENT

3.3.1 Test With EAS 930A Multi-Module Receiver

Connect the Audio Output of the EAS 930A Multi-Module Receiver to the EAS911+ Channel 1 Audio Input at CH 1 of the EAS911+ Rear Panel. Press the SPKR key and listen to the EAS 930A broadcast Audio Output through the EAS911+ speaker.

At this time it may be convenient to set the audio input levels to the EAS911+. Use an oscilloscope or audio voltmeter to set the input voltages to approximately 1.5 Volt peak-to-peak.

3.3.2 Test with EAS 940A Program/Transmitter Interrupt Unit

Refer to the instructions for the EAS 940A Program/Transmitter Interrupt Unit.

3.3.3 Test with EAS 941A Remote Control Status Module

Refer to the instructions for the EAS 941A Remote Control/Status Module

3.4 TESTING THE DIGITAL VOICE RECORDER

Connect the EAS 930A Multi-Module Receiver or any other audio source to the EAS911+ Channel 1 Audio Input at CH 1 of the EAS911+ Rear Panel.

Enter the primary and setup passwords by pressing the Front Panel keys in the following order:

Press **PASSWORD** The screen will read **PASSWORD?** And the LOCATION(S) numeric keys will illuminate.

Press 9,1,1
(or Primary Password) The screen will read **SELECT EVENT** and the EVENT keys will flash.

Press **PASSWORD** The **TOUCH SCREEN** will read **PASSWORD?** And the **LOCATION(S)** numeric keys will illuminate.

Press **9,1,2** The **TOUCH SCREEN** will read **SETUP MENU** before changing to read **1. SET CURRENT DATE/TIME.**
(or Secondary Password)

Press the **Arrow** key until the **TOUCH SCREEN** Screen displays "**21. RECORD VOICE ANNOUNCEMENT**". Press **ENTER** twice to start the Digital Voice Recorder recording.

Press **EXIT** after recording is completed. The Digital Voice Recorder immediately plays back the announcement that was just recorded. Press **EXIT** to exit.

3.5 TESTING WITH A VIDEO CHARACTER GENERATOR

Refer to section 4.21 of this Guide and the Character Generator operation manual.

3.6 TESTING WITH A MOVING MESSAGE SIGN

Connect the 2-wire interface cable of the Moving Message Sign to the **SIGN RS-232** connector at the Rear Panel of the **EAS911+** (refer to section 5.15 of this Guide). Enable the **EAS911+ Remote sign** option by following the instructions outlined in section 4.20 of this Guide, and ensure the power supply for the sign is turned on.

Perform the Required Weekly Test as described in section 3.3, Encoder-to-Decoder Self Test. The EAS message will be displayed on the Moving Message Sign.

SECTION IV

PROGRAMMING THE EAS911+

4.1 INTRODUCTION

The EAS911+ can be programmed to customize its configuration and to automate its operation. EAS911+ programming techniques are described in this section. Programming the EAS911+ is very similar to programming its predecessor, the EAS911.

4.2 EAS MESSAGE OVERVIEW

A four-part message is used to activate the Emergency Alert System:

1. Preamble and EAS Header Codes
2. Two-tone audio Attention Signal*
3. Voice or text message*
4. Preamble and EAS End Of Message (EOM) Codes.

* Not used in the required weekly tests.

The message is shown pictorially in Figure 4.2-1.

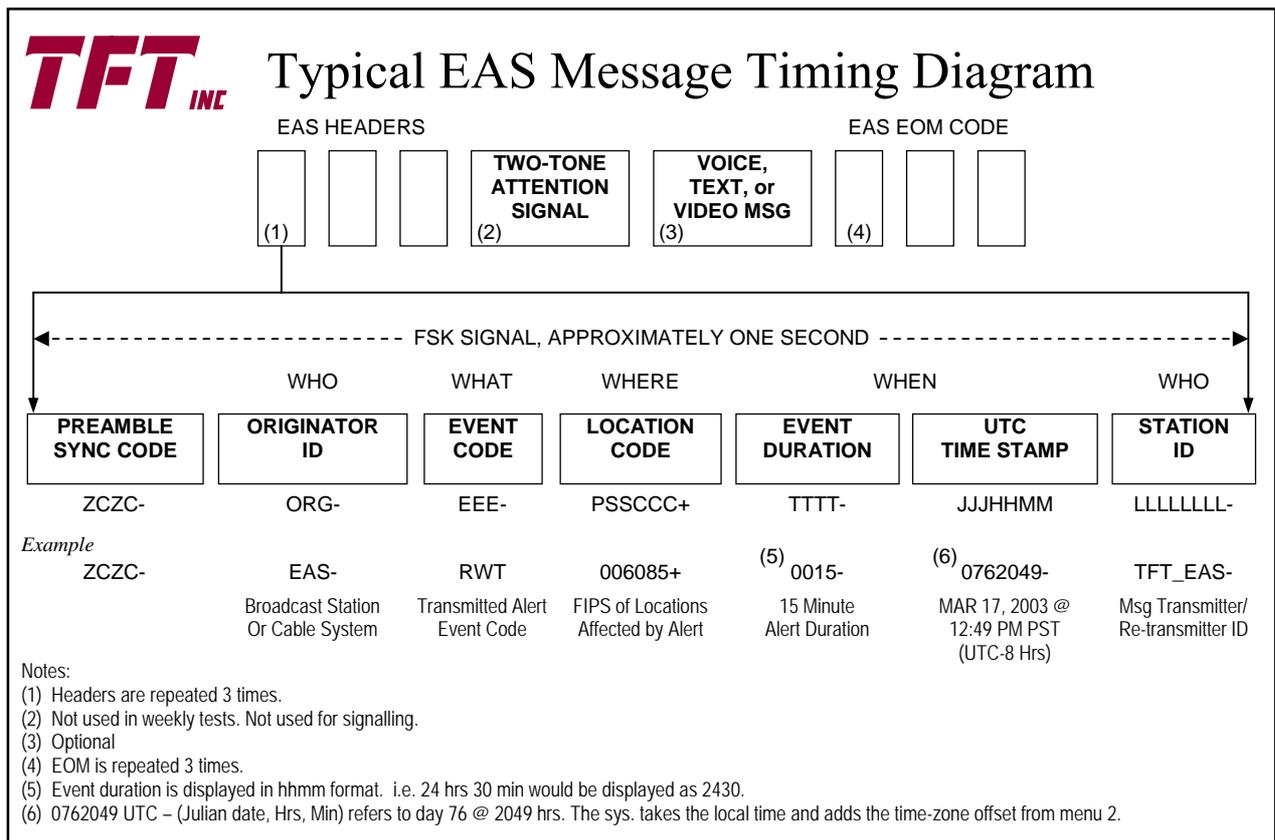


Figure 4.2-1 EAS Message Timing Diagram

The Preamble and EAS Header Codes are transmitted using Frequency Shift Keying (FSK) at a rate of 520.83 bits per second. Mark frequency is 2083.3 Hz, and Space frequency is 1562.5 Hz. Mark and Space times are 1.92 milliseconds. Characters are ASCII 7-bit as defined in ANSI X3.4-1977.

The Attention Signal is transmitted after the EAS header codes and is made up of two simultaneously transmitted tones. The fundamental frequencies of these tones are 853 and 960 Hz.

4.2.1 *The EAS Header*

The EAS header consists of seven segments:

1. Preamble Sync Code
2. Originator ID*
3. Event Code*
4. Location code (including county subdivision code)*
5. Event Duration
6. Time Stamp*
7. Station ID*

* Requires user programming before installation.

Details of these codes are described in the FCC Rules and Regulations Part 11, Subpart B, Section 11.31/EAS Protocol and in Appendix C of this guide.

The following paragraphs provide a user guide for setting the programmable segments of the EAS Header.

4.2.2 *Two-Tone Attention Signal*

The two-tone attention signal is the same as the old EBS: 853 Hz and 960 Hz tones. It is used only in the required monthly tests and activation of the EAS. It is not used in the required weekly test (RWT). It is no longer used for signaling.

The default duration of the two-tone signal is 8 seconds; however, its duration is user programmable up to 25 seconds. See Section 4.9 for details.

4.2.3 *Getting Started – Setup Menu Programming*

The display on the EAS911+ contains “soft” keys, color indications, and information to guide you through the setup and operation procedures. Programming the EAS911+ is very similar to programming its predecessor EAS911. It is very important to assemble the information in Section 2, Paragraph 2.8, before you begin. The programming follows the same order as shown in the Programming Summary Sheet. Programming the EAS911+ requires entry of a **Primary** Password and a **Setup** Password to allow access to the Setup Menu. The default passwords are 911 and 912, respectively. See Section 4.10 and 4.11 for information on changing the default passwords. Proceed as follows:

1. Enter the Primary password by pressing PASSWORD and entering 9, 1, 1, the 3-digit password, using the 0-9 numeric keys under LOCATION(S).
2. Press PASSWORD and enter 9, 1, 2, the 3-digit Setup password, using the 0-9 numeric keys under LOCATION(S).

Once the correct passwords have been entered, the LCD Screen will display **SETUP MENU** briefly then display the first menu item: **1. SET CURRENT DATE/TIME**

Use the Arrow keys ($\Delta \nabla$) to scroll through the Setup Menu items. The Setup Menu items are listed in Table 4.3-1. When a desired menu item is displayed, press ENTER to select it.

4.3 **Menu Item 1. SET CURRENT DATE/TIME**

NOTE: In order to properly set the Date/Time, program in the following order:

- A) Setup Menu 3. DAYLIGHT SAVING?
- B) Setup Menu 2. SET STATION TIME ZONE
- C) Setup Menu 1. SET CURRENT DATE/TIME

This menu sets the current date and local time.

Press the ENTER key while **1. SET CURRENT DATE/TIME** is displayed on the LCD Screen.

The LCD Screen will display the current date and time in 24-hour format.

EXAMPLE:

JAN 01 95 18:00

JAN will flash, indicating that it may be changed using the Arrow ($\Delta \nabla$) keys.

After finding the correct month with the Arrow keys, press ENTER to accept the displayed month. The Day, Year, Hour and Minute are set in the same manner. Clock seconds are not shown, but are zeroed when ENTER is pressed for selecting the desired minute.

Table 4.3-1. Setup Menu Items

Menu Item	Refer to Manual Section
1. SET CURRENT DATE/TIME	4.3
2. SET STATION TIME ZONE	4.4
3. DAYLIGHT SAVING?	4.5
4. SET STATION ORG CODE	4.6
5. SET STATION FIPS CODE	4.7
6. SET STATION IDENTIFICATION CODE	4.8
7. SET ATTENTION SIGNAL DURATION	4.9
8. CHANGE PRIMARY PASSWORD	4.10
9. CHANGE SETUP PASSWORD	4.11
10. SELECT EVENTS TO AUTO FORWARD	4.13
11. ADD LOCATIONS TO AUTO FORWARD	4.14
12. VERIFY OR DELETE LOCATIONS TO AUTO FORWARD	4.15
13. ASSIGN, CHANGE OR VERIFY ENCODER EVENT KEYS	4.16
14. ASSIGN OR RE-ASSIGN ENCODER LOCATION KEYS	4.17
15. VERIFY/EDIT ENCODER LOCATION KEY ASSIGNMENT	4.18
16. ENABLE INTERNAL VOICE RECORDER	4.19
17. SET REMOTE SIGN PROTOCOL	4.20
18. ENABLE CHAR GEN INTERFACE	4.21
19. REMOTE INTERFACE DEFINITION	4.22
20. SET LCD CONTRAST	4.23
21. RECORD VOICE ANNOUNCEMENT	4.24
22. VERIFY VOICE ANNOUNCEMENT	4.25
23. ENABLE REMOTE CONTROL/STATUS MODULE INTERFACE	4.26
24. SET ONE-BUTTON WEEKLY TEST OPTION	4.27
25. SET ALERT TIMEOUT	4.28
26. SET ONE-BUTTON MANUAL FORWARD	4.29
27. ENABLE C.G. TEXT FOR RWT	4.30
28. SET AUTO MODE TIMER	4.31
29. RECORD ALERT VOICE MESSAGE	4.32
30. VERIFY ALERT VOICE MESSAGE	4.33
31. SET RANDOM REQUIRED WEEKLY TEST	4.34
32. SET TRANSMIT DELAY TIME	4.35

4.4 Menu Item 2. SET STATION TIME ZONE

This command permits setting the number of hours that must be added to local Standard Time to reach Universal Coordinated Time (UTC), also known as Greenwich Mean Time (GMT). Proceed as follows:

1. Use the Arrow keys to change to menu item 2.
2. Press the ENTER key while **2. SET STATION TIME ZONE** is displayed on the LCD Screen. The Arrow keys can be used to adjust the offset from -12 to +12 hours.
3. Press ENTER to accept the correct displayed UTC offset.

UTC offsets for the U.S. are listed in Table 4.3-2.

Table 4.3-2. UTC Offsets for the U.S.

TIME ZONE	UTC OFFSET
Eastern Standard Time	- 05 Hours
Central Standard Time	- 06 Hours
Mountain Standard Time	-07 Hours
Pacific Standard Time	-08 Hours
Alaskan Standard Time	-09 Hours
Hawaiian Standard Time	-10 Hours

Note

The UTC offset is always calculated with respect to standard time, not daylight saving time.

4.5 Menu Item 3. DAYLIGHT SAVING?

Daylight saving time starts at 2 a.m. standard time on the first Sunday in April and ends on the last Sunday in October at 2 a.m. daylight time. The EAS911+ automatically adjusts the local time for daylight saving time if enabled. Proceed as follows:

1. Press the ENTER key while **3. DAYLIGHT SAVING?** is displayed on the LCD Screen. The LCD Screen will then display **DST: ENABLE** or **DST: DISABLE**.
2. When the desired condition is displayed on the LCD Screen, press ENTER to accept it.

EXAMPLE:

DST: ENABLE appears on the LCD Screen. If necessary, press Arrow key Δ or ∇ to toggle to **DST: DISABLE**.

When the desired condition is displayed on the LCD Screen, press ENTER to accept it.

Recommended: Set for daylight saving time ENABLE.

4.6 Menu Item 4. SET STATION ORG CODE

The ORIGINATOR code for the station must be selected from Table 4.6-1:

Table 4.6-1 Originator Codes

ORG CODE	ORIGINATOR
CIV	Civil Authority
EAS	Broadcast Stations or Cable System
WXR	National Weather Service
PEP	PRIMARY ENTRY POINT

Proceed as follows:

1. Press the ENTER key while **4. SET STATION ORG CODE** is displayed on the LCD Screen. The LCD Screen will display the currently selected 3-character ORG code.

EXAMPLE:

EAS Broadcast Station or Cable System

As the Arrow keys are pressed, the LCD Screen will display the ORG codes available, and a description of each.

Press ENTER to select a displayed ORG code.

4.7 Menu Item 5. SET STATION FIPS CODE

The Federal Information Processing System (FIPS) code (See Appendix C of this Guide) consists of six digits:

PSSCCC.

P Defines a subdivision, and must be 0 for station FIPS identification.

SS Is a 2-digit State code.

CCC Is a 3-digit County code.

Press the ENTER key while **5. SET STATION FIPS CODE** is displayed on the LCD Screen.

The LCD Screen will display the currently selected station FIPS code.

EXAMPLE:

STATION: 006085

Flashing digits will prompt for entry of the 2-digit state code followed by the 3-digit county code. Use numeric keys 0-9 to enter FIPS code digits. The ∇ key will backspace; the Δ key will forward space. After the last digit is entered, the selected location will be displayed to prompt the operator to accept it. Press ENTER to accept the displayed FIPS code. Press EXIT to cancel an entry.

EXAMPLE:

006085 SANTA CLARA CA

The **006085** will be stationary and flashing; **SANTA CLARA CA** will scroll from right to left.

For the Cable Version of the EAS911+:

Press the SUBDIVISION key.

ZONE: ♦ *code* appears on the LCD, when code is ALL or 1 to 16.

Use the arrow keys (Δ ∇) to scroll through the list of 16 zones.

Select a zone for encoding by pressing the ENTER key. The presence of the ⌘ indicates that the zone is selected. Pressing the ENTER key will toggle the diamond (♦) to change the status of each zone.

Press EXIT to confirm and end.

4.8 Menu Item 6. SET STATION IDENTIFICATION CODE

This is the call sign of a broadcast station or other identification of a cable station, or NWS office transmitting or forwarding the message. This code is automatically affixed to all outgoing messages by the EAS encoder. It is limited to 8 characters.

1. Press the ENTER key while **6. SET STATION IDENTIFICATION CODE** is displayed on the LCD Screen.
The LCD Screen will display the currently selected identification code.

EXAMPLE:

“WTFT/FM “ is displayed on the LCD Screen.

W will begin flashing, indicating that it may be changed using the Arrow keys.

After finding the correct alphanumeric character with the Arrow keys, press ENTER to accept.

T will begin flashing, indicating that it may now be changed in the same way using the Arrow keys and the ENTER key to accept.

This procedure is repeated until all the characters have been updated.

4.9 Menu Item 7. SET ATTENTION SIGNAL DURATION

The attention signal is made up of 853 Hz and 960 Hz tones and is sent after the Headers. The duration of this signal is programmable from 0 to 25 seconds.

1. Press the ENTER key while **7. SET ATTENTION SIGNAL DURATION** is displayed on the LCD Screen.
The LCD Screen will display the currently selected Attention Signal duration.

EXAMPLE:

08 SECONDS is displayed on the LCD Screen with **08** flashing.

The Arrow keys increment (Δ) and decrement (∇) the duration in 1-second steps. Pressing ENTER accepts the indicated duration.

4.10 Menu Item 8. CHANGE PRIMARY PASSWORD

The primary password is used for Encoder access and consists of 3 digits. It is set to 911 at the factory and is configurable from 000 to 999.

Press the ENTER key while **8. CHANGE PRIMARY PASSWORD** is displayed on the LCD Screen.

The LCD Screen will display the current primary password.

EXAMPLE:

911 PRIMARY is displayed on the LCD Screen. The first digit, **9**, will begin flashing, indicating that it may be changed by pressing one of the numeric entry keys 0-9. After a digit is entered, the next digit will begin flashing. After all three digits have been entered, the entire password will flash, prompting for verification.

EXAMPLE:

911 VERIFY will be displayed, with **911** flashing. Press ENTER to accept; press EXIT to leave the password unchanged.

4.11 Menu Item 9. CHANGE SETUP PASSWORD

The *Setup* Password is used for Setup Menu access and consists of 3 digits. It is set to 912 at the factory and is configurable from 000 to 999.

Press the ENTER key while **9. CHANGE SETUP PASSWORD** is displayed on the LCD Screen.

The LCD Screen will display the current Setup password.

EXAMPLE:

912 SETUP is displayed on the LCD Screen, with **9** flashing. The Setup password may be changed in the same manner as the Primary password.

4.12 RECOVER LOST PASSWORD

If a changed password is lost or forgotten, it cannot be recovered; however, the default Primary and Setup passwords can be restored by entering the following key sequence when in Ready mode. Each of the following key entries will cause PRESS PASSWORD to appear in the LCD. **Do NOT press PASSWORD, but WAIT FOR THE DATE AND TIME TO RETURN before pressing the next key:**

Press CANCEL, EVENT CONFIRM, 4, 0, 8, 7, 2, 7, 7, 2, 7, 2, LOCATION(S) CONFIRM. (**Do This SLOWLY**)

You will hear a tone acknowledging restoration of the default passwords. The default Primary password is 911; the default Setup password is 912.

4.13 Menu Item 10. SELECT EVENTS TO AUTO FORWARD

EAS events may be selected for auto forwarding. When in Auto Mode, the event code contained in a header will be compared with the event codes selected for automatic forwarding to help decide whether the message should be forwarded.

In Auto Mode, priority EAN events will be forwarded automatically without delay. In Manual Mode, EAN events must be manually forwarded without delay by the operator.

Press ENTER while **10. SELECT EVENTS TO AUTO FORWARD** is displayed on the LCD Screen. The first EAS event will be displayed. The event will appear in a static display, the description will scroll.

EXAMPLE:

◆ ADR Administrative Message

The ◆ character indicates that the event has been selected for automatic forwarding. If the diamond is absent, the event has not been selected. The ENTER key selects or deselects an event.

The Arrow keys select the next event in alphabetical order. The ENTER key is again used to choose to forward the next displayed event. The process continues until all events have been defined. Press EXIT to end.

4.14 Menu Item 11. ADD LOCATIONS TO AUTO FORWARD

A list of locations to Auto Forward should be specified. When in Auto Mode, the location code contained in a header will be compared with the location codes selected for automatic forwarding to help decide whether the message should be forwarded. A maximum of 256 locations may be forwarded.

Press ENTER while **11. ADD LOCATIONS TO AUTO FORWARD** is displayed on the LCD Screen. The LCD Screen will display a location of 000000.

EXAMPLE:

FORWARD: 000000 appears on the LCD Screen.

Flashing digits prompt for entry of the 2-digit state and 3-digit county code. Use the numeric 0-9 keys to enter FIPS code digits. the ∇ key will backspace; the Δ key will forward space. When the last digit is entered, the selected location will be displayed for acceptance.

EXAMPLE:

006085 SANTA CLARA CA

The FIPS code will flash in a static display; a description of that location will scroll. Press ENTER to add the location displayed; press EXIT to reject it.

More locations may be added in the same manner. Duplicate locations are not permitted.

The Cable version of the EAS911+ has the capability of addressing additional zones through an RF modulator when used with the TFT cable in-home alerting device. Zone programming is described in Section 4.15 below.

4.15 **Menu Item 12. VERIFY OR DELETE LOCATIONS TO AUTO FORWARD**

This menu item permits verification or deletion of location codes previously selected for automatic forwarding.

Press ENTER while **12. VERIFY OR DELETE LOCATIONS TO AUTO FORWARD** is displayed on the LCD Screen.

The first of the locations selected for automatic forwarding is displayed on the LCD Screen. The FIPS code is shown in a static display, and a description of that location scrolls.

EXAMPLE:

◆ **006085 SANTA CLARA, CA** appears on the LCD Screen.

The ◆ indicates that this location has been selected for automatic forwarding. The ENTER key will toggle the diamond off/on, changing the status of each location. The Δ and ∇ keys can be used to scroll through the list.

Press EXIT after deleting locations to forward.

Press ENTER to accept changes to the list of locations to forward. If EXIT is pressed, no changes will be made.

Duplicate locations are allowed.

For the Cable Version of the EAS911+:

The cable version of the EAS911+ has the capability of addressing zones of a cable system through an RF modulator. TFT cable in-home alerting devices can be addressed at one of 16 zones and be selectively alerted by the modulator to Events specific to that zone. Any zone or combination of zones can be assigned to one of the first 20 FIPS codes to be auto forwarded.

In Setup Menu **12. VERIFY OR DELETE LOCATIONS TO AUTO FORWARD**, select the desired FIPS code, for example:

◆ **006085 SANTA CLARA CA** appears on the LCD.

Press the SUBDIVISION key.

ZONE: ◆ *code* appears on the LCD, when code is ALL or 1 to 16.

Use the arrow keys (Δ ∇) to scroll through the list of 16 zones.

Select a zone for auto forward by pressing the ENTER key. The presence of the ◆ indicates that the zone is selected. Pressing the ENTER key will toggle the diamond (◆) to change the status of each zone

Press EXIT to confirm and end.

4.16 **Menu Item 13. ASSIGN, CHANGE OR VERIFY ENCODER EVENT KEYS**

There are 11 encoder event keys that may be customized by assigning events appropriate to a station's broadcast area. Each key may be assigned either a defined EAS event code or an event code template based on the currently defined EAS event codes. An event code template may be used, along with the STATEMENT, WATCH, and WARNING keys, to encode an EAS event code when in Encoder Operational Mode. Note that the WEEKLY TEST key is pre-assigned with the EAS event code for the Required Weekly Test event (RWT) and cannot be changed. Access to certain event codes with national significance (for example EAN, EAT, NPT, NIC) is restricted.

Press ENTER while **13. ASSIGN, CHANGE OR VERIFY ENCODER EVENT KEYS** is displayed on the LCD Screen.

The Encoder event LEDs will begin flashing, and the LED screen will display **EVENT KEY?**

When an event key is pressed, the LED for that key will illuminate, and all other event key LEDs will extinguish. The LCD Screen will then prompt by displaying the event currently assigned to that event key. The EAS event code or an event code template will be shown in a static display, and a description of that event code or template will scroll. However, the LCD Screen will display **NOT ASSIGNED** if a previously unassigned event key is selected.

EXAMPLES:

RMT Required Monthly Test

CEM Civil Emergency

SVS Severe Weather Statement

TO? Tornado Template

Actual EAS event codes appear in the static display. The Arrow keys select the next EAS event code or event code template in alphabetical order. Press the ENTER key to select the currently displayed event. Other encoder event keys may then be assigned in an identical manner. After that particular key is assigned, all the event LEDs will begin flashing for the next encoder event key assignment in an identical manner.

To verify encoder EVENT key assignments, select an EVENT key as described above, then press EXIT after verifying the event or template assigned to that key.

4.17 Menu Item 14. ASSIGN OR RE-ASSIGN ENCODER LOCATION KEYS

Encoder LOCATION keys may be customized by assigning to them locations relevant to a station's broadcast area. A maximum of 31 locations may be assigned to each LOCATION key.

Press ENTER while **14. ASSIGN OR RE-ASSIGN ENCODER LOCATION KEYS** is displayed on the LCD Screen.

The encoder LOCATION LEDs will begin flashing, and the LCD Screen will display **LOCATION KEY?**

When a LOCATION key is pressed, the LED for that key will be lit, and all other encoder LOCATION key LEDs will be extinguished. A 000000 FIPS code will be displayed to serve as a starting point for assigning FIPS codes to the selected LOCATION key.

EXAMPLE:

FIPS 01: 000000

Flashing digits on the LCD will prompt for entry of the 1-digit subdivision code, the 2-digit state code followed by the 3-digit county code. Use the numeric keys 0-9 to enter FIPS code digits. The ∇ key will backspace; the Δ key will forward space. After the last digit is entered, the selected location will be displayed to prompt the operator to accept it. Press ENTER to accept the displayed FIPS code.

006085 SANTA CLARA

The FIPS code will flash in a static display; a description of the location will scroll. Press ENTER to accept the location displayed and add it to the list of locations assigned to the selected LOCATION key. Press EXIT to reject. If accepted, the LCD Screen will be updated.

Other FIPS codes may be assigned to the selected LOCATION key in the same manner. Press EXIT to end. The system will return to the Setup Menu after 31 FIPS codes have been assigned.

For cable versions zone programming in Setup Menu **14. ASSIGN OR RE-ASSIGN ENCODER LOCATION KEYS** is similar to that in Section 4.15 above. After all FIPS codes have been assigned to a Location key,

For the Cable Version of the EAS911+:

Press the SUBDIVISION key.

ZONE: ♦ *code* appears on the LCD, when code is ALL or 1 to 16.

Use the arrow keys (Δ ∇) to scroll through the list of 16 zones.

Select a zone for encoding by pressing the ENTER key. The presence of the ♦ indicates that the zone is selected for encoding. Pressing the ENTER key will toggle the diamond (♦) to change the status of each zone

Press EXIT to confirm and end.

4.18 **Menu Item 15. VERIFY/EDIT ENCODER LOCATION KEY ASSIGNMENT**

Permits a review of the locations previously assigned to the encoder LOCATION keys.

Press ENTER while **15. VERIFY/EDIT ENCODER LOCATION KEY ASSIGNMENT** is displayed on the LCD Screen.

The Encoder LOCATION key LEDs will begin flashing; the LCD Screen will display: **LOCATION KEY?** When a LOCATION key is pressed, the LED for that key will light, and all other Encoder LOCATION keys will extinguish. If the selected LOCATION key has not yet been assigned, the LCD Screen will display **NOT ASSIGNED!** briefly, and another LOCATION key may then be selected. If the selected LOCATION key has been assigned, the first location assigned to that key will be displayed on the LCD Screen. The FIPS code will be static and a description of that location will scroll.

EXAMPLE:

006085 SANTA CLARA CA

Use the Arrow keys to view other locations assigned to the LOCATION key. To verify another LOCATION key, press that key. Press EXIT to return to the Setup Menu.

To delete a FIPS code:

Select the FIPS code to be deleted with the Arrow (Δ ∇) keys.

Press CANCEL.

The LCD will display **DELETE FIPS?**

Press ENTER to delete, or:

Press EXIT to leave the FIPS unchanged.

4.19 **Menu Item 16. ENABLE INTERNAL VOICE RECORDER**

Verify the presence of the internal voice recorder.

Press ENTER while **16. ENABLE INTERNAL VOICE RECORDER** is displayed on the LCD Screen.

The LCD Screen will display **VOICE RECORDER: YES (NO)**.

YES indicates that the voice recorder is installed and enabled. **NO** indicates that the voice recorder is not installed or it is not enabled. Hardware will detect the presence of the voice recorder and automatically enable it if installed. This function can be used to enable or disable the voice recorder via software.

4.20 **Menu Item 17. SET REMOTE SIGN PROTOCOL**

The COM4 port on the 4-Port Communication Expander Option Module sends serial data to a remote electronic sign through a single twisted-pair interface using RS-232 levels. The protocol must be set for the particular electronic sign being used.

Press ENTER while **17. SET REMOTE SIGN PROTOCOL** is displayed on the LCD Screen.

The LCD Screen displays the name of the electronic sign manufacturer.

EXAMPLE:

FRIEND SPRING

Press the Arrow keys to view other protocols. Press the ENTER key to select the desired protocol when displayed. Press EXIT for no change.

4.21 **Menu Item 18. ENABLE CHAR GEN INTERFACE**

This command enables or disables the character generator interface.

The COM2 port on the Four Port Communications Expander Option Module sends serial data to remote character generators using RS-232 levels.

Press ENTER while **18. ENABLE CHAR GEN INTERFACE** is displayed on the LCD Screen.

The LCD Screen will display **STD**. It will then scroll the following: *Standard TFT I/F for BSS, Frontline, and D Co. EAS Systems*

The following six submenus are available:

CHAR_GEN_I/F:OFF

STD *Standard TFT I/F for BSS, Frontline, and D Co. EAS Systems*

CODI Direct Interface to CHYRON CODI

VDS Direct Interface to VDS 840

ALT1 Alternate TFT I/F for Trilithic EAS Systems

ALT2 Alternate TFT I/F for Next Level EAS Systems

Use the Arrow keys to select the desired submenu, then press ENTER to select the displayed setting.

If the TFT standard interface is enabled, a character generator must communicate properly in the TFT protocol in order for the EAS911+ to forward EAS alerts automatically. If the TFT interface is enabled and a character generator is not connected or communicating, all auto-forwarded messages will be aborted. A message can always be manually forwarded to allow the audio to be transmitted even if the character generator is not connected. If the CODI interface is enabled, messages will not be aborted if the CODI is not connected.

If the CODI interface is selected by pressing ENTER when CHYRON CODI I/F is displayed, you may use the arrow keys and ENTER to select the sub menus listed below. Again use the arrow keys to select the desired value and press ENTER to store the value. Press the EXIT key to move one level up in the menu selection process. The factory set default parameters are shown first in the menu listing below.

Note: Horizontal Phase, Subcarrier Phase and Key Delay should only be adjusted using the alignment procedures described in the Chyron CODI Operator Manual.

SET CHAR HEIGHT	Height = 5 (range is 1-7)
SET COLOR	Color:White (also Magenta, Blue, Cyan, Yellow, Green, Red, Black)
SET CRAWL SPEED	Speed = 2 (range is 1-6)
SET CRAWL COUNT	Crawl Count = 1 (range is 1-8)
SET DISPLAY LINE	Line = 50 (range is 30-160)
SET HORIZ PHASE	H Phase = 0 (range exceeds ± 90)
SET SUBCA PHASE	SubC Phase = 0 (range exceeds ± 90)
SET KEY DELAY	Key Delay = 0 (range is ± 10)

If the VDS interface is selected by pressing ENTER when VDS I/F is displayed, you may use the arrow keys and ENTER to select the submenus listed below. Again use the arrow keys to select the desired value and press ENTER to store the value. Press the EXIT key to move one level up in the menu selection process. The factory set default parameters are shown first in the menu listing below.

SET CHAR HEIGHT	Height = 3 (range is 1 to 4)
SET COLOR	Color:White (also Yellow Cyan, Green, Magenta, Red, Blue or Black)
SET CRAWL SPEED	Speed = 2 (range is 1-3)
SET CRAWL TIME	Time = 2 MIN (range is 1-9 min)
SET DISPLAY LINE	Line = 40 (range is 40-100)
SET VDS EDITOR	OFF (When ON, the ALERT RELAY will close during EAS transmission to control VDSs second COM port. The relay will stay closed until the VDS's timeout. When OFF, all operation is normal.)

4.22 **Menu Item 19. REMOTE INTERFACE DEFINITION**

The COM3 port on the Four-Port Communications Expander Option Module uses full duplex serial data to communicate with a remote telephone interface using RS-232 levels.

Press ENTER while **19. REMOTE INTERFACE DEFINITION** is displayed on the LCD Screen.

The following two submenus are available:

NO INTERFACE

PC/DTMF INTERFACE

When PC/DTMF interface is enabled, COM3 must be connected to the EAS 943 telephone interface.

4.23 **Menu Item 20. SET LCD SCREEN CONTRAST**

This menu item is used to set the LCD Screen contrast. There are 4 contrast levels (0 to 3), with 0 giving the least, and 3 giving the most contrast.

Press ENTER while **20. SET LCD CONTRAST** is displayed on the LCD Screen.

The LCD Screen displays the current LCD Screen contrast setting.

EXAMPLE:

LCD CONTRAST: 2 is displayed on the LCD Screen.

Press the Arrow keys to select other contrast settings. The LCD Screen will reflect the new contrast setting. Press ENTER to accept the displayed setting. Press EXIT for no change.

4.24 **Menu Item 21. RECORD VOICE ANNOUNCEMENT (for cable systems only)**

For cable pointer to details channel, an announcement may be prerecorded for later playback. To record the announcement, the Voice Recorder must be installed and enabled. Connect the audio source to the Channel 1 (CH1) audio input of J102 on the EAS911+ rear panel or connect a microphone to the 3.5 mm TRS jack on the front panel. The maximum announcement duration is 25 seconds.

Press ENTER while **21. RECORD VOICE ANNOUNCEMENT** is displayed on the LCD Screen.

The LCD Screen will display a bar graph of the signal level on CH1. The audio from CH1 will be heard through the speaker. Use the bar graph to adjust the input signal level. Press ENTER to begin recording. The LCD Screen will display the elapsed duration as the announcement is recorded.

EXAMPLE:

RECORDING: 01

Press EXIT to terminate recording. After the announcement has been recorded, it will automatically be replayed. Press EXIT to end.

4.25 **Menu Item 22. VERIFY VOICE ANNOUNCEMENT (for cable systems only)**

The prerecorded voice announcement can be played back from the Voice Recorder. The Voice Recorder must be installed and enabled and the announcement must have been recorded previously.

Press ENTER while **22. VERIFY VOICE ANNOUNCEMENT** is displayed on the LCD Screen.

The SPKR LED lights to allow adjustment of speaker volume.

The LCD Screen will display: **ANNOUNCEMENT: 25** (or the length of the recorded announcement in seconds).

The speaker will play back the prerecorded announcement.

The LCD Screen will count down as the announcement is replayed. Press EXIT to interrupt playback and return to the Setup Menu.

4.26 Menu Item 23. ENABLE REMOTE CONTROL/STATUS MODULE INTERFACE

The EAS911+ can communicate with a maximum of sixteen EAS Model 941 Remote Control/Status Modules.

Press ENTER while **23. ENABLE REMOTE CONTROL/STATUS MODULE INTERFACE** is displayed on the LCD Screen.

The number of Remote Control/Status Modules currently configured will be displayed on the LCD Screen.

EXAMPLE:

0 REMOTES

Use the Arrow keys to select the number of Remote Control/Status Modules connected to the EAS911+. Select 0 to disable. Press ENTER to set the number of remotes selected. Press EXIT for no change.

If one or more remotes are selected, the ON AIR RELAY of the EAS911+ can be activated locally or remotely. Use the arrow keys to select either **Local On Air** or **Remote On Air** and press ENTER. When **Local On Air** is selected, the On-Air relay for the EAS911+ closes **only** when the EAS911+ initiates an On-Air action. This permits independent On-Air control for individual stations when EAS 941A Remote Control/Status Modules are used with the EAS911+ in a multi-station application. When **Remote On Air** is selected, the On-Air relay for the EAS911+ closes when the EAS911+ or any connected EAS 941A Remote Control/Status Module requests an On-Air action.

4.26.1 Tally Mode Operation

In Auto Forward Mode, the RS-485 Remote Control and Status interface can be used as a Tally input when EAS 941A Remote Control/Status Modules are not used. To enable this mode, select 0 REM/TALLY ON from the Remote Control/Status Module menu (SETUP item 23). The mode is disabled by selecting 0 REM/TALLY OFF from the menu. Biasing the input as shown below in Figure 4-26-1 will permit a Normally Open tally contact to delay an Auto-forwardable message, then release it for forwarding with a momentary closure.

When viewing the rear of the EAS911+, pin 1 of J105 is on the left; pin 2 is on the right. The Alert Relay contacts, J107, can be used to notify the automation system that an alert has been received. If the tally contacts do not close, the alert will be forwarded automatically after 15 minutes. The +12V can be supplied externally, or is available on J103 pins 7 and 4 and on J104 pins 7 and 4.

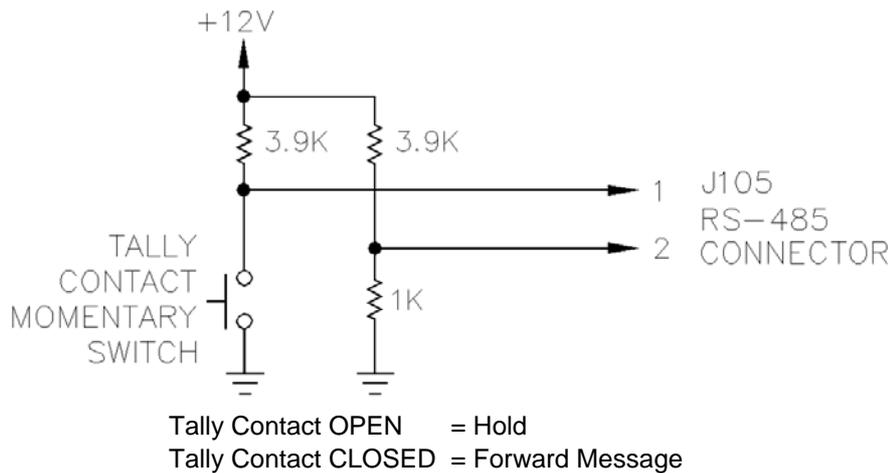


Figure 4.26-1. Tally Input External Biasing

4.27 Menu Item 24. SET ONE-BUTTON WEEKLY TEST OPTION

This menu item enables a One-Button Required Weekly Test to be transmitted without password protection. It also enables a One-Button Weekly Test from EAS 941A Remote Control/Status Modules connected to the EAS911+.

Press ENTER while **24. SET ONE-BUTTON WEEKLY TEST OPTION** is displayed on the LCD Screen. The LCD Screen will display **FAST RWT: YES (NO)**. Use the arrow keys to select Yes or No, then press ENTER to accept. See section 6.2.2 for details on sending the Required Weekly Test.

If YES is selected, the LCD Screen will display **ASSIGN RWT FIPS**. The default FIPS is 000000 UNITED STATES. If no other FIPS codes are desired to be transmitted with the One-Button Weekly Test Option, press EXIT to return to the Setup Menu.

If other FIPS codes are desired, press ENTER when **ASSIGN RWT FIPS** is displayed. The Station FIPS can now be replaced by a list of FIPS codes by using the numeric keys to enter the new FIPS codes. If the Station FIPS is one of the desired FIPS, it must be entered manually at this time. When a FIPS entry is complete, press ENTER to accept. When all FIPS codes have been entered, press EXIT to return to the **ASSIGN RWT FIPS** display.

To verify the FIPS entries use the Δ or ∇ key to display **VERIFY RWT FIPS**, press ENTER. Use arrow keys to display the other FIPS codes that were assigned. When verification is completed, press EXIT twice to return to the Setup Menu

For the Cable Version of the EAS911+:

Press the SUBDIVISION key.

ZONE: ♦ *code* appears on the LCD, when code is ALL or 1 to 16.

Use the arrow keys (Δ ∇) to scroll through the list of 16 zones.

Select a zone for encoding by pressing the ENTER key. The presence of the ♦ indicates that the zone is selected. Pressing the ENTER key will toggle the diamond (♦) to change the status of each zone

Press EXIT to confirm and end.

4.28 Menu Item 25. SET ALERT TIMEOUT

Press ENTER while **25. SET ALERT TIMEOUT** is displayed on the LCD. The LCD will display **2 MINUTES**. Use the arrow keys to select the desired Alert Timeout from 2 to 15 minutes, then press ENTER to accept. The Alert Timeout is used to terminate an alert sequence that did not conclude with a proper EOM (End of Message).

4.29 Menu Item 26. SET ONE-BUTTON MANUAL FORWARD

Press ENTER while **26. SET ONE-BUTTON MANUAL FORWARD** is displayed on the LCD. The LCD will display **FAST FWD: YES (NO)**. Use the arrow keys to select YES or NO, then press ENTER to accept. See section 6.4.5 for details on manually forwarding messages. CAUTION: One-Button Manual Forward bypasses password protection. This menu item also enables a One-Button Manual Forward from EAS 941A Remote Control/Status Modules connected to the EAS911+.

4.30 Menu Item 27. ENABLE C.G. TEXT FOR RWT

This menu item allows the user to enable or disable the text output to an external character generator for the Required Weekly Test.

Press ENTER while **27. ENABLE C.G. TEXT FOR RWT** is displayed on the LCD Screen. **RWT CG: NO** will be displayed. Use the Δ or ∇ key to select RWT CG: YES if desired. Press ENTER when the desired setting is displayed.

4.31 Menu Item 28. SET AUTO MODE TIMER

This menu item allows the user to program the EAS911+ to automatically switch between AUTO and MANUAL mode at selected times.

Press ENTER while **28. SET AUTO MODE TIMER** is displayed on the LCD Screen. **AUTO MODE: OFF** will be displayed. Use the Δ or ∇ key to select **AUTO MODE: ON** if desired. Press ENTER when the desired setting is displayed.

If **AUTO MODE: ON** is selected, **SET AUTO ON** will be displayed next. Press ENTER to allow entry of time to switch AUTO mode ON. **AUTO ON: 00:00** will be displayed. Use the Δ and ∇ keys to select the hour, then press ENTER. Use the Δ and ∇ keys again to select the minute, then press ENTER. **SET AUTO ON** will now be displayed. Use the Δ and ∇ keys to display **SET AUTO OFF** and press ENTER to enter the time to switch AUTO mode OFF. **AUTO OFF: 00:00** will be displayed. Use the Δ and ∇ keys to select the hour, then press ENTER. Use the Δ and ∇ keys again to select the minute, then press ENTER. **SET AUTO OFF** will now be displayed. Press EXIT to return to the Setup Menu.

The AUTO/MANUAL mode can still be set manually from the front panel. However, if the Auto Mode Timer is enabled, it will override the mode at the first occurrence of the ON or OFF time. If the ON time is set equal to the OFF time, the Auto Mode Timer will have no effect on the mode.

4.32 Menu Item 29. RECORD ALERT VOICE MESSAGE

An alert voice message may be prerecorded for later playback with the next manually encoded message. To record the announcement, the Voice Recorder must be enabled. Connect the audio source to the Channel 1 (CH1) audio input of J102 on the EAS911+ rear panel. The maximum announcement duration is 2 minutes. This recording will be overwritten by the next EAS voice message.

Press ENTER while **29. RECORD ALERT VOICE MESSAGE** is displayed on the LCD Screen.

The LCD Screen will display a bar graph of the signal level on CH1. The audio from CH1 will be heard through the speaker. Use the bar graph to adjust the input signal level. Press ENTER to begin recording. The LCD Screen will display the elapsed duration as the announcement is recorded.

EXAMPLE:

RECORDING: 00:01

Press EXIT to terminate recording. After the voice message has been recorded, it will automatically be replayed. Press EXIT to end.

4.33 Menu Item 30. VERIFY ALERT VOICE MESSAGE

The prerecorded alert voice message can be played back from the Voice Recorder. The Voice Recorder must be enabled, and a voice message must have been recorded previously.

Press ENTER while **30. VERIFY ALERT VOICE MESSAGE** is displayed on the LCD Screen.

The SPKR LED will light to allow adjustment of speaker volume.

The LCD Screen will display: **VOICE MSG: 02:00** (or the length of the recorded announcement in seconds).

The speaker will play back the pre-recorded voice message.

The LCD Screen will count down as the message is replayed. Press EXIT to interrupt playback and return to the Setup Menu.

4.34 Menu Item 31. SET RANDOM REQUIRED WEEKLY TEST

This menu item allows a user to program an automatic random One-button Weekly Test (see section 4.27). The test will occur on a random day of the week and at a random time between the programmed Earliest and Latest times. The time duration is fixed at 15 minutes. Location FIPS Codes used will be those programmed in Setup Menu **24. SET ONE-BUTTON WEEKLY TEST OPTION** (see section 4.27).

Press ENTER while **31. SET RANDOM REQUIRED WEEKLY TEST** is displayed on the LCD screen. **RANDOM RWT: OFF** will be displayed. Use the arrow keys to select **RANDOM RWT: ON** if desired. Press ENTER when the desired setting is displayed.

If **RANDOM RWT: ON** is selected, **SET EARLY TIME** will be displayed. Press ENTER to allow entry of the Earliest time. **EARLIEST: 00:00** will be displayed with the Hours digits flashing. Use the arrow keys to set the Earliest Hour, then press ENTER. The Minutes digits will flash. Use the arrow keys to set the minutes, and press ENTER. **SET LATEST TIME** will be displayed on the LCD screen. Press ENTER to allow entry of the Latest time. **LATEST: 00:00** will be displayed with the Hours digits flashing. Use the arrow keys to set the Latest Hour, then press ENTER. The Minutes digits will flash. Use the arrow keys to set the minutes, and press ENTER. Press EXIT to return to the Setup Menu. The initial RWT will be transmitted approximately 5 minutes after exiting, and then the Random RWT cycle will begin.

4.35 Menu Item 32. SET TRANSMIT DELAY TIME

This menu item allows a user to program a delay time between closure of the On-Air Relay and the start of transmission of the EAS header, voice or EOM audio. This delay is commonly referred to as transmitter key-up time.

Press ENTER while **32. SET TRANSMIT DELAY TIME** is displayed on the LCD screen. **DELAY 0.0 SEC** will be displayed on the LCD screen. Use the Arrow keys to select the delay time in 0.5 second increments. Press ENTER when the desired delay is displayed. The maximum delay time is 10.0 seconds.

SECTION V INSTALLATION

5.1 INTRODUCTION

This section describes the installation of the EAS911+ and its related options and equipment after it has been programmed according to methods described in Section IV. The EAS911+ installation requires the Encoder output and Decoder input level adjustment, as well as connecting the various optional and related equipment onto the EAS911+ Rear Panel.

Electrical ground for the EAS911+ is established through the AC power cord. If a more substantial technical ground is available, it may be connected to the chassis box directly, using a short piece of braid. Proper grounding, good engineering practice, and safety depend on the knowledge and care of the installing engineer.

The EAS911+ is designed to mount in a 19" rack or cabinet using (4) 12-24 pan head machine screws.

Mounting requirements: Size: 5.25"H x 19"W x 12"D Maximum. Weight: Approximately 12 lbs.

Power requirements: Input power: 117 VAC @ 60 Hz, 40 watts maximum, 3 Prong Power Cord - UL style SVT

Environmental requirements: 0°C to 50°C (32°F to 122°F).

General Hazards:

- a. Elevated Operating Ambient Temperature - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum rated ambient temperature.
- b. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.
- c. Mechanical Loading - Mounting of the equipment in a rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- d. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuit might have on over-current protection and supply wiring. A continuous AC source UPS is recommended.
- e. Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., power strip use)

5.2 ENCODER AUDIO OUTPUT LEVEL ADJUSTMENT

FCC regulations state that Broadcast stations are responsible for ensuring that the equipment for generating the EAS codes and the Attention Signal can modulate a broadcast station transmitter at no less than 80% of main channel modulation. Measured at peak modulation levels, each of the Attention Signal tones should modulate the transmitter at not less than 40%. These two calibrated modulation levels should have values that are within 1 dB of each other.

This procedure sets the proper signal level at the audio output of the EAS911+ ENCODER. Connections are made to the AUDIO OUTPUT.

1. Enter the primary password. The EVENT keys will begin flashing and the TOUCH SCREEN DISPLAY Screen will display **SELECT EVENT**.
2. Press the ENTER key in the Decoder section of the front panel. The TOUCH SCREEN DISPLAY Screen will display **OPERATION MENU** briefly and then display **1. REVIEW RECEIVED MESSAGES**.
3. Use the Arrow (▲▼) keys to scroll through the Operations Menu to **5. SET OUTPUT LEVEL: ON-AIR RELAY OPEN**.
4. Press the ENTER key to select. The TOUCH SCREEN DISPLAY Screen will display **LEVEL: 0.5 Vp-p**
5. Adjust the audio output level by using the Arrow keys while reading the level indication on the TOUCH SCREEN DISPLAY Screen. As the Arrow keys are pressed, the output level will be incremented or decremented in 0.1 Volt steps Press ENTER to accept an indicated output. Set the output to comply with the modulation percentage stated above.

5.3 DECODER AUDIO INPUT LEVEL ADJUSTMENT

This procedure adjusts the signal level to the EAS DECODER Decoder. Connections are made with the supplied mating connectors. The pins are numbered from left to right when viewing the back panel.

Description
CH6 + AUDIO INPUT
CH6 SHIELD GROUND
CH6 - AUDIO INPUT
CH5 + AUDIO INPUT
CH5 SHIELD GROUND
CH5- AUDIO INPUT
CH4 + AUDIO INPUT
CH4 SHIELD GROUND
CH4 - AUDIO INPUT
CH3 + AUDIO INPUT
CH3 SHIELD GROUND
CH3- AUDIO INPUT
CH2 + AUDIO INPUT
CH2 SHIELD GROUND
CH2 - AUDIO INPUT
CH1 + AUDIO INPUT
CH1 SHIELD GROUND
CH1- AUDIO INPUT

Note:

The Decoder input can accommodate signals at levels of 0.5 Vp-p to 2 Vp-p. It is desirable to keep the Decoder input level at 1.5 Vp-p to utilize its full dynamic range.

1. Connect the received audio source to Channel 1 (+ to +, - to -, GND to GND).
2. Press the SPKR key to activate the speaker on Channel 1. The TOUCH SCREEN DISPLAY Screen will show the channel number followed by the audio signal level in bar chart form.
3. Observe the incoming level of the source.
4. If necessary, adjust the monitoring source output level for proper indication. Do not allow audio level to exceed 2 V on peaks.
5. Each time the SPKR key is pressed, it advances to the next channel in sequence. The speaker mutes after the last channel is exited. The SPKR LED illuminates when the speaker is active.
6. Repeat Steps 1 through 4 for Channels 2, 3, 4, 5, and 6 .

5.5 DIGITAL INTERFACE (RS-232)

The Digital Interface Port COM5 is the digital data input required by 11.33(a)(1) of the FCC Rules. It is mandated to be RS-232C with standard protocol and 1200 baud rate. Although it could be used, as described by the FCC, for Radio Broadcast Data System (RBDS), NWR, satellite, public switched telephone network, or other sources that may in future applications use EAS protocol, no specific standard is defined. Therefore, this interface connector is reserved for future expansion.

5.6 DIGITAL INTERFACE (RS-232)

The Digital Interface Port COM6 is the digital data output required by 11.32(a)(3) of the FCC Rules. It is mandated to be for data messages (RS-232C with standard protocol and 1200 baud rate) for future applications.

5.7 DIGITAL INTERFACE (RS-485)

This is a two-conductor balanced, twisted-pair interface to the TFT EAS 941A Remote Control/Status Module. It operates at 1200 bps half duplex and can drive up to 16 remote EAS 941A Modules. Maximum wiring distance is 2000 feet, and ground-shielded twisted-pair 24 AWG or heavier is requested.

5.8 THE ON-AIR RELAY

The On-Air Relay operates (closes) when an alert is generated by the Encoder, or when the EAS Decoder is in Auto mode and a valid and "tagged" EAS message is received, or when a message is manually forwarded. The relay provides a single set of dry contacts, rated 3A, 250 VAC. Contacts are Normally Open. The relay can be used to control the TFT Model 940A Program/Transmitter Interrupt unit.

The On-Air Relay releases when an EOM tone is completed. The relay contacts are available at rear panel connector.

5.9 THE ALERT RELAY

The Alert Relay operates (closes) when a valid EAS header is detected by the Decoder. The relay provides a single set of dry contacts, rated 3 A, 250 VAC. Contacts are Normally Open. When the relay operates, it remains closed until reset or upon detection of an EOM. If no EOM is detected the relay will reset after the timeout period programmed in Setup menu **25. SET ALERT TIMEOUT** (see section 4.28) except during an EAN or EAT alert.

Note:

Receipt of an EAN alert defeats the manual reset capability of the Alert Relay. When an EAN alert is received, the relay will reset only upon detection of an EOM.

The Alert Relay contacts are available at rear panel connector.

5.11 SPEAKER INHIBIT

This 2 pin connector is provided to inhibit (mute) the speaker when desired. A normally open switch or relay can be connected. When the contacts are open, the EAS911+ the speaker will operate normally. When the contacts are closed, the speaker will be muted. Incoming messages will continue to be logged and can be printed at the operator's convenience using an external printer or storage device connected to the front panel or rear panel USB port.

5.15 MOVING MESSAGE SIGNS

Moving Message Signs can be connected to Sign RS232 connector on the rear of the EAS911+. The RS-232 twisted-pair drives remote Moving Message Signs via serial data.

SECTION VI OPERATION

6.1 INTRODUCTION

This section describes EAS911+ operating procedures. The encoding of events and locations, and the transmission of alerts and required tests are described in detail. EAS Event Codes are described in FCC Part 11.31(e) and in Appendix F of this User Guide. Federal Information Processing System (FIPS) codes used to designate geographical locations are included in Appendix C of this User Guide.

A Primary, r Operator, password must be entered into the EAS911+ to originate an EAS alert. A Secondary, or Setup, Password is required, in addition, to set and/or modify programmed operating parameters. As shipped from the factory, the EAS911+ has Primary and Secondary passwords programmed to default values of “9-1-1” and “9-1-2”, respectively.

EAS 911+ CAP-TO-EAS AND EAS OPERATION

1. INSTALLATION – REAR PANEL CONNECTIONS

1.1 POWER CONNECTION

Connect the EAS 911+ to a 120 VAC power source.

2.0 NETWORK CONNECTION

Connect the Ethernet 0 port to a TCP/IP (Internet) network with access to a designated CAP Server using a CAT5 to RJ45 cable.

After the unit is plugged in, a boot-up process of approximately one minute occurs followed by the touch screen displaying the default DECODER screen with the DECODER tab highlighted in yellow at the top left of the touch screen. The various tabs at the top of the touch screen turn yellow when touched and access different screens that are briefly explained below.

DECODER tab	Accesses the screen that displays all the decoder operation functions including valid decoded CAP messages that match the FIPS Include list.
ENCODER tab	Accesses the screen for transmitting an EAS message.
CAP tab	Accesses the screen that displays a real-time log of the last 100 CAP message received regardless if they match the FIPS Include list or not.
AUDIO INPUTS tab	Displays a full-scale screen view of the 6 audio input channel levels on bar graphs. Each channel may be heard on the speaker separately.
INFO tab	Gives information about the SYSTEM as a whole, the EAS SERVER, and the CAP SERVER.
WARNINGS tab	Displays information messages should the unit not have received or transmitted a weekly or monthly test within eight days.

2.1 PERMANENT PORTION OF THE TOUCH SCREEN

The touch screen is composed of a permanent portion that essentially never changes. It includes the bottom row and the right edge column of the touch screen. The touch screen is also composed of the various tabs at the top of the screen, which bring up various screens that were discussed in Section 2.

The permanent portion of the touch screen includes the bottom row and a right edge column.

2.1.1 The bottom row includes a yellow window box and the CANCEL key. The yellow window box normally displays the date and time but can also display other messages about the status of the unit. The CANCEL key is used to cancel a particular function and return to the default DECODER tab.

2.1.2 The right column contains the SPEAKER up and down keys to adjust the speaker volume, the SPEAKER MUTE/ UNMUTED key, SETUP and OPERATION CONFIGURATION keys to gain access to the SETUP and OPERATION mode programming via password protection, and the ON-AIR and ALERT RELAYS status.

3. OPERATING MODE DETAILS

3.1 DECODER TAB

This tab accesses the screen that displays all the decoder operation functions. It includes the following:

MODE key, which toggles between the manual forward and the automatic forward modes via password protection.

AUDIO INPUTS mini bargraphs displays mini bargraphs for each of the 6 Audio Inputs channels. The CAP indicator briefly illuminates for incoming CAP messages, and the RX-D indicator briefly illuminates for incoming messages on the COM 5 1200-baud data channel.

The MESSAGE WAITING key flashes for each valid incoming EAS message. Touch the flashing MESSAGE WAITING key to acknowledge the incoming message and extinguish the key and to proceed with other DECODER functions.

The RX LOG window shows the last valid or duplicate alert decoded on the audio input or data channels. Only valid CAP messages, which match the FIPS Include list, are posted in the DECODER RX LOG window.

The REVIEW RX LOG keys include the NEWEST, NEWER, and the OLDER keys for accessing the last 10 received EAS messages be they valid, duplicate, or expired.

The PRINT key allows printing of the message displayed in the RX LOG window to an external printer via the front or rear USB port.

The VOICE MSG key permits the previewing of the voice message for the alert shown in the RX LOG. The EAS 911+ is capable of recording and storing ten distinct voice messages, one for each of the ten alerts in the RX LOG messages.

The FORWARD key permits the manual forwarding, with password protection, or one-button forwarding, without password protection, of a valid alert so long as the time duration has not expired.

3.2 CAP TAB

This tab accesses the screen that displays a real-time log of the last 100 CAP messages received from one or more URL's selected regardless if they match the FIPS Include list or not. It also includes the following:

The CAP LOG window shows the last CAP message decoded. Lengthy messages may be accessed by using the up and down scroll keys.

The REVIEW CAP LOG keys include the NEWEST, NEWER, and the OLDER keys for accessing the last 100 received CAP messages received.

The PRINT key allows printing of the CAP message displayed in the CAP LOG window to an external printer via the front or rear USB port.

The VOICE MSG key permits the previewing of the voice message for the alert shown in the CAP LOG window. If the Enable Text-to-Speech On Forwarded Messages function is enabled, a text-to-speech conversion of approximately one minute will take place if the VOICE MSG key is touched to preview a message before sending it; otherwise, the text-to-speech conversion will take place just before the header is transmitted for manual forwarding or at the beginning of an auto forward.

The FORWARD key permits the manual forwarding, with password protection, or one-button forwarding, without password protection, of a valid alert so long as the time duration has not expired.

The VIEW XML SOURCE key if touched permits viewing of the currently displayed CAP message XML source file.

4.0 CAP SETUP MODE PROGRAMMING

4.1 ENTERING THE SETUP MODE

With the unit showing any screen, touch the SETUP key in the CONFIGURE box in the lower right side of the touch screen. Enter password "9-1-,2" and then touch ENTER. If successful the unit emits a high 2 kHz confirmation tone with the speaker unmuted and set to a non-zero speaker level. And unsuccessful password entry is followed by a low 400 Hz error tone.

The SETUP mode opens with the top left System and Time tabs highlighted in yellow.

NOTE: At any time during SETUP mode programming, touching the OK key at the bottom of the touch screen enters the particular tabs entry or entries into memory and then exits the Setup Mode the unit returns to the default DECODER screen.

If multiple SETUP items from different tabs are to be programmed, it is recommended that all the items be programmed tab by tab before touching the OK key.

Once the OK key has been touched, all the programmed settings from all the different tabs will be entered into memory and the Setup Mode exited with the unit returning to the default DECODER screen.

4.2 DATE AND TIME PROGRAMMING

While in the SETUP mode, verify the System and the Time tabs are highlighted in yellow at the top left corner of the touch screen. If they are not, touch each of these tabs to bring up the time setting screen. Enter the date and time in the various entry boxes using the up and down keys. When programming is completed touch the SET DATE TIME key. **DO NOT TOUCH THE OK KEY AT THE BOTTOM OF THE TOUCH SCREEN.**

4.3 TIME ZONE PROGRAMMING

While in the SETUP mode, touch the System tab and then the Time Zone tab at the top left corner of the touch screen so that they are both highlighted in yellow. Select the correct time zone setting by touching the up and down keys. When the correct time zone is displayed in the window, touch the SET TIME ZONE key. **DO NOT TOUCH THE OK KEY AT THE BOTTOM OF THE TOUCH SCREEN.**

4.4 CAP PROGRAMMING

4.4.1 CAP NETWORK PROGRAMMING

While in the SETUP mode, touch the CAP tab at the lower left side of the touch screen and then the Network tab at the top left side of the touch screen so that they are both highlighted in yellow. The default setting is DHCP, where the EAS 911+ is automatically assigned with a network address upon connection.

To set a Static IP Address, touch the Use Static IP Address key to fill in the circle with a dot.

To edit the Address, touch the Edit key and enter the static IP address in each of the four numbers in the address. After each number is properly entered, touch the Done key below the number; otherwise, touch the Edit key above the number. After all four numbers have been correctly entered, touch the OK key at the top portion of the touch screen **and not the OK key at the bottom of the touch screen**, otherwise touch CANCEL at the top portion of the touch screen **and not the CANCEL at the bottom portion of the touch screen**.

To edit the Netmask, Gateway, and DNS, follow the same procedure stated above for the Address.

4.4.2 CAP URL PROGRAMMING

While in the SETUP mode, touch the CAP tab at the lower left side of the touch screen and then the URL tab at the top side of the touch screen so that they are both highlighted in yellow.

The EAS 911+ provides up to three CAP server poll URLs. Each URL can be enabled or disabled. URL #1 FEMA IPAWS address can only be enabled or disabled and not changed, while URLs #2 and #3 addresses can be both enabled and disabled and changed.

To enable or a particular URL, touch the "Poll this URL" key to put a check mark in the box and enable the URL. To disable the URL, touch the "Poll this URL" key with a check mark to remove it and disable the URL.

To edit URLs #2 or #3 addresses, touch the Edit key and enter the address on the keyboard. When the desired address has been correctly entered, touch the Done key.

4.4.3 CAP MISC TAB PROGRAMMING (SERVER POLL INTERVAL, ENABLE TEXT- TO-SPEECH, CAP ALERT HTTP PROXY)

While in the SETUP mode, touch the CAP tab at the lower left side of the touch screen and then the Misc tab at the top side of the touch screen so that they are both highlighted in yellow.

To set the Server Poll Interval use the nearby up and down keys. The range is 60 seconds to 900 seconds increments of 60 seconds.

The Enable Text-to-Speech On Forwarded Messages function can be enabled or disabled by touching the key. A check mark in the left side box means the function is enabled. No check mark means this function is not enabled.

To use a CAP Alert http Proxy, touch the Use Proxy box so that a check mark appears. The web site address for the proxy can be entered by touching the Edit key and using the keyboard to enter the address. When the desired address has been correctly entered, touch the Done key.

4.4.4 CAP FIPS INCLUDE LIST

Only the valid CAP messages whose FIPS Codes match those programmed in the FIPS Include List will be eligible for forwarding and posted in the DECODER RX LOG. All CAP messages, including those that do not match the FIPS Include list, will be posted in the general CAP log accessed under the CAP tab in the regular operating mode. The FIPS Include List can only be programmed for a maximum of 100 FIPS codes.

While in the SETUP mode, touch the CAP tab at the lower left side of the touch screen and then the FIPS Include tab at the top side of the touch screen so that they are both highlighted in yellow.

To enter FIPS code in the FIPS Include list, first touch the Select State key. Use the up and down keys to select a state and then touch the Set State key when done.

Next, use the up and down keys to select a FIPS code. If a subdivision of the FIPS code shown is needed touch the Location Subdivision up and down keys to select a location subdivision. Touch the Add key to add a FIPS code to the list. To add multiple FIPS codes continue in the same process.

To remove a FIPS, touch the Remove FIPS key. This brings up a sub-menu. Touch the Remove or the Remove All key as needed. If done removing FIPS codes and done programming the FIPS Include list, touch the OK key. If not, touch the Add key to return to the FIPS Include programming.

SECTION VII

Theory of Operation

7.1 GENERAL DESCRIPTION AND PURPOSE

The EAS911+ is a rack mount unit that consists of a computer with Linux-based operating software and peripherals for digital and analog interface. The software programming resident in the EAS911+ performs all the tasks necessary for FCC Part 11 and FEMA Compliance.

The EAS911+ is a combined Emergency Alert System (EAS) Encoder and Decoder and CAP Receiver (Decoder) that enables broadcasters, cablecasters, and emergency managers to receive, store, forward, and originate Emergency Alert Messages as required by the FCC's EAS Rules. By using the EAS digital protocol prescribed by the FCC, the EAS911+ can function as a sentinel to alert operators to the receipt of emergency messages. Forwarding of only certain messages with a minimum of operator intervention can be achieved selectively, simply, and automatically.

The EAS911+ has two operating modes: automatic and manual. In automatic mode, only those messages which meet specific criteria are forwarded to the transmitter. With the exception of the required national level events, only messages "tagged" by management are allowed to interrupt programming. For minimal or unattended operation, the EAS911+ can perform all the critical emergency alert functions in automatic mode with the optional voice recorder option without operator assistance. For manual mode, no messages are forwarded, except for required national level messages, unless sent by an operator. All incoming messages are recorded, and their header information is stored and available for review or subsequent manual forwarding.

The digital voice message recording makes an incoming audio message, of up to two minutes, always available for the operator's immediate review. The operator can then decide whether to forward the last message received after review of the complete header and voice message. With the EAS911+ voice recorder it is not necessary for the operator to transcribe or remember text. A touch screen display gives the operator instant access to the last ten messages either received or sent.

Six audio inputs and two RS-232 data input are standard on the EAS911+ to connect to receivers for the two required monitoring assignments of the EAS911+.

A single audio output connects to external audio switching and distribution systems or to an optional TFT EAS 940A transmitter/program interrupt unit. This optional interrupt unit provides four balanced, isolated input and output channels that are switched to a combined common signal during an emergency message transmission. The common audio output provided by the EAS911+ contains all the Header, Attention Signal and EOM codes in proper EAS format for emergency alerting.

TFT, Inc.
1953 Concourse Drive
San Jose, CA 95131-1731
Tel: (408) 943-9323 Fax: (408) 943-9218
Email: techsupport@TFTInc.com

SECTION VIII MAINTENANCE AND REPAIR

8.1 INTRODUCTION

The EAS911+ has no moving parts or components that require routine replacement. It requires only minor audio adjustment, which will be described later in this section.

8.2 TOOL AND TEST EQUIPMENT REQUIREMENTS

The following tools and equipment are required for EAS911+ maintenance:

- Hand Tools
- Digital Voltmeter
- Oscilloscope
- Audio generator

8.3 ROUTINE MAINTENANCE

The EAS911+ should require no routine maintenance. As equipment and systems external to the EAS911+ change, audio level adjustments may be necessary.

8.3.1 *Calibration*

The 911+ EAS-CAP does not require routine calibration.

8.3.2 *Audio Levels*

The EAS911+ Encoder Output Audio Level and the Decoder Input Audio Level can be adjusted periodically as described below.

8.3.2.1 *Encoder Audio Output Level Adjustment*

This procedure sets the proper signal level at the audio output of the Encoder portion of the EAS911+ (J101). Proceed as follows:

1. To access the Operation Menu, enter the Primary Password, then press ENTER. The TOUCH SCREEN DISPLAY will display **OPERATION MENU** briefly, then **1. REVIEW RECEIVED MESSAGES**.
2. Use the up/down arrow keys (Δ / ∇) to scroll to **6. Set Output Level: On-Air Relay Open**. Press the ENTER key to activate the displayed menu selection. The TOUCH SCREEN DISPLAY will display the output audio level.
3. Adjust the audio output level by using the up/down arrow keys while reading the level indication on the TOUCH SCREEN DISPLAY display. As Δ / ∇ keys are pressed, the audio output level will be incremented or decremented in 0.1 volt steps. Press ENTER to accept an indicated output. The output should be set to comply with the modulation percentage stated above. A level of 2.2 V p-p corresponds to 0 dBm.
4. The two tones of the Attention Signal can be accessed individually by using the Δ TIME Δ / ∇ arrows. The 960 Hz tone, both, or the 853 Hz tone can be selected.
5. Press EXIT twice to return to the Ready mode.

8.3.2.2 *Decoder Audio Input Level Adjustment*

1. Connect the monitoring source to the audio input CH1.
2. Press the SPKR key to activate the speaker on Channel 1. The TOUCH SCREEN DISPLAY displays the channel number followed by the audio signal level in bar chart form.

Note:

The Decoder input can accommodate signals at levels of 0.7 Vp-p to 2 Vp-p. It is desirable to keep the Decoder input at 1.5 Vp-p to utilize its full dynamic range.

3. Observe the incoming level of the source.
4. If necessary, adjust the monitoring source output level for proper indication. Do not allow audio level to exceed 2 Vp-p on peaks.
5. Each time the SPKR key is pressed it advances to the next channel in sequence. The speaker mutes after the last channel is exited. The SPKR key illuminates when the speaker is active.
6. Repeat Steps 1 through 4 for Channel 2.
7. Repeat Steps 1 through 4 for each of the remaining Audio channels.

8.5 DIAGNOSTICS AND REPAIR

Some general (and very important) observations on repair:

1. The EAS911+ series of equipment uses static sensitive components. ESD (Electrostatic Discharge) precautions must therefore be observed during any attempted repairs. This is extremely important.
2. The EAS911+ breaks down into subassemblies and, in general, subassembly replacement is best maintenance philosophy.

8.7 TROUBLESHOOTING

Most of the EAS911+ functions can be troubleshot by performing the Encoder to Decoder self test as described below. This self-test will check both the operation of the Encoder and one Decoder Audio Input channel. This test may be repeated for any or all of the other Decoder Audio Input channels if desired.

Connect a XLR out to 3-pin AUDIO INPUT cable between Rear Panel J101 Audio Out and J102 CH1 Audio Input.

Press front panel keys in the following order:

- | | |
|---|---|
| Press PASSWORD | The TOUCH SCREEN DISPLAY will read PASSWORD? And the LOCATION(S) numeric keys will illuminate. |
| Press 9,1,1
(or Primary Password) | The TOUCH SCREEN DISPLAY will read SELECT EVENT and the EVENT keys will flash. |
| Press WEEKLY TEST | The TOUCH SCREEN DISPLAY will scroll RWT A REQUIRED WEEKLY TEST and the CONFIRM key will flash. |
| Press EVENT CONFIRM | The TOUCH SCREEN DISPLAY will read EVENT DURATION before changing to read 00 HRS 15 MIN and the READY key will flash. |
| Press READY | The TOUCH SCREEN DISPLAY will read SEND HEADER and the SEND HDR key will flash. |
| Press SEND HDR | The TOUCH SCREEN DISPLAY will read SENDING HEADER and the Header Tones will be heard through the speaker. The printer will print the Station Transmit Log. After the Header Tones are sent the TOUCH SCREEN DISPLAY will scroll the received Alert Message text and the SEND HDR, SEND EOM, and MSG WAITING keys will flash. The printer will print the Station Receive Log. |

Press SEND EOM	The EOM Tones will be heard through the speaker and the printer will print EOM Received log. The TOUCH SCREEN DISPLAY will continue scrolling the received message and the MSG WAITING key will continue flashing.
Press MSG WAITING	The TOUCH SCREEN DISPLAY will read Date/Time and the unit will be returned to the Banner/Ready Mode.

8.8 TFT CUSTOMER SERVICE DEPARTMENT

TFT emergency service is available 24 hours a day if your station is off the air. Please call us if you need assistance with any TFT products.

TFT, Inc.

1953 Concourse Drive

San Jose, CA 95131-1708


Telephone: (408) 943-9323, Fax: (408) 943-9218

Email: techsupport@TFTInc.com

APPENDIX A
ENGINEERING DRAWINGS

FIG.	TITLE	REV.
1.	EAS911+ System Block Diagram.....	A
2.	EAS911+ System Bill of Material.....	A
3.	I/O Interface Board Block Diagram and Schematic.....	A
4.	I/O Interface Board Assembly	A
5.	Mother Board Block Diagram Layout and Specification.....	A



APPENDIX B
(Not used)

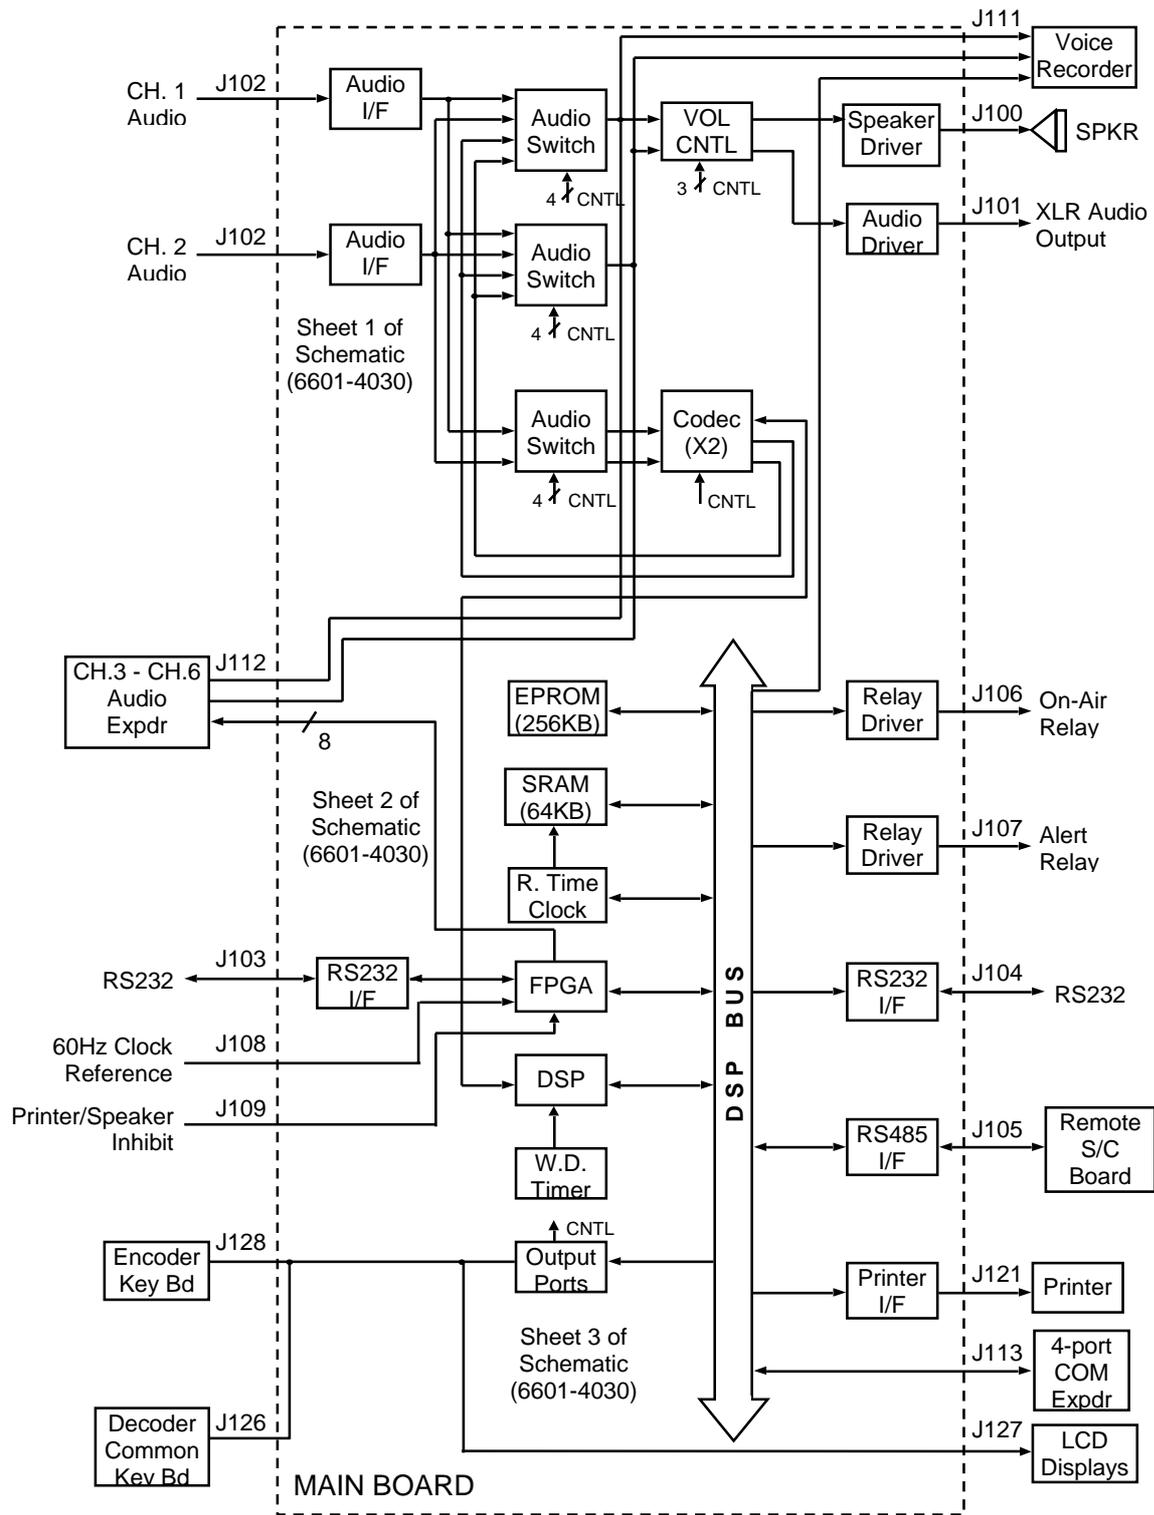


EAS911+ SYSTEM BLOCK DIAGRAM

Model EAS911+ System Bill of Material Rev A

Item No	Description	Qty
1	Power Supply FSP Group Inc Model FSP200-50PLA	1
2	EAS911+ Mother Board Assembly	1
3	EAS911+ In/Out board PCB Assembly	1
4	Solid State Drive OCE Technology Sata II 2.5 "	1
5	Touch screen Display 7 inches OSD P/NOSD521V10-1	1
6	Fan 3 inches 12V/140ma Elina HDF 6025L	1
7	Speaker 4 Ohms 3 Watts P/N GF0778BX4	1
8	EAS911+ Front panel assembly	1
9	EAS911+ Rear panel assembly	1
10	EAS911+ Chassis Assembly	1
11	EAS911+ Top cover	1
12	EAS911+Speaker Bracket	1
13	EAS911+Touch Screen Display Bracket	1
14	Cable Harness Assembly - PS to Mother Bd and I/O Bd	1
15	Cable Assembly - USB to USB extension 1.5 ft	3
16	Cable Assembly - 3.5mm male to 3.5 male 2 ft	1
12	Cable Assembly - speaker terminal to mini molex female 2.5 ft	1
13	Cable Assembly - D connector 9 pins to D connector 9 pins 2 ft	1
14	Cable Assembly - Ribbon DB(to Molex header 9 inches	1
15	Cable Assembly - D connector 25 pins to Molex header 26 AWG	1
16	Cable Assembly- SATA Cable SSD to mother board 1 ft	1
17	Cable Assembly- RS485 DB9 Femaleto DB9 header 2 ft	1
18	Cable Assembly- Twist pair yel/wht 22 Awg 15 inches	8
19	Cable Assembly- Twist pair red/wht 22 Awg 15 inches	1
20	Cable Assembly-Twist pair grn/grn 22 Awg 15 inches	2
21	Cable Assembly- Cat 5 RJ11 to RJ11	2
22	Cable Assembly- Touch screen to mother board 2 ft	1

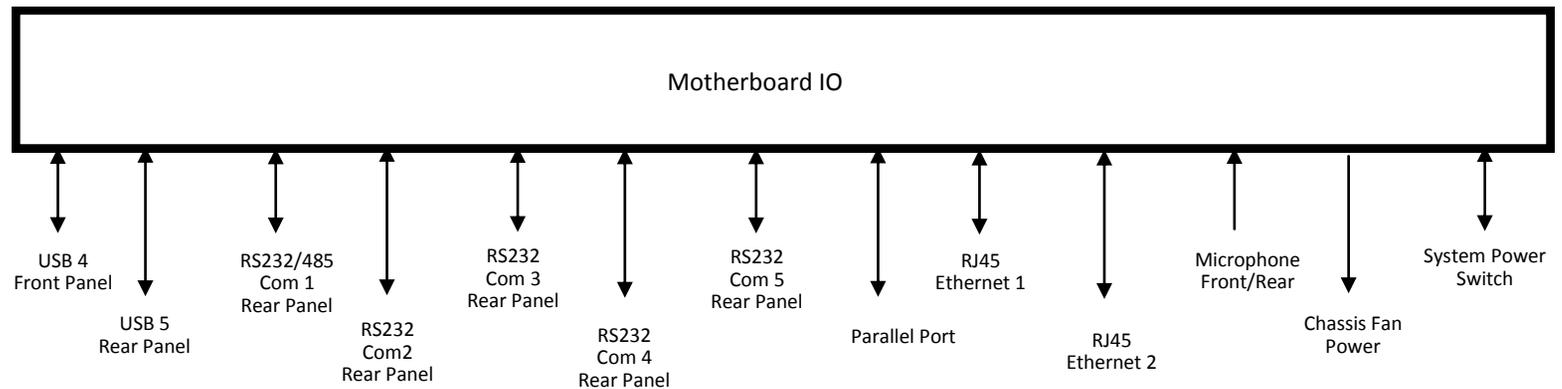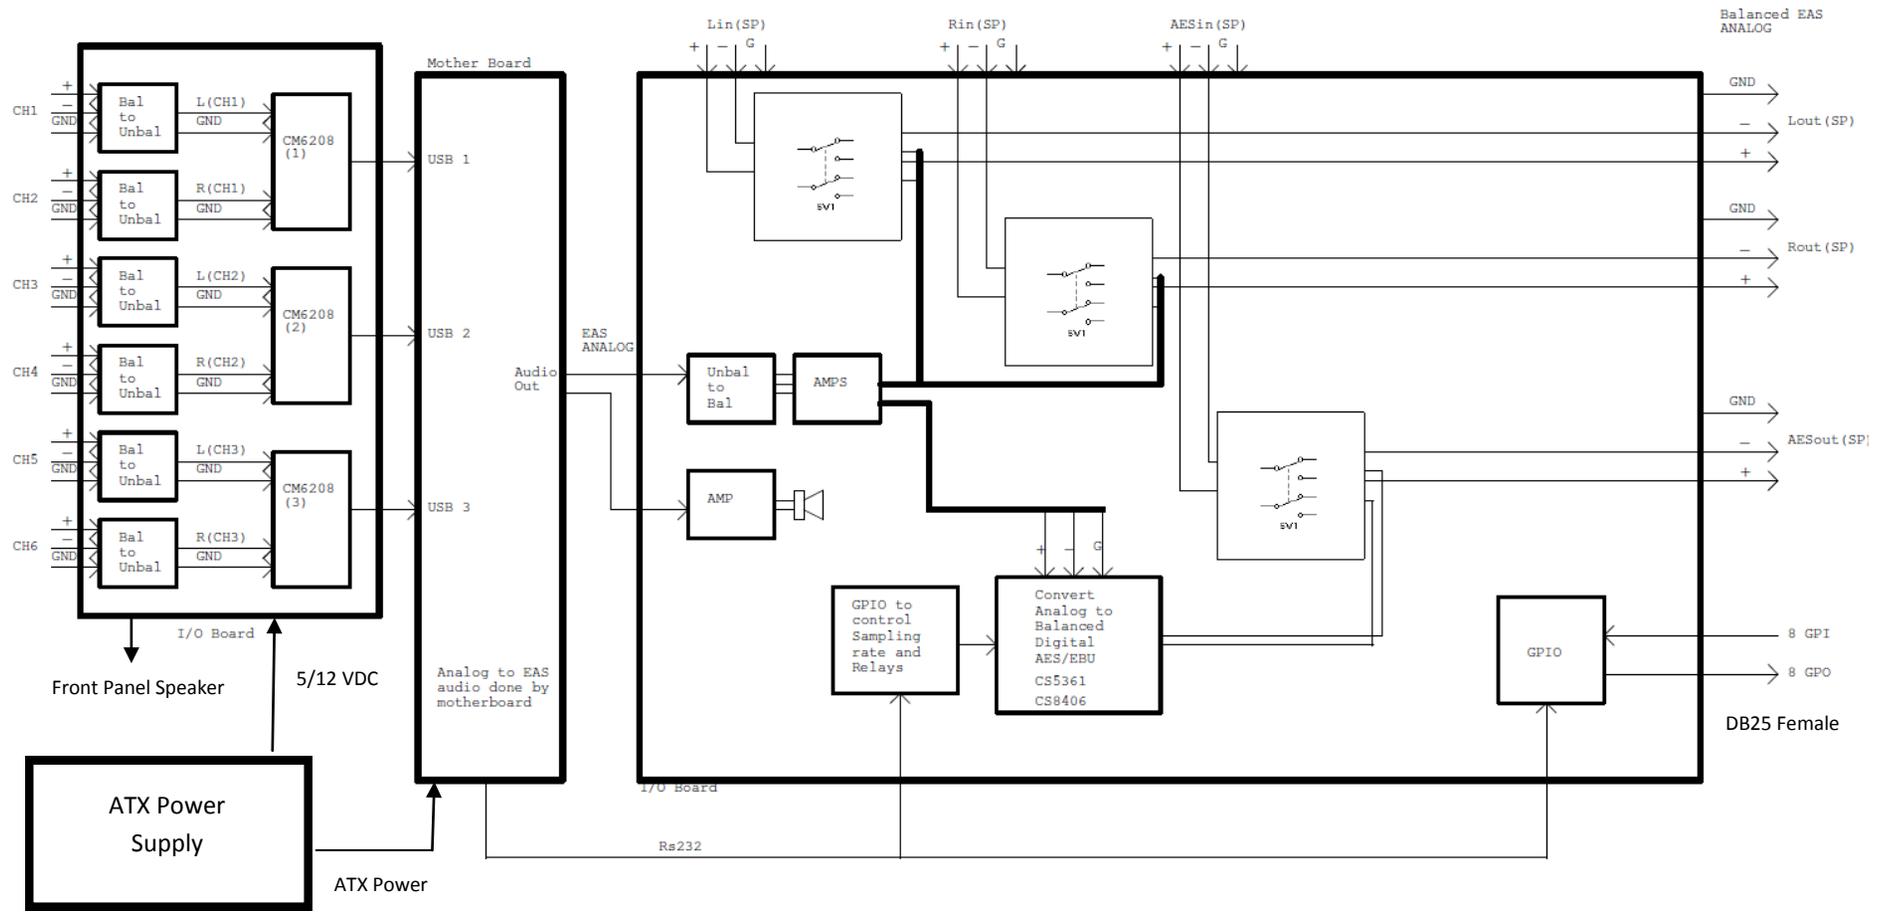

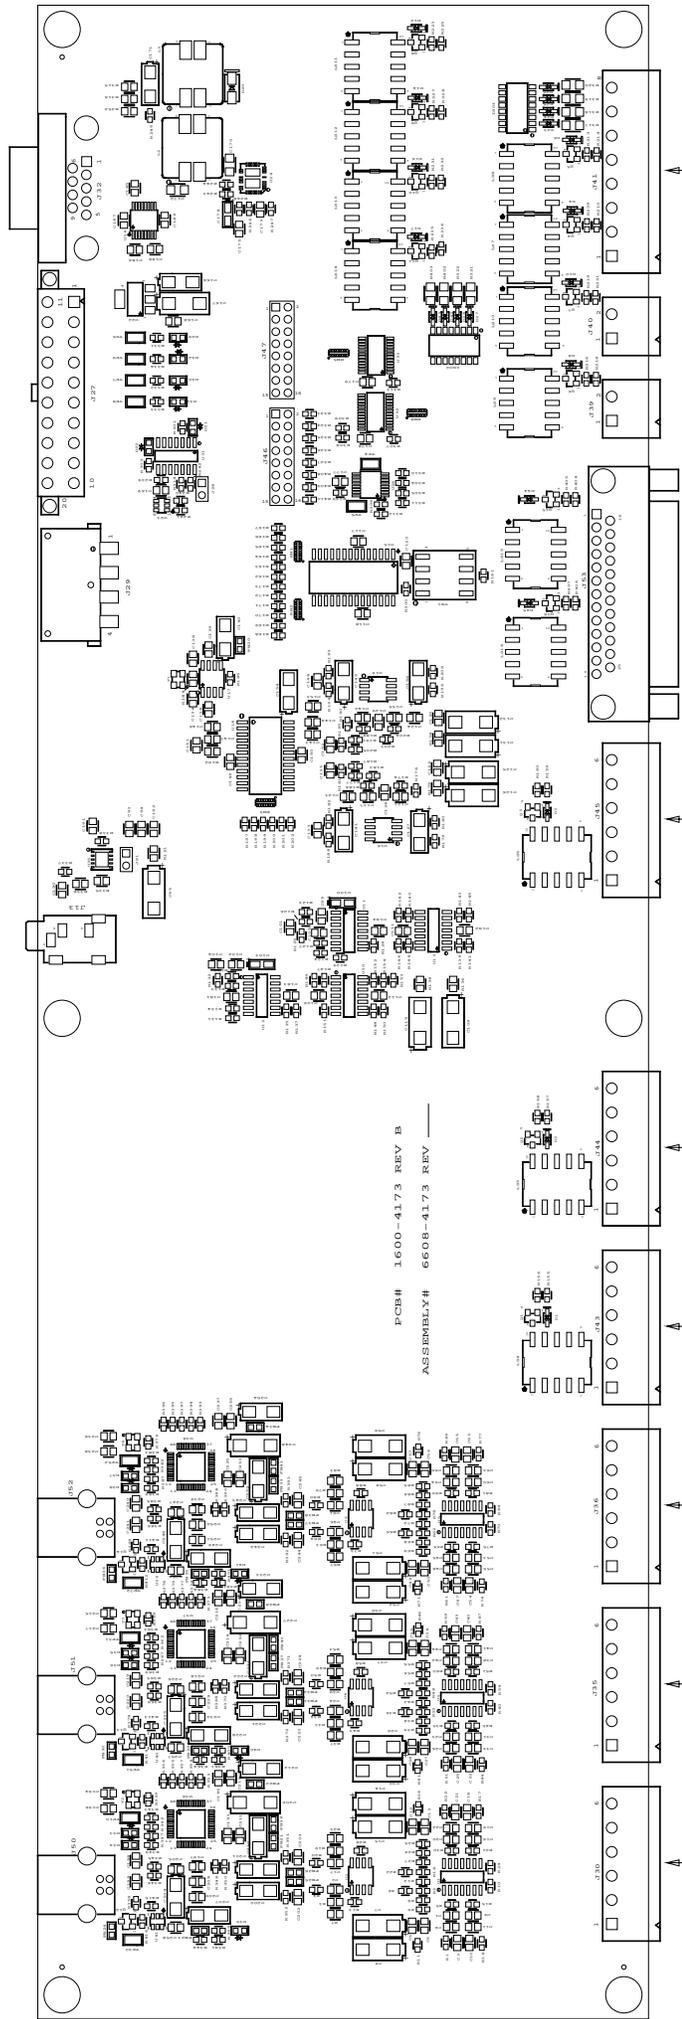


SILK SCREEN TOP

 advanced design services, inc.	Melbourne, FL 32901 www.adspcb.com	
	DATE: 01-13-2012	COMPANY: VELA
PART NUMBER: 1600-4173		REV: B


Doc Name: H:\Projects\1600\1600-4173-001\1600-4173-silk.t3.ncd

BCM MX945GSE Mini ITX Motherboard

Block Diagram

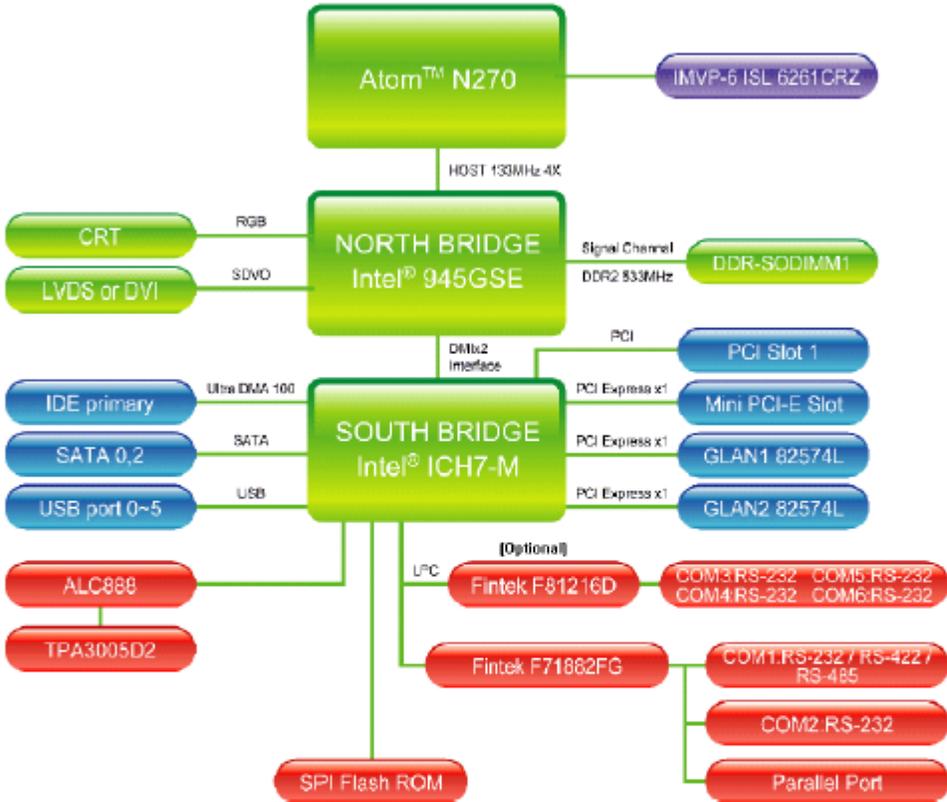


Motherboard Layout

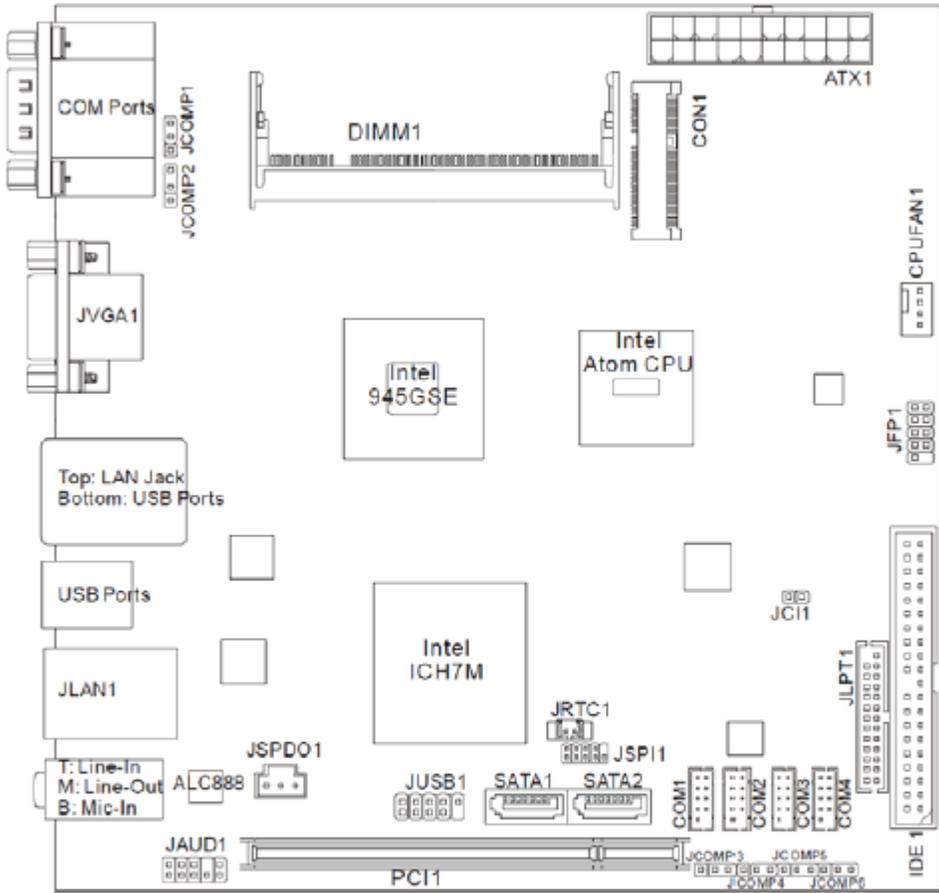

MX945GSE Mini ITX Mainboard

Board Dimension

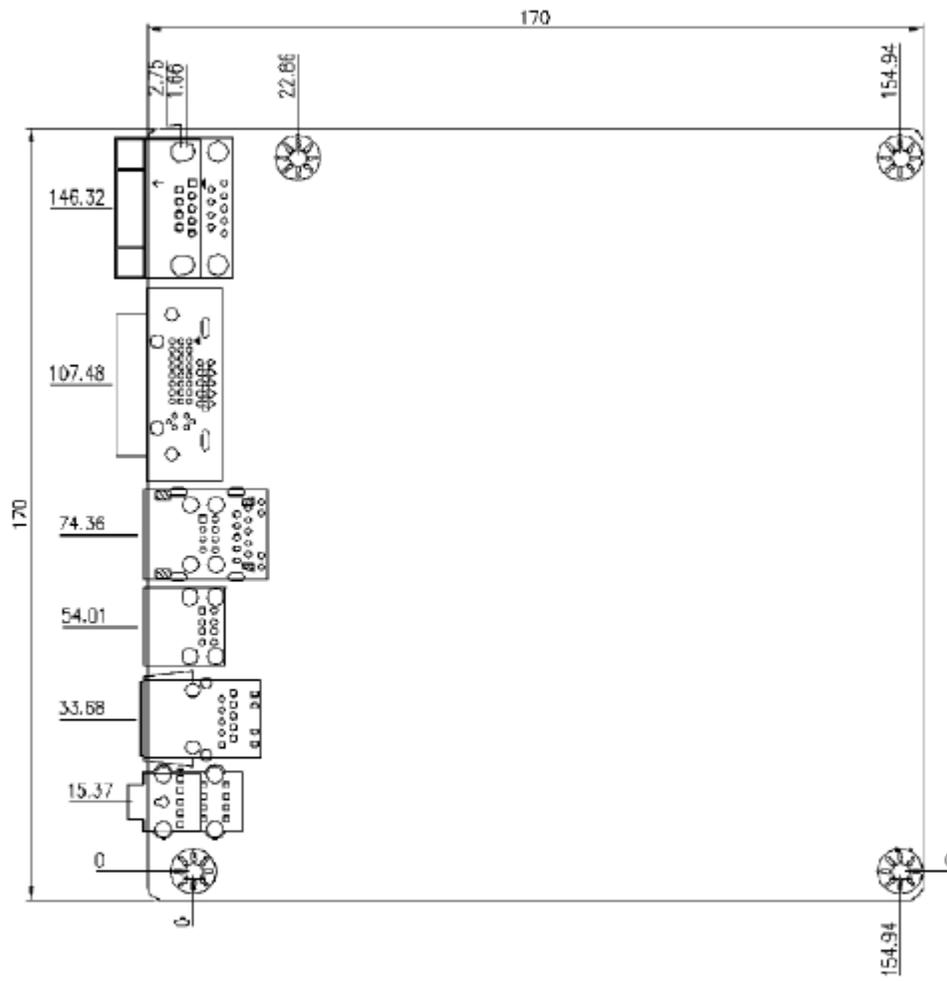


Safety Compliance & MTBF

Safety Compliance

Certification	Standard number	Title of standard
	EN 55022: 2006	Product family standard
CE	RFI	EN 2006
		EN 1995+A1:2001+A2:2005
		Limitation of voltage fluctuation and flicker in low-voltage supply system
	Immunity	EN 55024:1998+A1:2001+A2:2003
BSMI	CNS 13438 乙類(1995年6月版)	Product family standard
C-Tick	AS/NZS CISPR 22:2006	
FCC	FCC CFR Title 47 Part 15 Subpart B: 2005 Class B	
	CISPR 22: 2006	
VCCI	VCCI V-3:2008 Class B	
	VCCI V-4:2008 Class B	

MTBF -Reliability Prediction

Calculation Model	Operation Temperature (°C)	Operation Environment	Duty Cycle	MTBF (hr.)
Telcordia Issue 1	40	GB, GC Ground Benign, Controlled	6,841.490152	146,167

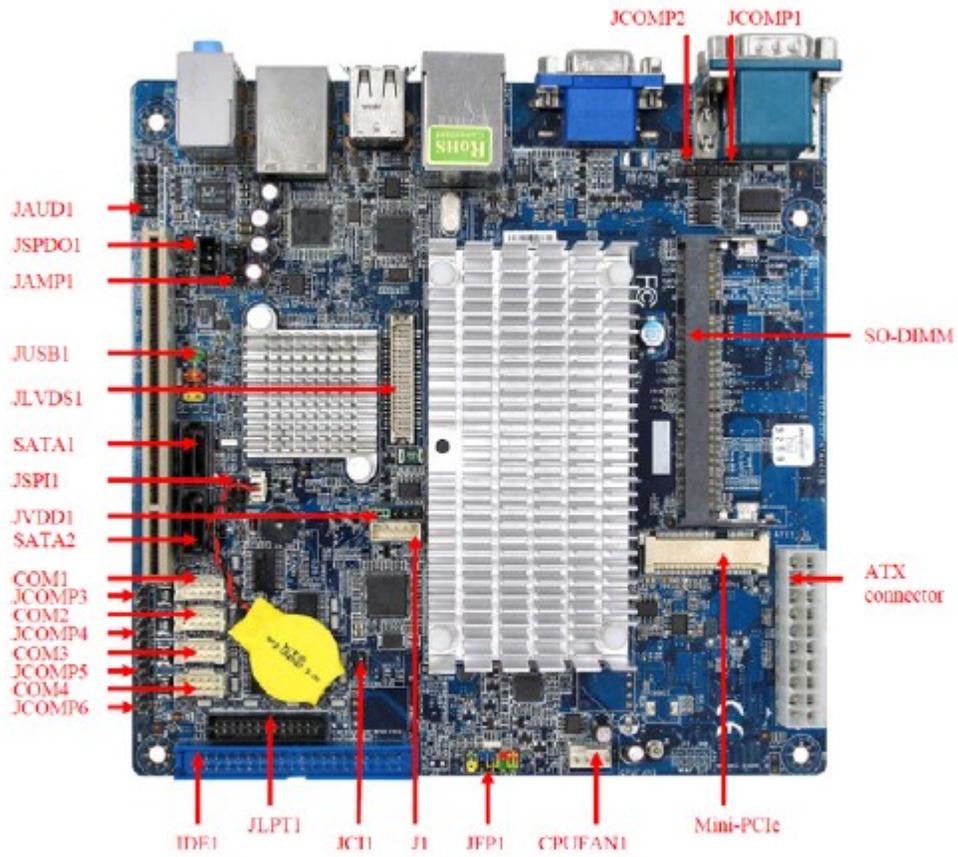

APPENDIX C

FIPS CODE LISTINGS

How to Use the FIPS Code Listings

The Header of an EAS Alert Message contains a location code which designates the geographical area affected by the alert. The location code contains 6-digits formatted PSSCCC, where:

P indicates the county subdivision.

SS indicates the state.

CCC indicates the county.

The P digit of the location code has a range of 0 to 9 and specifies a portion of a county:

- | | |
|----------------|---|
| 1 = Northwest, | 6 = East |
| 2 = North | 7 = Southwest |
| 3 = Northeast, | 8 = South |
| 4 = West | 9 = Southeast |
| 5 = Central | 0 = all or an unspecified portion of a county |

The SSSCC portion of the location code designates the State and County affected by the Alert message. It uses the Federal Information Processing System (FIPS) code as described by the U.S. Department of Commerce in National Institute of Standards and Technology publication 772. Each state is assigned a 2-digit code (SS). Each county is assigned a 3-digit code (CCC). A CCC code of 000 refers to an entire State or Territory.

State FIPS codes (SS) are 2-digit ascending numbers 01 to 56 assigned to an alphabetically ordered list of states as shown in Table C-1.

Table C-1. State FIPS Codes

NOTE: United States has a FIPS Code of 000000.

State	FIPS	State	FIPS	State	FIPS	State	FIPS	State	FIPS
AL	01	HI	15	MA	25	NM	35	SD	46
AK	02	ID	16	MI	26	NY	36	TN	47
AZ	04	IL	17	MN	27	NC	37	TX	48
AR	05	IN	18	MS	28	ND	38	UT	49
CA	06	IA	19	MO	29	OH	39	VT	50
CO	08	KS	20	MT	30	OK	40	VA	51
CT	09	KY	21	NE	31	OR	41	WA	53
DE	10	LA	22	NV	32	PA	42	WV	54
FL	12	ME	23	NH	33	RI	44	WS	55
GA	13	MD	24	NJ	34	SC	45	WY	56
District of Columbia - 11									

County FIPS codes are 3-digit ascending numbers 000 to 999 assigned to an alphabetically ordered list of counties within a designated state as shown in Part A.

U.S. Territories FIPS codes are 2-digit ascending numbers from 60 to 78 assigned to an alphabetically ordered list of Territories as shown in Table C-2.

Table C-2. U.S. Territories FIPS Codes

Territory	FIPS Code	Territory	FIPS Code	Territory	FIPS Code
American Samoa	60	Marshall Islands	68	Puerto Rico	72
Federated States of Micronesia	64	Northern Mariana Islands	69	U.S. Minor Outlying Islands	74
Guam	66	Palau	70	Virgin Islands	78

U.S. Offshore (Marine Areas) FIPS codes are 2-digit numbers from 57 to 98 assigned to an ordered list of Territories as shown in Table C-3.

Table C-3. Offshore (Marine Areas) FIPS Codes

Territory	FIPS Code
Eastern North Pacific Ocean, and along U.S. West Coast from Canadian border to Mexican border	57
North Pacific Ocean near Alaska, and along Alaska coastline, including the Bering Sea and the Gulf of Alaska	58
Central Pacific Ocean, including Hawaiian waters	59
South Central Pacific Ocean, including American Samoa waters	61
Western Pacific Ocean, including Mariana Island waters	65
Western North Atlantic Ocean, and along U.S. East Coast, from Canadian border south to Currituck Beach Light, N.C.	73
Western North Atlantic Ocean, and along U.S. East Coast, South of Currituck Beach Light, N.C., following the coastline into Gulf of Mexico to Bonita Beach, FL., including the Caribbean Gulf of Mexico, and along the U.S. Gulf Coast from the Mexican border to Bonita Beach, FL.	75
Lake Superior	91
Lake Michigan	92
Lake Huron	93
Lake St. Clair	94
Lake Erie	96
Lake Ontario	97
St. Lawrence River above St Regis	98

APPENDIX C
FIPS CODE LISTINGS
CONTENTS

Part A - U. S. State/County FIPS Codes

State	Page	State	Page
Alabama	C-4	Montana	C-12
Alaska	C-4	Nebraska	C-12
Arizona	C-4	Nevada	C-13
Arkansas	C-4	New Hampshire	C-13
California.....	C-5	New Jersey	C-13
Colorado.....	C-5	New Mexico	C-13
Connecticut	C-5	New York	C-13
Delaware.....	C-5	North Carolina	C-14
District of Columbia	C-5	North Dakota	C-14
Florida	C-6	Ohio	C-14
Georgia	C-6	Oklahoma	C-15
Hawaii	C-7	Oregon	C-15
Idaho.....	C-7	Pennsylvania	C-15
Illinois.....	C-7	Rhode Island	C-16
Indiana.....	C-7	South Carolina	C-16
Iowa.....	C-8	South Dakota	C-16
Kansas	C-8	Tennessee	C-16
Kentucky	C-9	Texas	C-17
Louisiana	C-9	Utah	C-18
Maine	C-10	Vermont	C-18
Maryland	C-10	Virginia	C-18
Massachusetts	C-10	Washington	C-19
Michigan	C-10	West Virginia	C-19
Minnesota	C-11	Wisconsin	C-19
Mississippi	C-11	Wyoming	C-20
Missouri	C-11		

Part B - U. S. Territories FIPS Codes

Territory	Page	Territory	Page
American Samoa.....	C-21	Palau.....	C-21
Federated States of Micronesia.....	C-21	Puerto Rico	C-21
Guam	C-21	U.S. Minor Outlying Islands.....	C-22
Marshall Islands.....	C-21	Virgin Islands.....	C-22
North Mariana Islands	C-21	Offshore (Marine Areas).....	C-23

Part A - U. S. State/County FIPS Codes

ALABAMA (01000)							
AUTAUGA	01001	CONECUH	01035	HOUSTON	01069	MORGAN	01103
BALDWIN	01003	COOSA	01037	JACKSON	01071	PERRY	01105
BARBOUR	01005	COVINGTON	01039	JEFFERSON	01073	PICKENS	01107
BIBB	01007	CRENSHAW	01041	LAMAR	01075	PIKE	01109
BLOUNT	01009	CULLMAN	01043	LAUDERDALE	01077	RANDOLPH	01111
BULLOCK	01011	DALE	01045	LAWRENCE	01079	RUSSELL	01113
BUTLER	01013	DALLAS	01047	LEE	01081	SAINT CLAIR	01115
CALHOUN	01015	DE KALB	01049	LIMESTONE	01083	SHELBY	01117
CHAMBERS	01017	ELMORE	01051	LOWNDES	01085	SUMTER	01119
CHEROKEE	01019	ESCAMBIA	01053	MACON	01087	TALLADEGA	01121
CHILTON	01021	ETOWAH	01055	MADISON	01089	TALLAPOOSA	01123
CHOCTAW	01023	FAYETTE	01057	MARENGO	01091	TUSCALOOSA	01125
CLARKE	01025	FRANKLIN	01059	MARION	01093	WALKER	01127
CLAY	01027	GENEVA	01061	MARSHALL	01095	WASHINGTON	01129
CLEBURNE	01029	GREENE	01063	MOBILE	01097	WILCOX	01131
COFFEE	01031	HALE	01065	MONROE	01099	WINSTON	01133
COLBERT	01033	HENRY	01067	MONTGOMERY	01101		

ALASKA (02000)							
ALEUTIANS EAST	02013	FAIRBANKS NORTH STAR	02090	MATANUSKA-SUSITNA	02170	SKAGWAY-HOONAH-ANGOON	02232
ALEUTIANS WEST	02016	HAINES	02100	NOME	02180	SOUTHEAST FAIRBANKS	02240
ANCHORAGE	02020	JUNEAU	02110	NORTH SLOPE	02185	VALDEZ-CORDOVA	02261
BETHEL	02050	KENAI PENINSULA	02122	NORTHWEST ARCTIC	02188	WADE HAMPTON	02270
BRISTOL BAY	02060	KETCHIKAN GATEWAY	02130	PRINCE OF WALES-OUTER KETCHIKAN	02201	WRANGELL-PETERSBURG	02280
DENALI	02068	KODIAK ISLAND	02150	SITKA	02220	YAKUTAT	02282
DILLINGHAM	02070	LAKE AND PENINSULA	02164	SKAGWAY-YAKUTAT-ANGOON	02231	YUKON-KOYUKUK	02290

ARIZONA (04000)							
APACHE	04001	GRAHAM	04009	MOHAVE	04015	SANTA CRUZ	04023
COCHISE	04003	GREENLEE	04011	NAVAJO	04017	YAVAPAI	04025
COCONINO	04005	LA PAZ	04012	PIMA	04019	YUMA	04027
GILA	04007	MARICOPA	04013	PINAL	04021		

ARKANSAS (05000)							
ARKANSAS	05001	DALLAS	05039	LEE	05077	POPE	05115
ASHLEY	05003	DESHA	05041	LINCOLN	05079	PRAIRIE	05117
BAXTER	05005	DREW	05043	LITTLE RIVER	05081	PULASKI	05119
BENTON	05007	FAULKNER	05045	LOGAN	05083	RANDOLPH	05121
BOONE	05009	FRANKLIN	05047	LONOKE	05085	SAINT FRANCIS	05123
BRADLEY	05011	FULTON	05049	MADISON	05087	SALINE	05125
CALHOUN	05013	GARLAND	05051	MARION	05089	SCOTT	05127
CARROLL	05015	GRANT	05053	MILLER	05091	SEARCY	05129
CHICOT	05017	GREENE	05055	MISSISSIPPI	05093	SEBASTIAN	05131
CLARK	05019	HEMPSTEAD	05057	MONROE	05095	SEVIER	05133
CLAY	05021	HOT SPRING	05059	MONTGOMERY	05097	SHARP	05135
CLEBURNE	05023	HOWARD	05061	NEVADA	05099	STONE	05137
CLEVELAND	05025	INDEPENDENCE	05063	NEWTON	05101	UNION	05139
COLUMBIA	05027	IZARD	05065	OUACHITA	05103	VAN BUREN	05141

ARKANSAS (05000) (Continued)							
CONWAY	05029	JACKSON	05067	PERRY	05105	WASHINGTON	05143
CRAIGHEAD	05031	JEFFERSON	05069	PHILLIPS	05107	WHITE	05145
CRAWFORD	05033	JOHNSON	05071	PIKE	05109	WOODRUFF	05147
CRITTENDEN	05035	LAFAYETTE	05073	POINSETT	05111	YELL	05149
CROSS	05037	LAWRENCE	05075	POLK	05113		

CALIFORNIA (06000)							
ALAMEDA	06001	KINGS	06031	PLACER	06061	SIERRA	06091
ALPINE	06003	LAKE	06033	PLUMAS	06063	SISKIYOU	06093
AMADOR	06005	LASSEN	06035	RIVERSIDE	06065	SOLANO	06095
BUTTE	06007	LOS ANGELES	06037	SACRAMENTO	06067	SONOMA	06097
CALAVERAS	06009	MADERA	06039	SAN BENITO	06069	STANISLAUS	06099
COLUSA	06011	MARIN	06041	SAN BERNARDINO	06071	SUTTER	06101
CONTRA COSTA	06013	MARIPOSA	06043	SAN DIEGO	06073	TEHAMA	06103
DEL NORTE	06015	MENDOCINO	06045	SAN FRANCISCO	06075	TRINITY	06105
EL DORADO	06017	MERCED	06047	SAN JOAQUIN	06077	TULARE	06107
FRESNO	06019	MODOC	06049	SAN LUIS OBISPO	06079	TUOLUMNE	06109
GLENN	06021	MONO	06051	SAN MATEO	06081	VENTURA	06111
HUMBOLDT	06023	MONTEREY	06053	SANTA BARBARA	06083	YOLO	06113
IMPERIAL	06025	NAPA	06055	SANTA CLARA	06085	YUBA	06115
INYO	06027	NEVADA	06057	SANTA CRUZ	06087		
KERN	06029	ORANGE	06059	SHASTA	06089		

COLORADO (08000)							
ADAMS	08001	DENVER	08031	KIT CARSON	08063	PHILLIPS	08095
ALAMOSA	08003	DOLORES	08033	LAKE	08065	PITKIN	08097
ARAPAHOE	08005	DOUGLAS	08035	LA PLATA	08067	PROWERS	08099
ARCHULETA	08007	EAGLE	08037	LARIMER	08069	PUEBLO	08101
BACA	08009	ELBERT	08039	LAS ANIMAS	08071	RIO BLANCO	08103
BENT	08011	EL PASO	08041	LINCOLN	08073	RIO GRANDE	08105
BOULDER	08013	FREMONT	08043	LOGAN	08075	ROUTT	08107
BROOMFIELD	08014	GARFIELD	08045	MESA	08077	SAGUACHE	08109
CHAFFEE	08015	GILPIN	08047	MINERAL	08079	SAN JUAN	08111
CHEYENNE	08017	GRAND	08049	MOFFAT	08081	SAN MIGUEL	08113
CLEAR CREEK	08019	GUNNISON	08051	MONTEZUMA	08083	SEDGWICK	08115
CONEJOS	08021	HINSDALE	08053	MONTRORSE	08085	SUMMIT	08117
COSTILLA	08023	HUERFANO	08055	MORGAN	08087	TELLER	08119
CROWLEY	08025	JACKSON	08057	OTERO	08089	WASHINGTON	08121
CUSTER	08027	JEFFERSON	08059	OURAY	08091	WELD	08123
DELTA	08029	KIOWA	08061	PARK	08093	YUMA	08125

CONNECTICUT (09000)							
FAIRFIELD	09001	LITCHFIELD	09005	NEW HAVEN	09009	TOLLAND	09013
HARTFORD	09003	MIDDLESEX	09007	NEW LONDON	09011	WINDHAM	09015

DELAWARE (10000)							
KENT	10001	NEW CASTLE	10003	SUSSEX	10005		

DISTRICT OF COLUMBIA						
						11001

FLORIDA (12000)							
ALACHUA	12001	FLAGLER	12035	LAKE	12069	PASCO	12101
BAKER	12003	FRANKLIN	12037	LEE	12071	PINELLAS	12103
BAY	12005	GADSDEN	12039	LEON	12073	POLK	12105
BRADFORD	12007	GILCHRIST	12041	LEW	12075	PUTNAM	12107
BREVARD	12009	GLADES	12043	LIBERTY	12077	SAINT JOHNS	12109
BROWARD	12011	GULF	12045	MADISON	12079	SAINT LUCIE	12111
CALHOUN	12013	HAMILTON	12047	MANATEE	12081	SANTA ROSA	12113
CHARLOTTE	12015	HARDEE	12049	MARION	12083	SARASOTA	12115
CITRUS	12017	HENDRY	12051	MARTIN	12085	SEMINOLE	12117
CLAY	12019	HERNANDO	12053	MIAMI-DADE	12086	SUMTER	12119
COLLIER	12021	HIGHLANDS	12055	MONROE	12087	SUWANNEE	12121
COLUMBIA	12023	HILLSBOROUGH	12057	NASSAU	12089	TAYLOR	12123
DADE	12025	HOLMES	12059	OKALOOSA	12091	UNION	12125
DE SOTO	12027	INDIAN RIVER	12061	OKEECHOBEE	12093	VOLUSIA	12127
DIXIE	12029	JACKSON	12063	ORANGE	12095	WAKULLA	12129
DUVAL	12031	JEFFERSON	12065	OSCEOLA	12097	WALTON	12131
ESCAMBIA	12033	LAFAYETTE	12067	PALM BEACH	12099	WASHINGTON	12133

GEORGIA (13000)							
APPLING	13001	DADE	13083	JEFFERSON	13163	RICHMOND	13245
ATKINSON	13003	DAWSON	13085	JENKINS	13165	ROCKDALE	13247
BACON	13005	DECATUR	13087	JOHNSON	13167	SCHLEY	13249
BAKER	13007	DE KALB	13089	JONES	13169	SCREVEN	13251
BALDWIN	13009	DODGE	13091	LAMAR	13171	SEMINOLE	13253
BANKS	13011	DOOLY	13093	LANIER	13173	SPALDING	13255
BARROW	13013	DOUGHERTY	13095	LAURENS	13175	STEPHENS	13257
BARTOW	13015	DOUGLAS	13097	LEE	13177	STEWART	13259
BEN HILL	13017	EARLY	13099	LIBERTY	13179	SUMTER	13261
BERRIEN	13019	ECHOLS	13101	LINCOLN	13181	TALBOT	13263
BIBB	13021	EFFINGHAM	13103	LONG	13183	TALIAFERRO	13265
BLECKLEY	13023	ELBERT	13105	LOWNDES	13185	TATTNALL	13267
BRANTLEY	13025	EMANUEL	13107	LUMPKIN	13187	TAYLOR	13269
BROOKS	13027	EVANS	13109	MCDUFFIE	13189	TELFAIR	13271
BRYAN	13029	FANNIN	13111	MCINTOSH	13191	TERRELL	13273
BULLOCH	13031	FAYETTE	13113	MACON	13193	THOMAS	13275
BURKE	13033	FLOYD	13115	MADISON	13195	TIFT	13277
BUTTS	13035	FORSYTH	13117	MARION	13197	TOOMBS	13279
CALHOUN	13037	FRANKLIN	13119	MERIWETHER	13199	TOWNS	13281
CAMDEN	13039	FULTON	13121	MILLER	13201	TREUTLEN	13283
CANDLER	13043	GILMER	13123	MITCHELL	13205	TROUP	13285
CARROLL	13045	GLASCOCK	13125	MONROE	13207	TURNER	13287
CATOOSA	13047	GLYNN	13127	MONTGOMERY	13209	TWIGGS	13289
CHARLTON	13049	GORDON	13129	MORGAN	13211	UNION	13291
CHATHAM	13051	GRADY	13131	MURRAY	13213	UPSON	13293
CHATTAHOOCHEE	13053	GREENE	13133	MUSCOGEE	13215	WALKER	13295
CHATTOOGA	13055	GWINNETT	13135	NEWTON	13217	WALTON	13297
CHEROKEE	13057	HABERSHAM	13137	OCONEE	13219	WARE	13299
CLARKE	13059	HALL	13139	OGLETHORPE	13221	WARREN	13301
CLAY	13061	HANCOCK	13141	PAULDING	13223	WASHINGTON	13303
CLAYTON	13063	HARALSON	13143	PEACH	13225	WAYNE	13305
CLINCH	13065	HARRIS	13145	PICKENS	13227	WEBSTER	13307
COBB	13067	HART	13147	PIERCE	13229	WHEELER	13309
COFFEE	13069	HEARD	13149	PIKE	13231	WHITE	13311
COLQUITT	13071	HENRY	13151	POLK	13233	WHITFIELD	13313
COLUMBUS	13073	HOUSTON	13153	PULASKI	13235	WILCOX	13315

COOK	13075	IRWIN	13155	PUTNAM	13237	WILKES	13317
GEORGIA (13000) (Continued)							
COWETA	13077	JACKSON	13157	QUITMAN	13239	WILKINSON	13319
CRAWFORD	13079	JASPER	13159	RABUN	13241	WORTH	13321
CRISP	13081	JEFF DAVIS	13161	RANDOLPH	13243		

HAWAII (15000)							
HAWAII	15001	KALAWAO	15005	KAUAI	15007	MAUI	15009
HONOLULU	15003						

IDAHO (16000)							
ADA	16001	BUTTE	16023	GEM	16045	MINIDOKA	16067
ADAMS	16003	CAMAS	16025	GOODING	16047	NEZ PERCE	16069
BANNOCK	16005	CANYON	16027	IDAHO	16049	ONEIDA	16071
BEAR LAKE	16007	CARIBOU	16029	JEFFERSON	16051	OWYHEE	16073
BENEWAH	16009	CASSIA	16031	JEROME	16053	PAYETTE	16075
BINGHAM	16011	CLARK	16033	KOOTENAI	16055	POWER	16077
BLAINE	16013	CLEARWATER	16035	LATAH	16057	SHOSHONE	16079
BOISE	16015	CUSTER	16037	LEMHI	16059	TETON	16081
BONNER	16017	ELMORE	16039	LEWIS	16061	TWIN FALLS	16083
BONNEVILLE	16019	FRANKLIN	16041	LINCOLN	16063	VALLEY	16085
BOUNDARY	16021	FREMONT	16043	MADISON	16065	WASHINGTON	16087

ILLINOIS (17000)							
ADAMS	17001	FORD	17053	LIVINGSTON	17105	RANDOLPH	17157
ALEXANDER	17003	FRANKLIN	17055	LOGAN	17107	RICHLAND	17159
BOND	17005	FULTON	17057	MCDONOUGH	17109	ROCK ISLAND	17161
BOONE	17007	GALLATIN	17059	MCHENRY	17111	SAINT CLAIR	17163
BROWN	17009	GREENE	17061	MCLEAN	17113	SALINE	17165
BUREAU	17011	GRUNDY	17063	MACON	17115	SANGAMON	17167
CALHOUN	17013	HAMILTON	17065	MACOUPIN	17117	SCHUYLER	17169
CARROLL	17015	HANCOCK	17067	MADISON	17119	SCOTT	17171
CASS	17017	HARDIN	17069	MARION	17121	SHELBY	17173
CHAMPAIGN	17019	HENDERSON	17071	MARSHALL	17123	STARK	17175
CHRISTIAN	17021	HENRY	17073	MASON	17125	STEPHENSON	17177
CLARK	17023	IROQUOIS	17075	MASSAC	17127	TAZEWELL	17179
CLAY	17025	JACKSON	17077	MENARD	17129	UNION	17181
CLINTON	17027	JASPER	17079	MERCER	17131	VERMILION	17183
COLES	17029	JEFFERSON	17081	MONROE	17133	WABASH	17185
COOK	17031	JERSEY	17083	MONTGOMERY	17135	WARREN	17187
CRAWFORD	17033	JO DAVIESS	17085	MORGAN	17137	WASHINGTON	17189
CUMBERLAND	17035	JOHNSON	17087	MOULTRIE	17139	WAYNE	17191
DE KALB	17037	KANE	17089	OGLE	17141	WHITE	17193
DE WITT	17039	KANKAKEE	17091	PEORIA	17143	WHITESIDE	17195
DOUGLAS	17041	KENDALL	17093	PERRY	17145	WILL	17197
DU PAGE	17043	KNOX	17095	PIATT	17147	WILLEMSON	17199
EDGAR	17045	LAKE	17097	PIKE	17149	WINNEBAGO	17201
EDWARDS	17047	LA SALLE	17099	POPE	17151	WOODFORD	17203
EFFINGHAM	17049	LAWRENCE	17101	PULASKI	17153		
FAYETTE	17051	LEE	17103	PUTNAM	17155		

INDIANA (18000)							
ADAMS	18001	FRANKLIN	18047	LAWRENCE	18093	RUSH	18139
ALLEN	18003	FULTON	18049	MADISON	18095	SAINT JOSEPH	18141
BARTHOLOMEW	18005	GIBSON	18051	MARION	18097	SCOTT	18143
BENTON	18007	GRANT	18053	MARSHALL	18099	SHELBY	18145

BLACKFORD	18009	GREENE	18055	MARTIN	18101	SPENCER	18147
BOONE	18011	HAMILTON	18057	MIAMI	18103	STARKE	18149
INDIANA (18000) (Continued)							
BROWN	18013	HANCOCK	18059	MONROE	18105	STEBEN	18151
CARROLL	18015	HARRISON	18061	MONTGOMERY	18107	SULLIVAN	18153
CASS	18017	HENDRICKS	18063	MORGAN	18109	SWITZERLAND	18155
CLARK	18019	HENRY	18065	NEWTON	18111	TIPPECANOE	18157
CLAY	18021	HOWARD	18067	NOBLE	18113	TIPTON	18159
CLINTON	18023	HUNTINGTON	18069	OHIO	18115	UNION	18161
CRAWFORD	18025	JACKSON	18071	ORANGE	18117	VANDEBURGH	18163
DAVISS	18027	JASPER	18073	OWEN	18119	VERMILLION	18165
DEARBORN	18029	JAY	18075	PARKE	18121	VIGO	18167
DECATUR	18031	JEFFERSON	18077	PERRY	18123	WABASH	18169
DE KALB	18033	JENNINGS	18079	PIKE	18125	WARREN	18171
DELAWARE	18035	JOHNSON	18081	PORTER	18127	WARRICK	18173
DUBOIS	18037	KNOX	18083	POSEY	18129	WASHINGTON	18175
ELKHART	18039	KOSCIUSKO	18085	PULASKI	18131	WAYNE	18177
FAYETTE	18041	LAGRANGE	18087	PUTNAM	18133	WELLS	18179
FLOYD	18043	LAKE	18089	RANDOLPH	18135	WHITE	18181
FOUNTAIN	18045	LA PORTE	18091	RIPLEY	18137	WHITLEY	18183

IOWA (19000)							
ADAIR	19001	DAVIS	19051	JEFFERSON	19101	POCAHONTAS	19151
ADAMS	19003	DECATUR	19053	JOHNSON	19103	POLK	19153
ALLAMAKEE	19005	DELAWARE	19055	JONES	19105	POTTAWATTAMIE	19155
APPANOOSE	19007	DES MOINES	19057	KEOKUK	19107	POWESHIEK	19157
AUDUBON	19009	DICKINSON	19059	KOSSUTH	19109	RINGGOLD	19159
BENTON	19011	DUBUQUE	19061	LEE	19111	SAC	19161
BLACK HAWK	19013	EMMET	19063	LINN	19113	SCOTT	19163
BOONE	19015	FAYETTE	19065	LOUISA	19115	SHELBY	19165
BREMER	19017	FLOYD	19067	LUCAS	19117	SIoux	19167
BUCHANAN	19019	FRANKLIN	19069	LYON	19119	STORY	19169
BUENA VISTA	19021	FREMONT	19071	MADISON	19121	TAMA	19171
BUTLER	19023	GREENE	19073	MAHASKA	19123	TAYLOR	19173
CALHOUN	19025	GRUNDY	19075	MARION	19125	UNION	19175
CARROLL	19027	GUTHRIE	19077	MARSHALL	19127	VAN BUREN	19177
CASS	19029	HAMILTON	19079	MILLS	19129	WAPELLO	19179
CEDAR	19031	HANCOCK	19081	MITCHELL	19131	WARREN	19181
CERRO GORDO	19033	HARDIN	19083	MONONA	19133	WASHINGTON	19183
CHEROKEE	19035	HARRISON	19085	MONROE	19135	WAYNE	19185
CHICKASAW	19037	HENRY	19087	MONTGOMERY	19137	WEBSTER	19187
CLARKE	19039	HOWARD	19089	MUSCATINE	19139	WINNEBAGO	19189
CLAY	19041	HUMBOLDT	19091	O'BRIEN	19141	WINNESHIEK	19191
CLAYTON	19043	IDA	19093	OSCEOLA	19143	WOODBURY	19193
CLINTON	19045	IOWA	19095	PAGE	19145	WORTH	19195
CRAWFORD	19047	JACKSON	19097	PALO ALTO	19147	WRIGHT	19197
DALLAS	19049	JASPER	19099	PLYMOUTH	19149		

KANSAS (20000)							
ALLEN	20001	FINNEY	20055	LOGAN	20109	ROOKS	20163
ANDERSON	20003	FORD	20057	LYON	20111	RUSH	20165
ATCHISON	20005	FRANKLIN	20059	MCPHERSON	20113	RUSSELL	20167
BARBER	20007	GEARY	20061	MARION	20115	SALINE	20169
BARTON	20009	GOVE	20063	MARSHALL	20117	SCOTT	20171
BOURBON	20011	GRAHAM	20065	MEADE	20119	SEDGWICK	20173
BROWN	20013	GRANT	20067	MIAMI	20121	SEWARD	20175
BUTLER	20015	GRAY	20069	MITCHELL	20123	SHAWNEE	20177
CHASE	20017	GREELEY	20071	MONTGOMERY	20125	SHERIDAN	20179

CHAUTAUQUA	20019	GREENWOOD	20073	MORRIS	20127	SHERMAN	20181
CHEROKEE	20021	HAMILTON	20075	MORTON	20129	SMITH	20183
KANSAS (20000) (Continued)							
CHEYENNE	20023	HARPER	20077	NEMAHA	20131	STAFFORD	20185
CLARK	20025	HARVEY	20079	NEOSHO	20133	STANTON	20187
CLAY	20027	HASKELL	20081	NESS	20135	STEVENS	20189
CLOUD	20029	HOWEMAN	20083	NORTON	20137	SUMNER	20191
COFFEY	20031	JACKSON	20085	OSAGE	20139	THOMAS	20193
COMANCHE	20033	JEFFERSON	20087	OSBORNE	20141	TREGO	20195
COWLEY	20035	JEWELL	20089	OTTAWA	20143	WABAUNSEE	20197
CRAWFORD	20037	JOHNSON	20091	PAWNEE	20145	WALLACE	20199
DECATUR	20039	KEARNY	20093	PHILLIPS	20147	WASHINGTON	20201
DICKINSON	20041	KINGMAN	20095	POTTAWATOMIE	20149	WICHITA	20203
DONIPHAN	20043	KIOWA	20097	PRATT	20151	WILSON	20205
DOUGLAS	20045	LABETTE	20099	RAWLINS	20153	WOODSON	20207
EDWARDS	20047	LANE	20101	RENO	20155	WYANDOTTE	20209
ELK	20049	LEAVENWORTH	20103	REPUBLIC	20157		
ELLIS	20051	LINCOLN	20105	RICE	20159		
ELLSWORTH	20053	LINN	20107	RILEY	20161		

KENTUCKY (21000)							
ADAIR	21001	EDMONSON	21061	KNOX	21121	NICHOLAS	21181
ALLEN	21003	ELLIOTT	21063	LARVE	21123	OHIO	21183
ANDERSON	21005	ESTILL	21065	LAUREL	21125	OLDHAM	21185
BALLARD	21007	FAYETTE	21067	LAWRENCE	21127	OWEN	21187
BARREN	21009	FLEMING	21069	LEE	21129	OWSLEY	21189
BATH	21011	FLOYD	21071	LESLIE	21131	PENDLETON	21191
BELL	21013	FRANKLIN	21073	LETCHER	21133	PERRY	21193
BOONE	21015	FULTON	21075	LEWIS	21135	PIKE	21195
BOURBON	21017	GALLATIN	21077	LINCOLN	21137	POWELL	21197
BOYD	21019	GARRARD	21079	LIVINGSTON	21139	PULASKI	21199
BOYLE	21021	GRANT	21081	LOGAN	21141	ROBERTSON	21201
BRACKEN	21023	GRAVES	21083	LYON	21143	ROCKCASTLE	21203
BREATHITT	21025	GRAYSON	21085	MCCRACKEN	21145	ROWAN	21205
BRECKINRIDGE	21027	GREEN	21087	MCCREARY	21147	RUSSELL	21207
BULLITT	21029	GREENUP	21089	MCLEAN	21149	SCOTT	21209
BUTLER	21031	HANCOCK	21091	MADISON	21151	SHELBY	21211
CALDWELL	21033	HARDIN	21093	MAGOFFIN	21153	SIMPSON	21213
CALLOWAY	21035	HARLAN	21095	MARION	21155	SPENCER	21215
CAMPBELL	21037	HARRISON	21097	MARSHALL	21157	TAYLOR	21217
CARLISLE	21039	HART	21099	MARTIN	21159	TODD	21219
CARROLL	21041	HENDERSON	21101	MASON	21161	TRIGG	21221
CARTER	21043	HENRY	21103	MEADE	21163	TRIMBLE	21223
CASEY	21045	HICKMAN	21105	MENIFEE	21165	UNION	21225
CHRISTIAN	21047	HOPKINS	21107	MERCER	21167	WARREN	21227
CLARK	21049	JACKSON	21109	METCALFE	21169	WASHINGTON	21229
CLAY	21051	JEFFERSON	21111	MONROE	21171	WAYNE	21231
CLINTON	21053	JESSAMINE	21113	MONTGOMERY	21173	WEBSTER	21233
CRITTENDEN	21055	JOHNSON	21115	MORGAN	21175	WHITLEY	21235
CUMBERLAND	21057	KENTON	21117	MUHLENBERG	21177	WOLFE	21237
DAVISS	21059	KNOTT	21119	NELSON	21179	WOODFORD	21239

LOUISIANA (22000)							
ACADIA	22001	EAST BATON ROUGE	22033	MADISON	22065	SAINT LANDRY	22097
ALLEN	22003	EAST CARROLL	22035	MOREHOUSE	22067	SAINT MARTIN	22099
ASCENSION	22005	EAST FELICIANA	22037	NATCHITOCHE	22069	SAINT MARY	22101
ASSUMPTION	22007	EVANGELINE	22039	ORLEANS	22071	SAINT TAMMANY	22103
AVOUELLES	22009	FRANKLIN	22041	OUACHITA	22073	TANGIPAOHA	22105

BEAUREGARD	22011	GRANT	22043	PLAQUEMINES	22075	TENSAS	22107
BIENVILLE	22013	IBERIA	22045	POINTE COUPEE	22077	TERREBONNE	22109
LOUISIANA (22000) (Continued)							
BOSSER	22015	IBERVILLE	22047	RAPIDES	22079	UNION	22111
CADDO	22017	JACKSON	22049	RED RIVER	22081	VERMILION	22113
CALCASIEU	22019	JEFFERSON	22051	RICHLAND	22083	VERNON	22115
CALDWELL	22021	JEFFERSON DAVIS	22053	SABINE	22085	WASHINGTON	22117
CAMERON	22023	LAFAYETTE	22055	SAINT BERNARD	22087	WEBSTER	22119
CATAHOULA	22025	LAFOURCHE	22057	SAINT CHARLES	22089	WEST BATON ROUGE	22121
CLAIBORNE	22027	LA SALLE	22059	SAINT HELENA	22091	WEST CARROLL	22123
CONCORDIA	22029	LINCOLN	22061	SAINT JAMES	22093	WEST FELICIANA	22125
DE SOTO	22031	LIVINGSTON	22063	ST JOHN THE BAPTIST	22095	WINN	22127

MAINE (23000)							
ANDROSCOGGIN	23001	HANCOCK	23009	OXFORD	23017	SOMERSET	23025
AROOSTOOK	23003	KENNEBEC	23011	PENOBSCOT	23019	WALDO	23027
CUMBERLAND	23005	KNOX	23013	PISCATAQUIS	23021	WASHINGTON	23029
FRANKLIN	23007	LINCOLN	23015	SAGadahoc	23023	YORK	23031

MARYLAND (24000)							
ALLEGANY	24001	CARROLL	24013	HARFORD	24025	SAINT MARY'S	24037
ANNE ARUNDEL	24003	CECIL	24015	HOWARD	24027	SOMERSET	24039
BALTIMORE	24005	CHARLES	24017	KENT	24029	TALBOT	24041
BALTIMORE CITY	24510	DORCHESTER	24019	MONTGOMERY	24031	WASHINGTON	24043
CALVERT	24009	FREDERICK	24021	PRINCE GEORGE'S	24033	WICOMICO	24045
CAROLINE	24011	GARRETT	24023	QUEEN ANNE'S	24035	WORCESTER	24047

MASSACHUSETTS (25000)							
BARNSTABLE	25001	ESSEX	25009	MIDDLESEX	25017	SUFFOLK	25025
BERKSHIRE	25003	FRANKLIN	25011	NANTUCKET	25019	WORCESTER	25027
BRISTOL	25005	HAMPDEN	25013	NORFOLK	25021		
DUKES	25007	HAMPSHIRE	25015	PLYMOUTH	25023		

MICHIGAN (26000)							
ALCONA	26001	DICKINSON	26043	LAKE	26085	OCEANA	26127
ALGER	26003	EATON	26045	LAPEER	26087	OGEMAW	26129
ALLEGAN	26005	EMMET	26047	LEELANAU	26089	ONTONAGON	26131
ALPENA	26007	GENESEE	26049	LENAAWEE	26091	OSCEOLA	26133
ANTRIM	26009	GLADWIN	26051	LIVINGSTON	26093	OSCODA	26135
ARENAC	26011	GOGEBIC	26053	LUCE	26095	OTSEGO	26137
BARAGA	26013	GRAND TRAVERSE	26055	MACKINAC	26097	OTTAWA	26139
BARRY	26015	GRATIOT	26057	MACOMB	26099	PRESQUE ISLE	26141
BAY	26017	HILLSDALE	26059	MANISTEE	26101	ROSCOMMON	26143
BENZIE	26019	HOUGHTON	26061	MARQUETTE	26103	SAGINAW	26145
BERRIEN	26021	HURON	26063	MASON	26105	SAINT CLAIR	26147
BRANCH	26023	INGHAM	26065	MECOSTA	26107	SAINT JOSEPH	26149
CALHOUN	26025	IONIA	26067	MENOMINEE	26109	SANILAC	26151
CASS	26027	IOSCO	26069	MIDLAND	26111	SCHOOLCRAFT	26153
CHARLEVOIX	26029	IRON	26071	MISSAUKEE	26113	SHIAWASSEE	26155
CHEBOYGAN	26031	ISABELLA	26073	MONROE	26115	TUSCOLA	26157
CHIPPEWA	26033	JACKSON	26075	MONTCALM	26117	VAN BUREN	26159
CLARE	26035	KALAMAZOO	26077	MONTMORENCY	26119	WASHTENAW	26161
CLINTON	26037	KALKASKA	26079	MUSKEGON	26121	WAYNE	26163
CRAWFORD	26039	KENT	26081	NEWAYGO	26123	WEXFORD	26165
DELTA	26041	KEEWEENAW	26083	OAKLAND	26125		

MINNESOTA (27000)							
AITKIN	27001	FILLMORE	27045	MARSHALL	27089	ROCK	27133
ANOKA	27003	FREEBORN	27047	MARTIN	27091	ROSEAU	27135
BECKER	27005	GOODHUE	27049	MEEKER	27093	SAINT LOUIS	27137
BELTRAMI	27007	GRANT	27051	MILLE LACS	27095	SCOTT	27139
BENTON	27009	HENNEPIN	27053	MORRISON	27097	SHERBURNE	27141
BIG STONE	27011	HOUSTON	27055	MOWER	27099	SIBLEY	27143
BLUE EARTH	27013	HUBBARD	27057	MURRAY	27101	STEARNS	27145
BROWN	27015	ISANTI	27059	NICOLLET	27103	STEELE	27147
CARLTON	27017	ITASCA	27061	NOBLES	27105	STEVENS	27149
CARVER	27019	JACKSON	27063	NORMAN	27107	SWIFT	27151
CASS	27021	KANABEC	27065	OLMSTED	27109	TODD	27153
CHIPPEWA	27023	KANDIYOHI	27067	OTTER TAIL	27111	TRAVERSE	27155
CHISAGO	27025	KITTSON	27069	PENNINGTON	27113	WABASHA	27157
CLAY	27027	KOOCHICHING	27071	PIPE	27115	WADENA	27159
CLEARWATER	27029	LAC QUI PARLE	27073	PIPESTONE	27117	WASECA	27161
COOK	27031	LAKE	27075	POLK	27119	WASHINGTON	27163
COTTONWOOD	27033	LAKE OF THE WOODS	27077	POPE	27121	WATONWAN	27165
CROW WING	27035	LE SUEUR	27079	RAMSEY	27123	WILKIN	27167
DAKOTA	27037	LINCOLN	27081	RED LAKE	27125	WINONA	27169
DODGE	27039	LYON	27083	REDWOOD	27127	WRIGHT	27171
DOUGLAS	27041	MCLEOD	27085	RENVILLE	27129	YELLOW MEDICINE	27173
FARIBAULT	27043	MAHONOMEN	27087	RICE	27131		

MISSISSIPPI (28000)							
ADAMS	28001	GRENADA	28043	LINCOLN	28085	SIMPSON	28127
ALCORN	28003	HANCOCK	28045	LOWNDES	28087	SMITH	28129
AMITE	28005	HARRISON	28047	MADISON	28089	STONE	28131
ATTALA	28007	HINDS	28049	MARION	28091	SUNFLOWER	28133
BENTON	28009	HOLMES	28051	MARSHALL	28093	TALLAHATCHIE	28135
BOLIVAR	28011	HUMPHREYS	28053	MONROE	28095	TATE	28137
CALHOUN	28013	ISSAQUENA	28055	MONTGOMERY	28097	TIPPAH	28139
CARROLL	28015	ITAWAMBA	28057	NESHOBA	28099	TISHOMINGO	28141
CHICKASAW	28017	JACKSON	28059	NEWTON	28101	TUNICA	28143
CHOCTAW	28019	JASPER	28061	NOXUBEE	28103	UNION	28145
CLAIBORNE	28021	JEFFERSON	28063	OKTIBBEHA	28105	WALTHALL	28147
CLARKE	28023	JEFFERSON DAVIS	28065	PANOLA	28107	WARREN	28149
CLAY	28025	JONES	28067	PEARL RIVER	28109	WASHINGTON	28151
COAHOMA	28027	KEMPER	28069	PERRY	28111	WAYNE	28153
COPIAH	28029	LAFAYETTE	28071	PIKE	28113	WEBSTER	28155
COVINGTON	28031	LAMAR	28073	PONTOTOC	28115	WILKINSON	28157
DE SOTO	28033	LAUDERDALE	28075	PRENTISS	28117	WINSTON	28159
FORREST	28035	LAWRENCE	28077	QUITMAN	28119	YALOBUSHA	28161
FRANKLIN	28037	LEAKE	28079	RANKIN	28121	YAZOO	28163
GEORGE	28039	LEE	28081	SCOTT	28123		
GREENE	28041	LEFLORE	28083	SHARKEY	28125		

MISSOURI (29000)							
ADAIR	29001	DALLAS	29059	LIVINGSTON	29117	RANDOLPH	29175
ANDREW	29003	DAVISS	29061	MCDONALD	29119	RAY	29177
ATCHISON	29005	DE KALB	29063	MACON	29121	REYNOLDS	29179
AUDRAIN	29007	DENT	29065	MADISON	29123	RIPLEY	29181
BARRY	29009	DOUGLAS	29067	MARIES	29125	SAINT CHARLES	29183
BARTON	29011	DUNKLIN	29069	MARION	29127	SAINT CLAIR	29185
BATES	29013	FRANKLIN	29071	MERCER	29129	SAINT GENEVIEVE	29186
BENTON	29015	GASCONADE	29073	MILLER	29131	SAINT FRANCOIS	29187
BOLLINGER	29017	GENTRY	29075	MISSISSIPPI	29133	SAINT LOUIS	29189

MISSOURI (29000) (Continued)

BOONE	29019	GREENE	29077	MONITEAU	29135	SALINE	29195
BUCHANAN	29021	GRUNDY	29079	MONROE	29137	SCHUYLER	29197
BUTLER	29023	HARRISON	29081	MONTGOMERY	29139	SCOTLAND	29199
CALDWELL	29025	HENRY	29083	MORGAN	29141	SCOTT	29201
CALLAWAY	29027	HICKORY	29085	NEW MADRID	29143	SHANNON	29203
CAMDEN	29029	HOLT	29087	NEWTON	29145	SHELBY	29205
CAPE GIRARDEAU	29031	HOWARD	29089	NODAWAY	29147	STODDARD	29207
CARROLL	29033	HOWELL	29091	OREGON	29149	STONE	29209
CARTER	29035	IRON	29093	OSAGE	29151	SULLIVAN	29211
CASS	29037	JACKSON	29095	OZARK	29153	TANEY	29213
CEDAR	29039	JASPER	29097	PEMISCOT	29155	TEXAS	29215
CHARITON	29041	JEFFERSON	29099	PERRY	29157	VERNON	29217
CHRISTIAN	29043	JOHNSON	29101	PETTIS	29159	WARREN	29219
CLARK	29045	KNOX	29103	PHELPS	29161	WASHINGTON	29221
CLAY	29047	LACLEDE	29105	PIKE	29163	WAYNE	29223
CLINTON	29049	LAFAYETTE	29107	PLATTE	29165	WEBSTER	29225
COLE	29051	LAWRENCE	29109	POLK	29167	WORTH	29227
COOPER	29053	LEWIS	29111	PULASKI	29169	WRIGHT	29229
CRAWFORD	29055	LINCOLN	29113	PUTNAM	29171	SAINT LOUIS CITY	29510
DADE	29057	LINN	29115	RALLS	29173		

MONTANA (30000)

BEAVERHEAD	30001	GALLATIN	30031	MINERAL	30061	SHERIDAN	30091
BIG HORN	30003	GARFELD	30033	MISSOULA	30063	SILVER BOW	30093
BLAINE	30005	GLACIER	30035	MUSSELSHELL	30065	STILLWATER	30095
BROADWATER	30007	GOLDEN VALLEY	30037	PARK	30067	SWEET GRASS	30097
CARBON	30009	GRANITE	30039	PETROLEUM	30069	TETON	30099
CARTER	30011	HILL	30041	PHILLIPS	30071	TOOLE	30101
CASCADE	30013	JEFFERSON	30043	PONDERA	30073	TREASURE	30103
CHOUTEAU	30015	JUDITH BASIN	30045	POWDER RIVER	30075	VALLEY	30105
CUSTER	30017	LAKE	30047	POWELL	30077	WHEATLAND	30107
DANIELS	30019	LEWIS AND CLARK	30049	PRAIRIE	30079	WIBAUX	30109
DAWSON	30021	LIBERTY	30051	RAVALLI	30081	YELLOWSTONE	30111
DEER LODGE	30023	LINCOLN	30053	RICHLAND	30083	Y ['] STONE NAT'L PARK	30113
FALLON	30025	MCCONE	30055	ROOSEVELT	30085		
FERGUS	30027	MADISON	30057	ROSEBUD	30087		
FLATHEAD	30029	MEAGHER	30059	SANDERS	30089		

NEBRASKA (31000)

ADAMS	31001	DEUEL	31049	JOHNSON	31097	RED WILLOW	31145
ANTELOPE	31003	DIXON	31051	KEARNEY	31099	RICHARDSON	31147
ARTHUR	31005	DODGE	31053	KEITH	31101	ROCK	31149
BANNER	31007	DOUGLAS	31055	KEYA PAHA	31103	SALINE	31151
BLAINE	31009	DUNDY	31057	KIMBALL	31105	SARPY	31153
BOONE	31011	FILLMORE	31059	KNOX	31107	SAUNDERS	31155
BOX BUTTE	31013	FRANKLIN	31061	LANCASTER	31109	SCOTTS BLUFF	31157
BOYD	31015	FRONTIER	31063	LINCOLN	31111	SEWARD	31159
BROWN	31017	FURNAS	31065	LOGAN	31113	SHERIDAN	31161
BUFFALO	31019	GAGE	31067	LOUP	31115	SHERMAN	31163
BURT	31021	GARDEN	31069	MCPHERSON	31117	SIoux	31165
BUTLER	31023	GARFIELD	31071	MADISON	31119	STANTON	31167
CASS	31025	GOSPER	31073	MERRICK	31121	THAYER	31169
CEDAR	31027	GRANT	31075	MORRILL	31123	THOMAS	31171
CHASE	31029	GREELEY	31077	NANCE	31125	THURSTON	31173
CHERRY	31031	HALL	31079	NEMAHA	31127	VALLEY	31175
CHEYENNE	31033	HAMILTON	31081	NUCKOLLS	31129	WASHINGTON	31177

NEBRASKA (31000) (Continued)							
CLAY	31035	HARLAN	31083	OTOE	31131	WAYNE	31179
COLFAX	31037	HAYES	31085	PAWNEE	31133	WEBSTER	31181
CUMING	31039	HITCHCOCK	31087	PERKINS	31135	WHEELER	31183
CUSTER	31041	HOLT	31089	PHELPS	31137	YORK	31185
DAKOTA	31043	HOOKER	31091	PIERCE	31139		
DAWES	31045	HOWARD	31093	PLATTE	31141		
DAWSON	31047	JEFFERSON	31095	POLK	31143		

NEVADA (32000)							
CHURCHILL	32001	EUREKA	32011	MINERAL	32021	WHITE PINE	32033
CLARK	32003	HUMBOLDT	32013	NYE	32023	CARSON CITY	32510
DOUGLAS	32005	LANDER	32015	PERSHING	32027		
ELKO	32007	LINCOLN	32017	STOREY	32029		
ESMERALDA	32009	LYON	32019	WASHOE	32031		

NEW HAMPSHIRE (33000)							
BELKNAP	33001	COOS	33007	MERRIMACK	33013	SULLIVAN	33019
CARROLL	33003	GRAFTON	33009	ROCKINGHAM	33015		
CHESHIRE	33005	HILLSBOROUGH	33011	STRAFFORD	33017		

NEW JERSEY (34000)							
ATLANTIC	34001	ESSEX	34013	MONMOUTH	34025	SUSSEX	34037
BERGEN	34003	GLOUCESTER	34015	MORRIS	34027	UNION	34039
BURLINGTON	34005	HUDSON	34017	OCEAN	34029	WARREN	34041
CAMDEN	34007	HUNTERDON	34019	PASSAIC	34031		
CAPE MAY	34009	MERCER	34021	SALEM	34033		
CUMBERLAND	34011	MIDDLESEX	34023	SOMERSET	34035		

NEW MEXICO (35000)							
BERNALILLO	35001	EDDY	35015	LUNA	35029	SAN JUAN	35045
CATRON	35003	GRANT	35017	MCKINLEY	35031	SAN MIGUEL	35047
CHAVES	35005	GUADALUPE	35019	MORA	35033	SANTA FE	35049
CIBOLA	35006	HARDING	35021	OTERO	35035	SIERRA	35051
COLFAX	35007	HIDALGO	35023	QUAY	35037	SOCORRO	35053
CURRY	35009	LEA	35025	RIO ARRIBA	35039	TAOS	35055
DE BACA	35011	LINCOLN	35027	ROOSEVELT	35041	TORRANCE	35057
DONA ANA	35013	LOS ALAMOS	35028	SANDOVAL	35043	UNION	35059
VALENCIA	35061						

NEW YORK (36000)							
ALBANY	36001	FRANKLIN	36033	ONEIDA	36065	SCHUYLER	36097
ALLEGANY	36003	FULTON	36035	ONONDAGA	36067	SENECA	36099
BRONX	36005	GENESEE	36037	ONTARIO	36069	STEUBEN	36101
BROOME	36007	GREENE	36039	ORANGE	36071	SUFFOLK	36103
CATTARAUGUS	36009	HAMILTON	36041	ORLEANS	36073	SULLIVAN	36105
CAYUGA	36011	HERKIMER	36043	OSWEGO	36075	TIOGA	36107
CHAUTAQUA	36013	JEFFERSON	36045	OTSEGO	36077	TOMPKINS	36109
CHEMUNG	36015	KINGS	36047	PUTNAM	36079	ULSTER	36111
CHENANGO	36017	LEWIS	36049	QUEENS	36081	WARREN	36113
CLINTON	36019	LIVINGSTON	36051	RENSSELAER	36083	WASHINGTON	36115
COLUMBIA	36021	MADISON	36053	RICHMOND	36085	WAYNE	36117
CORTLAND	36023	MONROE	36055	ROCKLAND	36087	WESTCHESTER	36119
DELAWARE	36025	MONTGOMERY	36057	ST. LAWRENCE	36089	WYOMING	36121
DUTCHESS	36027	NASSAU	36059	SARATOGA	36091	YATES	36123
ERIE	36029	NEW YORK	36061	SCHENECTADY	36093		
ESSEX	36031	NIAGARA	36063	SCHOHARIE	36095		

NORTH CAROLINA (37000)							
ALAMANCE	37001	CUMBERLAND	37051	JOHNSTON	37101	RANDOLPH	37151
ALEXANDER	37003	CURRITUCK	37053	JONES	37103	RICHMOND	37153
ALLEGHANY	37005	DARE	37055	LEE	37105	ROBESON	37155
ANSON	37007	DAVIDSON	37057	LENOIR	37107	ROCKINGHAM	37157
ASHE	37009	DAVIE	37059	LINCOLN	37109	ROWAN	37159
AVERY	37011	DUPLIN	37061	MCDOWELL	37111	RUTHERFORD	37161
BEAUFORT	37013	DURHAM	37063	MACON	37113	SAMPSON	37163
BERTE	37015	EDGEcombe	37065	MADISON	37115	SCOTLAND	37165
BLADEN	37017	FORSYTH	37067	MARTIN	37117	STANLY	37167
BRUNSWICK	37019	FRANKLIN	37069	MECKLENBURG	37119	STOKES	37169
BUNCOMBE	37021	GASTON	37071	MITCHELL	37121	SURRY	37171
BURKE	37023	GATES	37073	MONTGOMERY	37123	SWAIN	37173
CABARRUS	37025	GRAHAM	37075	MOORE	37125	TRANSYLVANIA	37175
CALDWELL	37027	GRANVILLE	37077	NASH	37127	TYRRELL	37177
CAMDEN	37029	GREENE	37079	NEW HANOVER	37129	UNION	37179
CARTERET	37031	GUILFORD	37081	NORTHAMPTON	37131	VANCE	37181
CASWELL	37033	HALIFAX	37083	ONSLOW	37133	WAKE	37183
CATAWBA	37035	HARNETT	37085	ORANGE	37135	WARREN	37185
CHATHAM	37037	HAYWOOD	37087	PAMLICO	37137	WASHINGTON	37187
CHEROKEE	37039	HENDERSON	37089	PASQUOTANK	37139	WATAUGA	37189
CHOWAN	37041	HERTFORD	37091	PENDER	37141	WAYNE	37191
CLAY	37043	HOKE	37093	PERQUIMANS	37143	WILKES	37193
CLEVELAND	37045	HYDE	37095	PERSON	37145	WILSON	37195
COLUMBUS	37047	IREDELL	37097	PITT	37147	YADKIN	37197
CRAVEN	37049	JACKSON	37099	POLK	37149	YANCEY	37199

NORTH DAKOTA (38000)							
ADAMS	38001	CASS	38017	GOLDEN VALLEY	38033	MCHENRY	38049
BARNES	38003	CAVALIER	38019	GRAND FORKS	38035	MCINTOSH	38051
BENSON	38005	DICKEY	38021	GRANT	38037	MCKENZIE	38053
BILLINGS	38007	DIVIDE	38023	GRIGGS	38039	MCLEAN	38055
BOTTINEAU	38009	DUNN	38025	HETTINGER	38041	MERCER	38057
BOWMAN	38011	EDDY	38027	KIDDER	38043	MORTON	38059
BURKE	38013	EMMONS	38029	LA MOURE	38045	MOUNTRAIL	38061
BURLEIGH	38015	FOSTER	38031	LOGAN	38047	NELSON	38063
OLIVER	38065	RICHLAND	38077	STARK	38089	WARD	38101
PEMBINA	38067	ROLETTE	38079	STEELE	38091	WELLS	38103
PIERCE	38069	SARGENT	38081	STUTSMAN	38093	WILLIAMS	38105
RAMSEY	38071	SHERIDAN	38083	TOWNER	38095		
RANSOM	38073	SIOUX	38085	TRAILL	38097		
RENVILLE	38075	SLOPE	38087	WALSH	38099		

OHIO (39000)							
ADAMS	39001	FAIRFIELD	39045	LICKING	39089	PORTAGE	39133
ALLEN	39003	FAYETTE	39047	LOGAN	39091	PREBLE	39135
ASHLAND	39005	FRANKLIN	39049	LORAIN	39093	PUTNAM	39137
ASHTABULA	39007	FULTON	39051	LUCAS	39095	RICHLAND	39139
ATHENS	39009	GALLIA	39053	MADISON	39097	ROSS	39141
AUGLAIZE	39011	GEAUGA	39055	MAHONING	39099	SANDUSKY	39143
BELMONT	39013	GREENE	39057	MARION	39101	SCIOTO	39145
BROWN	39015	GUERNSEY	39059	MEDINA	39103	SENECA	39147
BUTLER	39017	HAMILTON	39061	MEIGS	39105	SHELBY	39149
CARROLL	39019	HANCOCK	39063	MERCER	39107	STARK	39151
CHAMPAIGN	39021	HARDIN	39065	MIAMI	39109	SUMMIT	39153
CLARK	39023	HARRISON	39067	MONROE	39111	TRUMBULL	39155
CLERMONT	39025	HENRY	39069	MONTGOMERY	39113	TUSCARAWAS	39157

CLINTON	39027	HIGHLAND	39071	MORGAN	39115	UNION	39159
OHIO (39000) (Continued)							
COLUMBIANA	39029	HOCKING	39073	MORROW	39117	VAN WERT	39161
COSHOCTON	39031	HOLMES	39075	MUSKINGUM	39119	VINTON	39163
CRAWFORD	39033	HURON	39077	NOBLE	39121	WARREN	39165
CUYAHOGA	39035	JACKSON	39079	OTTAWA	39123	WASHINGTON	39167
DARKE	39037	JEFFERSON	39081	PAULDING	39125	WAYNE	39169
DEFIANCE	39039	KNOX	39083	PERRY	39127	WILLIAMS	39171
DELAWARE	39041	LAKE	39085	PICKAWAY	39129	WOOD	39173
ERIE	39043	LAWRENCE	39087	PIKE	39131	WYANDOT	39175

OKLAHOMA (40000)							
ADAIR	40001	DELAWARE	40041	LINCOLN	40081	PITTSBURG	40121
ALFALFA	40003	DEWEY	40043	LOGAN	40083	PONTOTOC	40123
ATOKA	40005	ELLIS	40045	LOVE	40085	POTTAWATOMIE	40125
BEAVER	40007	GARFIELD	40047	MCCCLAIN	40087	PUSHMATAHA	40127
BECKHAM	40009	GARVIN	40049	MCCURTAIN	40089	ROGER MILLS	40129
BLAINE	40011	GRADY	40051	MCINTOSH	40091	ROGERS	40131
BRYAN	40013	GRANT	40053	MAJOR	40093	SEMINOLE	40133
CADDO	40015	GREER	40055	MARSHALL	40095	SEQUOYAH	40135
CANADIAN	40017	HARMON	40057	MAYES	40097	STEPHENS	40137
CARTER	40019	HARPER	40059	MURRAY	40099	TEXAS	40139
CHEROKEE	40021	HASKELL	40061	MUSKOGEE	40101	TILLMAN	40141
CHOCTAW	40023	HUGHES	40063	NOBLE	40103	TULSA	40143
CIMARRON	40025	JACKSON	40065	NOWATA	40105	WAGONER	40145
CLEVELAND	40027	JEFFERSON	40067	OKFUSKEE	40107	WASHINGTON	40147
COAL	40029	JOHNSTON	40069	OKLAHOMA	40109	WASHITA	40149
COMANCHE	40031	KAY	40071	OKMULGEE	40111	WOODS	40151
COTTON	40033	KINGFISHER	40073	OSAGE	40113	WOODWARD	40153
CRAIG	40035	KIOWA	40075	OTTAWA	40115		
CREEK	40037	LATIMER	40077	PAWNEE	40117		
CUSTER	40039	LE FLORE	40079	PAYNE	40119		

OREGON (41000)							
BAKER	41001	CLACKAMAS	41005	COLUMBIA	41009	CROOK	41013
BENTON	41003	CLATSOP	41007	COOS	41011	CURRY	41015
DESCHUTES	41017	JEFFERSON	41031	MALHEUR	41045	UMATILLA	41059
DOUGLAS	41019	JOSEPHINE	41033	MARION	41047	UNION	41061
GILLIAM	41021	KLAMATH	41035	MORROW	41049	WALLOWA	41063
GRANT	41023	LAKE	41037	MULTNOMAH	41051	WASCO	41065
HARNEY	41025	LANE	41039	POLK	41053	WASHINGTON	41067
HOOD RIVER	41027	LINCOLN	41041	SHERMAN	41055	WHEELER	41069
JACKSON	41029	LINN	41043	TILLAMOOK	41057	YAMHILL	41071

PENNSYLVANIA (42000)							
ADAMS	42001	CLINTON	42035	LACKAWANNA	42069	PIKE	42103
ALLEGHENY	42003	COLUMBIA	42037	LANCASTER	42071	POTTER	42105
ARMSTRONG	42005	CRAWFORD	42039	LAWRENCE	42073	SCHUYLKILL	42107
BEAVER	42007	CUMBERLAND	42041	LEBANON	42075	SNYDER	42109
BEDFORD	42009	DAUPHIN	42043	LEHIGH	42077	SOMERSET	42111
BERKS	42011	DELAWARE	42045	LUZERNE	42079	SULLIVAN	42113
BLAIR	42013	ELK	42047	LYCOMING	42081	SUSQUEHANNA	42115
BRADFORD	42015	ERIE	42049	MCKEAN	42083	TIOGA	42117
BUCKS	42017	FAYETTE	42051	MERCER	42085	UNION	42119
BUTLER	42019	FOREST	42053	MIFFLIN	42087	VENANGO	42121
CAMBRIA	42021	FRANKLIN	42055	MONROE	42089	WARREN	42123
CAMERON	42023	FULTON	42057	MONTGOMERY	42091	WASHINGTON	42125
CARBON	42025	GREENE	42059	MONTOUR	42093	WAYNE	42127

CENTRE	42027	HUNTINGDON	42061	NORTHAMPTON	42095	WESTMORELAND	42129
PENNSYLVANIA (42000) (Continued)							
CHESTER	42029	INDIANA	42063	NORTHUMBERLAND	42097	WYOMING	42131
CLARION	42031	JEFFERSON	42065	PERRY	42099	YORK	42133
CLEARFELD	42033	JUNIATA	42067	PHILADELPHIA	42101		

RHODE ISLAND (44000)							
BRISTOL	44001	NEWPORT	44005	WASHINGTON	44009		
KENT	44003	PROVIDENCE	44007				

SOUTH CAROLINA (45000)							
ABBEVILLE	45001	CHESTERFELD	45025	HAMPTON	45049	OCONEE	45073
AIKEN	45003	CLARENDON	45027	HORRY	45051	ORANGEBURG	45075
ALLENDALE	45005	COLLETON	45029	JASPER	45053	PICKENS	45077
ANDERSON	45007	DARLINGTON	45031	KERSHAW	45055	RICHLAND	45079
BAMBERG	45009	DILLON	45033	LANCASTER	45057	SALUDA	45081
BARNWELL	45011	DORCHESTER	45035	LAURENS	45059	SPARTANBURG	45083
BEAUFORT	45013	EDGEFIELD	45037	LEE	45061	SUMTER	45085
BERKELEY	45015	FAIRFELD	45039	LEXINGTON	45063	UNION	45087
CALHOUN	45017	FLORENCE	45041	MCCORMICK	45065	WILLIAMSBURG	45089
CHARLESTON	45019	GEORGETOWN	45043	MARION	45067	YORK	45091
CHEROKEE	45021	GREENVILLE	45045	MARLBORO	45069		
CHESTER	45023	GREENWOOD	45047	NEWBERRY	45071		

SOUTH DAKOTA (46000)							
AURORA	46003	CHARLES MIX	46023	EDMUNDS	46045	HUGHES	46065
BEADLE	46005	CLARK	46025	FALL RIVER	46047	HUTCHINSON	46067
BENNETT	46007	CLAY	46027	FAULK	46049	HYDE	46069
BON HOMME	46009	CORSON	46031	GRANT	46051	JACKSON	46071
BROOKINGS	46011	CUSTER	46033	GREGORY	46053	IERAULD	46073
BROWN	46013	DAVISON	46035	HAAKON	46055	JONES	46075
BRULE	46015	DAY	46037	HAMLIN	46057	KINGSBURY	46077
BUFFALO	46017	DEUEL	46039	HAND	46059	LAKE	46079
BUTTE	46019	DEWEY	46041	HANSON	46061	LAWRENCE	46081
CAMPBELL	46021	DOUGLAS	46043	HARDING	46063	LINCOLN	46083
LYMAN	46085	MINNEHAHA	46099	SHANNON	46113	UNION	46127
MCCOOK	46087	MOODY	46101	SPINK	46115	WALWORTH	46129
MCPHERSON	46089	PENNINGTON	46103	STANLEY	46117	YANKTON	46135
MARSHALL	46091	PERKINS	46105	SULLY	46119	ZIEBACH	46137
MEADE	46093	POTTER	46107	TODD	46121		
MELLETTE	46095	ROBERTS	46109	TRIPP	46123		
MINER	46097	SANBORN	46111	TURNER	46125		

TENNESSEE (47000)							
ANDERSON	47001	FENTRESS	47049	LAUDERDALE	47097	ROANE	47145
BEDFORD	47003	FRANKLIN	47051	LAWRENCE	47099	ROBERTSON	47147
BENTON	47005	GIBSON	47053	LEWIS	47101	RUTHERFORD	47149
BLED SOE	47007	GILES	47055	LINCOLN	47103	SCOTT	47151
BLOUNT	47009	GRAINGER	47057	LOUDON	47105	SEQUATCHIE	47153
BRADLEY	47011	GREENE	47059	MCMINN	47107	SEVIER	47155
CAMPBELL	47013	GRUNDY	47061	MCNAIRY	47109	SHELBY	47157
CANNON	47015	HAMBLEN	47063	MACON	47111	SMITH	47159
CARROLL	47017	HAMILTON	47065	MADISON	47113	STEWART	47161
CARTER	47019	HANCOCK	47067	MARION	47115	SULLIVAN	47163
CHEATHAM	47021	HARDEMAN	47069	MARSHALL	47117	SUMNER	47165
CHESTER	47023	HARDIN	47071	MAURY	47119	TIPTON	47167
CLAIBORNE	47025	HAWKINS	47073	MEIGS	47121	TROUSDALE	47169
CLAY	47027	HAYWOOD	47075	MONROE	47123	UNICOI	47171

COCKE	47029	HENDERSON	47077	MONTGOMERY	47125	UNION	47173
TENNESSEE (47000) (Continued)							
COFFEE	47031	HENRY	47079	MOORE	47127	VAN BUREN	47175
CROCKETT	47033	HICKMAN	47081	MORGAN	47129	WARREN	47177
CUMBERLAND	47035	HOUSTON	47083	OBION	47131	WASHINGTON	47179
DAVIDSON	47037	HUMPHREYS	47085	OVERTON	47133	WAYNE	47181
DECATUR	47039	JACKSON	47087	PERRY	47135	WEAKLEY	47183
DE KALB	47041	JEFFERSON	47089	PICKETT	47137	WHITE	47185
DICKSON	47043	JOHNSON	47091	POLK	47139	WILLIAMSON	47187
DYER	47045	KNOX	47093	PUTNAM	47141	WILSON	47189
FAYETTE	47047	LAKE	47095	RHEA	47143		

TEXAS (48000)							
ANDERSON	48001	CONCHO	48095	HALE	48189	LA SALLE	48283
ANDREWS	48003	COOKE	48097	HALL	48191	LAVACA	48285
ANGELINA	48005	CORYELL	48099	HAMILTON	48193	LEE	48287
ARANSAS	48007	COTTLE	48101	HANSFORD	48195	LEON	48289
ARCHER	48009	CRANE	48103	HARDEMAN	48197	LIBERTY	48291
ARMSTRONG	48011	CROCKETT	48105	HARDIN	48199	LIMESTONE	48293
ATASCOSA	48013	CROSBY	48107	HARRIS	48201	LIPSCOMB	48295
AUSTIN	48015	CULBERSON	48109	HARRISON	48203	LIVE OAK	48297
BAILEY	48017	DALLAM	48111	HARTLEY	48205	LLANO	48299
BANDERA	48019	DALLAS	48113	HASKELL	48207	LOVING	48301
BASTROP	48021	DAWSON	48115	HAYS	48209	LUBBOCK	48303
BAYLOR	48023	DEAF SMITH	48117	HEMPHILL	48211	LYNN	48305
BEE	48025	DELTA	48119	HENDERSON	48213	MCCULLOCH	48307
BELL	48027	DENTON	48121	HIDALGO	48215	MCLENNAN	48309
BEXAR	48029	DE WITT	48123	HILL	48217	MCMULLEN	48311
BLANCO	48031	DICKENS	48125	HOCKLEY	48219	MADISON	48313
BORDEN	48033	DIMITT	48127	HOOD	48221	MARION	48315
BOSQUE	48035	DONLEY	48129	HOPKINS	48223	MARTIN	48317
BOWE	48037	DUVAL	48131	HOUSTON	48225	MASON	48319
BRAZORIA	48039	EASTLAND	48133	HOWARD	48227	MATAGORDA	48321
BRAZOS	48041	ECTOR	48135	HUDSPETH	48229	MAVERICK	48323
BREWSTER	48043	EDWARDS	48137	HUNT	48231	MEDINA	48325
BRISCOE	48045	ELLIS	48139	HUTCHINSON	48233	MENARD	48327
BROOKS	48047	EL PASO	48141	IRION	48235	MIDLAND	48329
BROWN	48049	ERATH	48143	JACK	48237	MILAM	48331
BURLESON	48051	FALLS	48145	JACKSON	48239	MILLS	48333
BURNET	48053	FANNIN	48147	JASPER	48241	MITCHELL	48335
CALDWELL	48055	FAYETTE	48149	JEFF DAVIS	48243	MONTAGUE	48337
CALHOUN	48057	FISHER	48151	JEFFERSON	48245	MONTGOMERY	48339
CALLAHAN	48059	FLOYD	48153	JIM HOGG	48247	MOORE	48341
CAMERON	48061	FOARD	48155	JIM WELLS	48249	MORRIS	48343
CAMP	48063	FORT BEND	48157	JOHNSON	48251	MOTLEY	48345
CARSON	48065	FRANKLIN	48159	JONES	48253	NACOGDOCHES	48347
CASS	48067	FREESTONE	48161	KARNES	48255	NAVARRO	48349
CASTRO	48069	FRIO	48163	KAUFMAN	48257	NEWTON	48351
CHAMBERS	48071	GAINES	48165	KENDALL	48259	NOLAN	48353
CHEROKEE	48073	GALVESTON	48167	KENEDY	48261	NUECES	48355
CHILDRESS	48075	GARZA	48169	KENT	48263	OCHILTREE	48357
CLAY	48077	GILLESPE	48171	KERR	48265	OLDHAM	48359
COCHRAN	48079	GLASSCOCK	48173	KIMBLE	48267	ORANGE	48361
COKE	48081	GOLIAD	48175	KING	48269	PALO PINTO	48363
COLEMAN	48083	GONZALES	48177	KINNEY	48271	PANOLA	48365
COLLIN	48085	GRAY	48179	KLEBERG	48273	PARKER	48367
COLLINGSWORTH	48087	GRAYSON	48181	KNOX	48275	PARMER	48369
COLORADO	48089	GREGG	48183	LAMAR	48277	PECOS	48371
COMAL	48091	GRIMES	48185	LAMB	48279	POLK	48373

COMANCHE	48093	GUADALUPE	48187	LAMPASAS	48281	POTTER	48375
TEXAS (48000) (Continued)							
PRESIDIO	48377	SAN SABA	48411	TERRY	48445	WEBB	48479
RAINS	48379	SCHLEICHER	48413	THROCKMORTON	48447	WHARTON	48481
RANDALL	48381	SCURRY	48415	TITUS	48449	WHEELER	48483
REAGAN	48383	SHACKELFORD	48417	TOM GREEN	48451	WICHITA	48485
REAL	48385	SHELBY	48419	TRAVIS	48453	WILBARGER	48487
RED RIVER	48387	SHERMAN	48421	TRINITY	48455	WILLACY	48489
REEVES	48389	SMITH	48423	TYLER	48457	WILLIAMSON	48491
REFUGIO	48391	SOMERVELL	48425	UPSHUR	48459	WILSON	48493
ROBERTS	48393	STARR	48427	UPTON	48461	WINKLER	48495
ROBERTSON	48395	STEPHENS	48429	UVALDE	48463	WISE	48497
ROCKWALL	48397	STERLING	48431	VAL VERDE	48465	WOOD	48499
RUNNELS	48399	STONWALL	48433	VAN ZANDT	48467	YOAKUM	48501
RUSK	48401	SUTTON	48435	VICTORIA	48469	YOUNG	48503
SABINE	48403	SWISHER	48437	WALKER	48471	ZAPATA	48505
SAN AUGUSTINE	48405	TARRANT	48439	WALLER	48473	ZAVALA	48507
SAN JACINTO	48407	TAYLOR	48441	WARD	48475		
SAN PATRICIO	48409	TERRELL	48443	WASHINGTON	48477		

UTAH (49000)							
BEAVER	49001	GARFIELD	49017	RICH	49033	UTAH	49049
BOX ELDER	49003	GRAND	49019	SALT LAKE	49035	WASATCH	49051
CACHE	49005	IRON	49021	SAN JUAN	49037	WASHINGTON	49053
CARBON	49007	JUAB	49023	SANPETE	49039	WAYNE	49055
DAGGETT	49009	KANE	49025	SEVER	49041	WEBER	49057
DAVIS	49011	MILLARD	49027	SUMMIT	49043		
DUCHESNE	49013	MORGAN	49029	TOOELE	49045		
EMERY	49015	PIUTE	49031	UINTAH	49047		

VERMONT (50000)							
ADDISON	50001	CALEDONIA	50005	ESSEX	50009	GRAND ISLE	50013
BENNINGTON	50003	CHITTENDEN	50007	FRANKLIN	50011	LAMOILLE	50015
ORANGE	50017	RUTLAND	50021	WINDHAM	50025		
ORLEANS	50019	WASHINGTON	50023	WINDSOR	50027		

VIRGINIA (51000)							
ACCOMACK	51001	FAUQUIER	51061	MIDDLESEX	51119	TAZEWELL	51185
ALBEMARLE	51003	FLOYD	51063	MONTGOMERY	51121	WARREN	51187
ALLEGHANY	51005	FLUVANNA	51065	NELSON	51125	WASHINGTON	51191
AMELIA	51007	FRANKLIN	51067	NEW KENT	51127	WESTMORELAND	51193
AMEERST	51009	FREDERICK	51069	NORTHAMPTON	51131	WISE	51195
APPOMATTOX	51011	GILES	51071	NORTHUMBERLAND	51133	WYTHE	51197
ARLINGTON	51013	GLOUCESTER	51073	NOTTOWAY	51135	YORK	51199
AUGUSTA	51015	GOOCHLAND	51075	ORANGE	51137	ALEXANDRIA CITY	51510
BATH	51017	GRAYSON	51077	PAGE	51139	BEDFORD CITY	51515
BEDFORD	51019	GREENE	51079	PATRICK	51141	BRISTOL CITY	51520
BLAND	51021	GREENSVILLE	51081	PITTSYLVANIA	51143	BUENA VISTA CITY	51530
BOTETOURT	51023	HALIFAX	51083	POWHATAN	51145	CHARLOTTESVILLE CITY	51540
BRUNSWICK	51025	HANOVER	51085	PRINCE EDWARD	51147	CHESAPEAKE CITY	51550
BUCHANAN	51027	HENRICO	51087	PRINCE GEORGE	51149	CLIFTON FORGE CITY	51560
BUCKINGHAM	51029	HENRY	51089	PRINCE WILLIAM	51153	COLONIAL HEIGHTS CITY	51570
CAMPBELL	51031	HIGHLAND	51091	PULASKI	51155	COVINGTON CITY	51580
CAROLINE	51033	ISLE OF WIGHT	51093	RAPPAHANNOCK	51157	DANVILLE CITY	51590
CARROLL	51035	JAMES CITY	51095	RICHMOND	51159	EMPORIA CITY	51595
CHARLES CITY	51036	KING AND QUEEN	51097	ROANOKE	51161	FAIRFAX CITY	51600
CHARLOTTE	51037	KING GEORGE	51099	ROCKBRIDGE	51163	FALLS CHURCH CITY	51610

CHESTERFIELD	51041	KING WILLIAM	51101	ROCKINGHAM	51165	FRANKLIN CITY	51620
VIRGINIA (51000) (Continued)							
CLARKE	51043	LANCASTER	51103	RUSSELL	51167	FREDERICKSBURG CITY	51630
CRAIG	51045	LEE	51105	SCOTT	51169	GALAX CITY	51640
CULPEPER	51047	LOUDOUN	51107	SHENANDOAH	51171	HAMPTON CITY	51650
CUMBERLAND	51049	LOUISA	51109	SMYTH	51173	HARRISONBURG CITY	51660
DICKENSON	51051	LUNENBURG	51111	SOUTHAMPTON	51175	HOPEWELL CITY	51670
DINWIDDE	51053	MADISON	51113	SPOTSYLVANIA	51177	LEXINGTON CITY	51678
ESSEX	51057	MATLEWS	51115	STAFFORD	51179	LYNCHBURG CITY	51680
FAIRFAX	51059	MECKLENBURG	51117	SURRY	51181	SUFFOLK CITY	51800
MANASSAS CITY	51683	POQUOSON CITY	51735	RICHMOND CITY	51760	VIRGINIA BEACH CITY	51810
NEWPORT NEWS CITY	51700	PORTSMOUTH CITY	51740	ROANOKE CITY	51770	WAYNESBORO CITY	51820
NORFOLK CITY	51710	RADFORD CITY	51750	SALEM CITY	51775	WILLIAMSBURG CITY	51830
NORTON CITY	51720	MANASSAS PARK CITY	51685	STAUNTON CITY	51790	WINCHESTER CITY	51840
PETERSBURG CITY	51730	MARTINSVILLE CITY	51690	SUSSEX	51183		

WASHINGTON (53000)							
ADAMS	53001	FRANKLIN	53021	LEWIS	53041	SNOHOMISH	53061
ASOTIN	53003	GARFIELD	53023	LINCOLN	53043	SPOKANE	53063
BENTON	53005	GRANT	53025	MASON	53045	STEVENS	53065
CHELAN	53007	GRAYS HARBOR	53027	OKANOGAN	53047	THURSTON	53067
CLALLAM	53009	ISLAND	53029	PACIFIC	53049	WAHKIAKUM	53069
CLARK	53011	JEFFERSON	53031	PEND OREILLE	53051	WALLA WALLA	53071
COLUMBIA	53013	KING	53033	PIERCE	53053	WHATCOM	53073
COWLITZ	53015	KITSAP	53035	SAN JUAN	53055	WHITMAN	53075
DOUGLAS	53017	KITTITAS	53037	SKAGIT	53057	YAKIMA	53077
FERRY	53019	KLICKITAT	53039	SKAMANIA	53059		

WEST VIRGINIA (54000)							
BARBOUR	54001	HANCOCK	54029	MINERAL	54057	RITCHE	54085
BERKELEY	54003	HARDY	54031	MINGO	54059	ROANE	54087
BOONE	54005	HARRISON	54033	MONONGALIA	54061	SUMMERS	54089
BRAXTON	54007	JACKSON	54035	MONROE	54063	TAYLOR	54091
BROOKE	54009	JEFFERSON	54037	MORGAN	54065	TUCKER	54093
CABELL	54011	KANAWHA	54039	NICHOLAS	54067	TYLER	54095
CALHOUN	54013	LEWIS	54041	OHIO	54069	UPSHUR	54097
CLAY	54015	LINCOLN	54043	PENDLETON	54071	WAYNE	54099
DODDRIDGE	54017	LOGAN	54045	PLEASANTS	54073	WEBSTER	54101
FAYETTE	54019	MCDOWELL	54047	POCAHONTAS	54075	WETZEL	54103
GILMER	54021	MARION	54049	PRESTON	54077	WIRT	54105
GRANT	54023	MARSHALL	54051	PUTNAM	54079	WOOD	54107
GREENBRIER	54025	MASON	54053	RALEIGH	54081	WYOMING	54109
HAMPSHIRE	54027	MERCER	54055	RANDOLPH	54083		

WISCONSIN (55000)							
ADAMS	55001	FLORENCE	55037	MARATHON	55073	RUSK	55107
ASHLAND	55003	FOND DU LAC	55039	MARINETTE	55075	SAINT CROIX	55109
BARRON	55005	FOREST	55041	MARQUETTE	55077	SAUK	55111
BAYFELD	55007	GRANT	55043	MENOMINEE	55078	SAWYER	55113
BROWN	55009	GREEN	55045	MILWAUKEE	55079	SHAWANO	55115
BUFFALO	55011	GREEN LAKE	55047	MONROE	55081	SHEBOYGAN	55117
BURNETT	55013	IOWA	55049	OCONTO	55083	TAYLOR	55119
CALUMET	55015	IRON	55051	ONEIDA	55085	TREMPEALEAU	55121
CHIPPEWA	55017	JACKSON	55053	OUTAGAMIE	55087	VERNON	55123

CLARK	55019	JEFFERSON	55055	OZAUKEE	55089	VILAS	55125
COLUMBIA	55021	JUNEAU	55057	PEPIN	55091	WALWORTH	55127

WISCONSIN (55000) (Continued)

CRAWFORD	55023	KENOSHA	55059	PIERCE	55093	WASHBURN	55129
DANE	55025	KEWAUNEE	55061	POLK	55095	WASHINGTON	55131
DODGE	55027	LA CROSSE	55063	PORTAGE	55097	WAUKESHA	55133
DOOR	55029	LAFAYETTE	55065	PRICE	55099	WAUPACA	55135
DOUGLAS	55031	LANGLADE	55067	RACINE	55101	WAUSHARA	55137
DUNN	55033	LINCOLN	55069	RICHLAND	55103	WINNEBAGO	55139
EAU CLAIRE	55035	MANITOWOC	55071	ROCK	55105	WOOD	55141

WYOMING (56000)

ALBANY	56001	FREMONT	56013	NATRONA	56025	SWEETWATER	56037
BIG HORN	56003	GOSHEN	56015	NIOBRARA	56027	TETON	56039
CAMPBELL	56005	HOT SPRINGS	56017	PARK	56029	UINTA	56041
CARBON	56007	JOHNSON	56019	PLAITE	56031	WASHAKIE	56043
CONVERSE	56009	LARAMIE	56021	SHERIDAN	56033	WESTON	56045
CROOK	56011	LINCOLN	56023	SUBLETTE	56035		

APPENDIX C
PART B - U. S. TERRITORIES FIPS CODES

AMERICAN SAMOA (60000)							
EASTERN	60010	MANUA	60020	ROSE ISLAND	60030	SWAINS ISLAND	60040
WESTERN	60050						

FEDERATED STATES OF MICRONESIA (64000)							
CHUUK	64002	KOSRAE	64005	POHNPEI	64040	YAP	64060

GUAM 66000							
GUAM	66010						

MARSHALL ISLANDS (68000)							
AILINGINAE	68007	ENEWETAK	68090	LIKIEP	68180	TOKE	68385
AILINGLAPLAP	68010	ERIKUB	68100	MAJURO	68190	UJAE	68390
AILUK	68030	JABAT	68110	MALOELAP	68300	UJELANG	68400
ARNO	68040	JALUIT	68120	MEJIT	68310	UTRIK	68410
AUR	68050	JEMO	68130	MILI	68320	WOTHO	68420
BIKAR	68060	KILI	68140	NAMORIK	68330	WOTJE	68430
BIKINI	68070	KWAJALEIN	68150	NAMU	68340		
BOKAK	68073	LAE	68160	RONGELAP	68350		
EBON	68080	LIB	68170	RONGRIK	68360		

NORTHERN MARIANA ISLANDS (69000)							
NORTHERN ISLAND	69085	ROTA	69100	SAIPAN	69110	TINIAN	69120

PALAU (70000)							
AIMELIIK	70002	KAYANGEL	70100	NGARCHELONG	70218	NGEREMLENGUI	70227
AIRAI	70004	KOROR	70150	NGARDMAU	70222	NGIWAL	70228
ANGAUR	70010	MELEKEOK	70212	NGATPANG	70224	PELELIU	70350
HATOBOHEI	70050	NGARAARD	70214	NGCHESAR	70226	SONSOROL	70370

PUERTO RICO (72000)							
ADJUNTAS	72001	CIDRA	72041	LAJAS	72079	RIO GRANDE	72119
AGUADA	72003	COAMO	72043	LAJES	72081	SABANA GRANDE	72121
AGUADILLA	72005	COMERIO	72045	LAS MARIAS	72083	SALINAS	72123
AGUAS BUENAS	72007	COROZAL	72047	LAS PEDRAS	72085	SAN GERMAN	72125
AIBONITO	72009	CULEBRA	72049	LOIZA	72087	SAN JUAN	72127
ANASCO	72011	DORADO	72051	LUQUILLO	72089	SAN LORENZO	72129
ARECIBO	72013	FAJARDO	72053	MANATI	72091	SAN SEBASTIAN	72131
ARROYO	72015	FLORIDA	72054	MARICAO	72093	SANTA ISABEL	72133
BARCELONETA	72017	GUANICA	72055	MAUNABO	72095	TOA ALTA	72135
BARRANQUITAS	72019	GUAYAMA	72057	MAYAGUEZ	72097	TOA BAJA	72137
BAYAMON	72021	GUAYANILLA	72059	MOCA	72099	TRUJILLO ALTO	72139
CABO ROIO	72023	GUAYNABO	72061	MOROVIS	72101	UTUADO	72141
CAGUAS	72025	GURABO	72063	NAGUABO	72103	VEGA ALTA	72143
CAMUY	72027	HATILLO	72065	NARANJITO	72105	VEGA BAJA	72145
CANOVANAS	72029	HORMIGUEROS	72067	OROCOVIS	72107	VIEQUES	72147
CAROLINA	72031	HUMACAO	72069	PATILLAS	72109	VILLALBA	72149
CATANO	72033	ISABELA	72071	PENUELAS	72111	YABUCOA	72151
CAYEY	72035	JAYUYA	72073	PONCE	72113	YAUCO	72153
CEIOA	72037	JUANA DIAZ	72075	QUEBRADILLAS	72115		
CIALES	72039	JUNCOS	72077	RINCON	72117		

U.S. MINOR OUTLYING ISLANDS (74000)							
BAKER ISLAND	74050	JOHNSTON ISLAND	74200	NAVASSA ISLAND	74350		
HOWLAND ISLAND	74100	KINGMAN REEF	74250	PALMYRA ATOLL	74400		
JARVIS ISLAND	74150	MIDWAY ISLANDS	74300	WAKE ISLAND	74450		

VIRGIN ISLANDS OF THE UNITED STATES (78000)							
ST. CROIX	78010	ST. JOHN	78020	ST. THOMAS	78030		

PART C - U. S. OFFSHORE (MARINE AREAS) FIPS CODES

OFFSHORE (MARINE AREAS)	
EASTERN NORTH PACIFIC OCEAN, AND ALONG U.S. WEST COAST FROM CANADIAN BORDER TO MEXICAN BORDER	57000
NORTH PACIFIC OCEAN NEAR ALASKA, AND ALONG ALASKA COASTLINE, INCLUDING THE BERING SEA AND THE GULF OF ALASKA	58000
CENTRAL PACIFIC OCEAN, INCLUDING HAWAIIAN WATERS	59000
SOUTH CENTRAL PACIFIC OCEAN, INCLUDING AMERICAN SAMOA WATERS	61000
WESTERN PACIFIC OCEAN, INCLUDING MARIANA ISLAND WATERS	65000
WESTERN NORTH ATLANTIC OCEAN, AND ALONG U.S. EAST COAST, FROM CANADIAN BORDER SOUTH TO CURRITUCK BEACH LIGHT, N.C.	73000
WESTERN NORTH ATLANTIC OCEAN, AND ALONG U.S. EAST COAST, SOUTH OF CURRITUCK BEACH LIGHT, N.C., FOLLOWING THE COASTLINE INTO GULF OF MEXICO TO BONITA BEACH, FL., INCLUDING THE CARIBBEAN GULF OF MEXICO, AND ALONG THE U.S. GULF COAST FROM THE MEXICAN BORDER TO BONITA BEACH, FL.	75000
LAKE SUPERIOR	91000
LAKE MICHIGAN	92000
LAKE HURON	93000
LAKE ST. CLAIR	94000
LAKE ERIE	96000
LAKE ONTARIO	97000
ST. LAWRENCE RIVER ABOVE ST REGIS	98000

APPENDIX D

MENU LISTINGS

EAS911+ Setup Menu

1. Set Current Date/Time	17. Set Remote Sign Protocol
2. Set Station Time Zone	18. Enable Char Gen Interface
3. Daylight Saving?	19. Remote Interface Definition
4. Set Station ORG Code	20. Set LCD Contrast
5. Set Station FIPS Code	21. Record Voice Announcement
6. Set Station Identification Code	22. Verify Voice Announcement
7. Set Attention Signal Duration	23. Enable Remote Control/Status Module Interface
8. Change Primary Password	24. Set One-Button Weekly Test Option
9. Change Setup Password	25. Set Alert Timeout
10. Select Events to Auto Forward	26. Set One-Button Manual Forward
11. Add Locations to Auto Forward	27. Enable C.G. Text For RWT
12. Verify or Delete Locations to Auto Forward	28. Set Auto Mode Timer
13. Assign, Change or Verify Encoder Event Keys	29. Record Alert Voice Message
14. Assign or Re-assign Encoder Location Keys	30. Verify Alert Voice Message
15. Verify/Edit Encoder Location Key Assignment	31. Set Random Required Weekly Test
16. Enable Internal Voice Recorder	32. Set Transmit Delay Time

EAS911+ Operation Menu

1. Review Received Messages
2. Review Transmitted Messages
3. Test On-Air Relay
4. Test Alert Relay
5. Set Output Level: On-Air Relay Open
6. Set Output Level: On-Air Relay Closed
7. Set Printer Operation
8. Set Message Hold
9. Mark/Space Calibration

EAS911+ Help Menu

10. Password Help	50. Encoder Setup Help
101. Access to Encoder	501. To Set Current Date/Time
102. Access to Setup Menu	502. To Set Station Time Zone
103. To Change Passwords	503. Daylight Saving?
104. Password Lost	504. To Set Station Originator Code
20. Encoder Operation Help	505. To Set Station FIPS Code
201. To Originate Weekly Test	506. To Set Station Identification Code
202. To Originate Monthly Test	507. To Set Attention Signal Duration
203. To Originate an Alert	508. To Assign, Change or Verify Encoder Event Keys
204. To Encode an Event	509. To Assign or Re-assign Encoder Location Keys
205. To Encode Locations	510. To Verify Encoder Location Key Assignment
206. To Encode Event Duration	60. Decoder Setup Help
207. To Practice Encoding	601. To Select Events to Auto Forward
208. To Send Header	602. To Add Locations to Auto Forward
209. To Review Transmit Message Log	603. To Verify or Delete Locations to Auto Forward
210. To Test On-Air Relay	70. Accessory Setup Help
30. Decoder Operation Help	701. To Enable Character Generator Interface
301. To Acknowledge a New Message	702. Voice Recorder Status
302. To Change Between Automatic and Manual Mode	703. To Set Electronic Sign Protocol
303. To Manual Forward a Message	704. Record Voice Announcement
304. To Review Received Message Log	705. To Verify Voice Announcement
40. Audio/Printer Operation Help	706. To Enable CPU Interface
401. To Set Output Level On-Air	707. To Install Program Interrupt Unit
402. To Set Output Level Off-Air	708. To Enable Remote Control Status Modules
403. Speaker Volume Adjustment	80. Maintenance and Technical Support Help
404. To Print Screen	801. To Replace Printer Paper
	803. TFT Customer Service

**APPENDIX E
(NOT USED)**

**APPENDIX F
ORIGINATOR AND EVENT CODE TRANSLATIONS**

Originator codes:

ORG. Code	English Translation
EAS	Broadcast Station or Cable System
EAN	National Emergency Action Notification Network
CIV	Civil Authority
WXR	The National Weather Service
PEP	Primary Entry Point

Event Code	English Translation	EAS 943 Event Code No.
EAN	National Emergency Action Notification	N/A
EAT	National Emergency Action Termination	N/A
NIC	National Information Center Message	N/A
NPT	National Periodic Test	N/A
ADR	Administrative Message	1
AVA	Avalanche Watch	2
AVW	Avalanche Warning	3
BZW	Blizzard Warning	4
CAE	Child Abduction Emergency	5
CDW	Civil Danger Warning	6
CEM	Civil Emergency Message	7
CFA	Coastal Flood Watch	8
CFW	Coastal Flood Warning	9
DSW	Dust Storm Warning	10
EQW	Earthquake Warning	11
EVI	Immediate Evacuation Notice	12
FRW	Fire Warning	13
FFA	Flash Flood Watch	14
FFW	Flash Flood Warning	15
FFS	Flash Flood Statement	16
FLA	Flood Watch	17
FLW	Flood Warning	18
FLS	Flood Statement	19
HMW	Hazardous Materials Warning	20
HWA	High Wind Watch	21
HWW	High Wind Warning	22

Event Code	English Translation	EAS 943 Event Code No.
HUA	Hurricane Watch	23
HUW	Hurricane Warning	24
HLS	Hurricane Statement	25
LEW	Law Enforcement Warning	26
LAE	Local Area Emergency	27
NMN	Network Message Notification	28
TOE	911 Telephone Outage Emergency	29
NUW	Nuclear Power Plant Warning	30
DMO	Practice/Demo Warning	31
RHW	Radiological Hazard Warning	32
RMT	Required Monthly Test	33
RWT	Required Weekly Test	34
SVA	Severe Thunderstorm Watch	35
SVR	Severe Weather Warning	36
SVS	Severe Weather Statement	37
SPW	Shelter in Place Warning	38
SMW	Special Marine Warning	39
SPS	Special Weather Statement	40
TOA	Tornado Watch	41
TOR	Tornado Warning	42
TRA	Tropical Storm Watch	43
TRW	Tropical Storm Warning	44
TSA	Tsunami Watch	45
TSW	Tsunami Warning	46
VOW	Volcano Warning	47
WSA	Winter Storm Watch	48
WSW	Winter Storm Warning	49

APPENDIX G
GLOSSARY OF EAS911+ TERMS

TERM	EXPLANATION
Attention Signal	The former two-tone EBS signal of 853 Hz and 960 Hz.
Auto Forward	The act of automatically retransmitting or relaying an EAS message without operator intervention whenever the EAS911+ is set to Auto Mode and the EVENT and FIPS codes of a valid received message match those Events and FIPS codes set by the setup menu for Auto Forwarding.
Banner Mode	The normal, standby condition of the EAS911+ in which the date and time are displayed in the LCD screen.
COM port	Communications Port, or connector, on the rear panel of the EAS911+, which connects and enables various external devices
Duration	The valid time period of an EAS event, e.g. "A tornado watch for the next 3 hours." In this case, "3 hours" is the duration.
EAS	Emergency Alert System or the originator field code for a broadcast station or cable system in an EAS message
EOM	End-of-Message; the FSK signal ("nnnn") sent at the end of an EAS message
FIPS	Federal Information Processing Identifier, a unique five-digit number for every county, parish, borough, or census district in the US and its possessions
Header	The fields of the EAS protocol: sync, ORG, EVENT, LOCATION (FIPSs), Duration, Date/Time Stamp, and Station ID; the FSK signal that consists of the header
LCD	Liquid Crystal Display
Mode	The state of operation of the EAS911+, i.e. Manual Forward Mode or Automatic Forward Mode
NOAA	National Oceanographic and Atmospheric Administration, a branch of the Commerce Department
ORG	Originator, field in an EAS message, e.g. WXR-National Weather Service, CIV-Civil Authority
Password	The 3-digit number that must be entered after pressing the "PASSWORD" key to gain operator or setup access to the EAS911+
PCB	Printed Circuit Board
Primary Password	The 3-digit code used by the station operator.
Ready Mode	(same as Banner Mode)
RS-485	An EIA electrical interface standard that is used for connections between the EAS911+ and an EAS 941A Remote Control/Status Module
Setup Password	The 3-digit code used by the station owner/manager/engineer to setup and change the basic operation of the EAS911+
Station ID	The call sign of the broadcast station at which this EAS911+ is located, e.g. "KTFT/AM"; the cable system identifier, e.g. "CA0233 ".
Subdivision	One-ninth parts of a county, parish, borough, or census district or US possession
SAME	Specific Area Message Encoding